



Asus Chromebook C300MA-DB01 Mouse Pad Replacement

This guide will show you how to remove and replace the mouse pad from your device.

Written By: wyatt boyatt



INTRODUCTION

If you are having trouble with your mouse pad picking up inputs than this guide could be useful. This process is easy just be careful when prying or removing wires to avoid damage.

TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

PARTS:

- [Asus Chromebook C300MA DB01 Keyboard \(1\)](#)

Step 1 — Back Cover



- Place device bottom-side up.

Step 2



- Remove the eight 9.0 mm Philips screws along the perimeter of the case.
- Remove the three 6.0 mm Philips screws from the center of the case.

Step 3




- Using a plastic opening tool, separate the bottom case at the steam.

Step 4



- Open the Chromebook at hinges.

Step 5 — Mouse pad

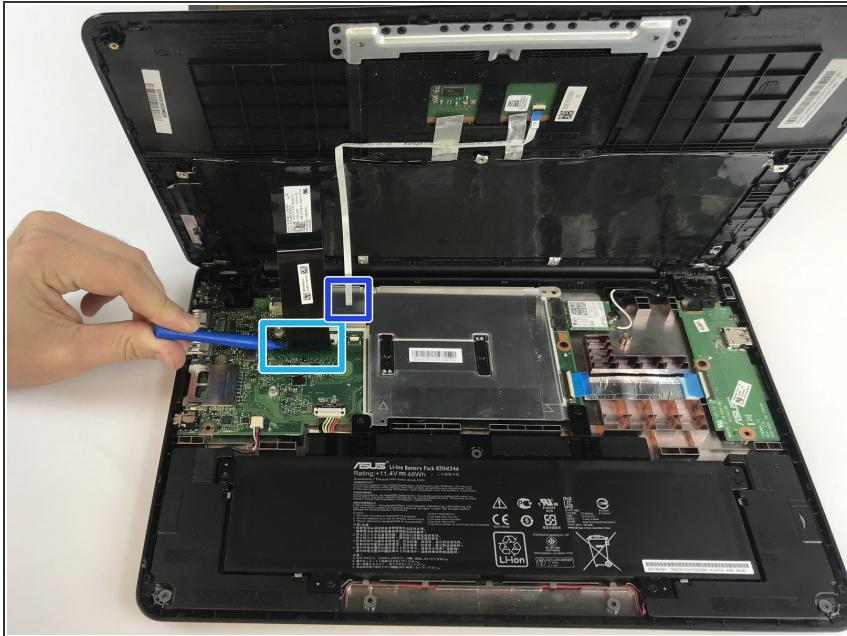

- Use plastic opening tool to pry open clip holding keyboard wires to the circuit board.
- Use plastic opening tool to pry open clip holding mouse pad wires to circuit board.

Step 6



- Lift and remove keyboard from device. The keyboard and Mouse pad are one part that must be replaced simultaneously.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-05 06:02:46 PM (MST).

