



Asus Chromebook C300MA-DB01 Speaker Replacement

This guide will show you how to remove and replace and the speakers of your device.

Written By: wyatt boyatt



INTRODUCTION

If you are having trouble with audio output on your device this guide can be useful. Be careful when unplugging wires as to not damage them.

TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

PARTS:

- [Asus Chromebook C300MA DB01 Speakers \(1\)](#)

Step 1 — Back Cover



- Place device bottom-side up.

Step 2



- Remove the eight 9.0 mm Philips screws along the perimeter of the case.
- Remove the three 6.0 mm Philips screws from the center of the case.

Step 3




- Using a plastic opening tool, separate the bottom case at the steam.

Step 4




- Open the Chromebook at hinges.

Step 5 — Battery

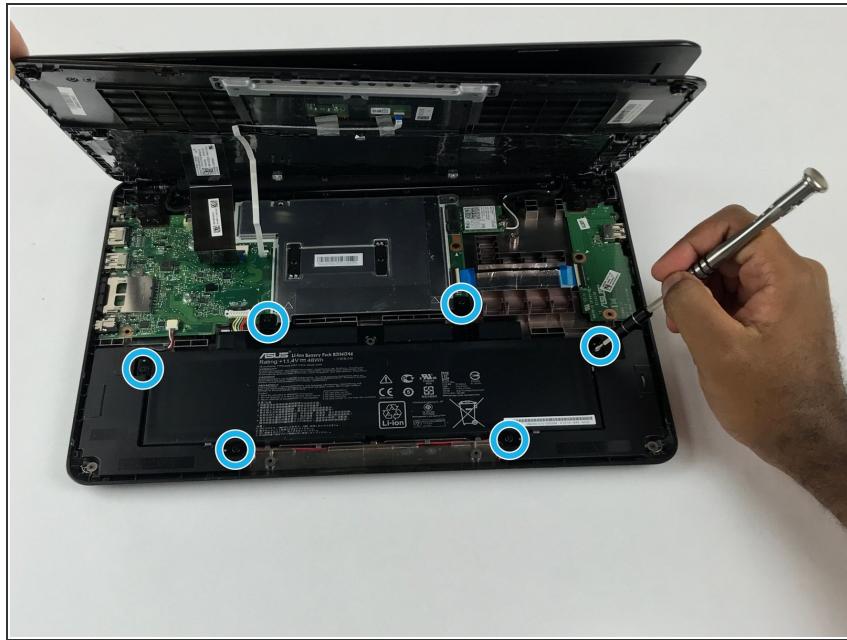

- Remove the 6 6.0mm Philips screws, using the 64 bit driver from around the battery.

Step 6

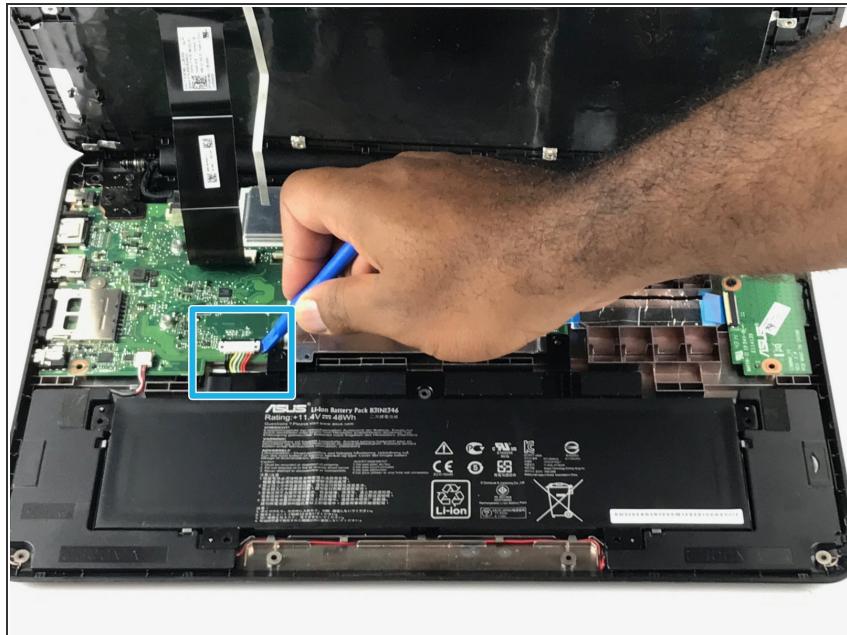

- Unplug wire using the plastic opening tool that connects battery with board

Step 7




- Lift the battery out of the laptop

Step 8 — Speakers




- Use plastic opening tool to pry off the wire connecting the left side speaker to the circuit board.

Step 9

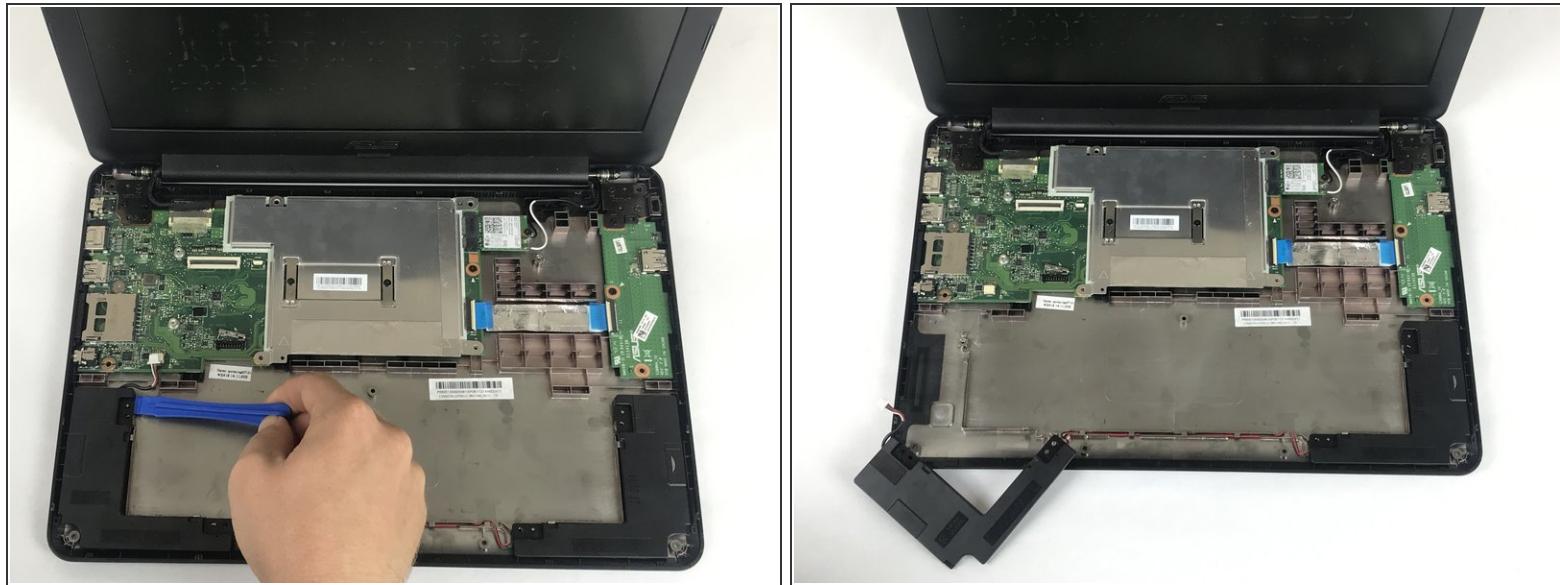

- Use plastic opening tool to pry off the left side speaker.

Step 10

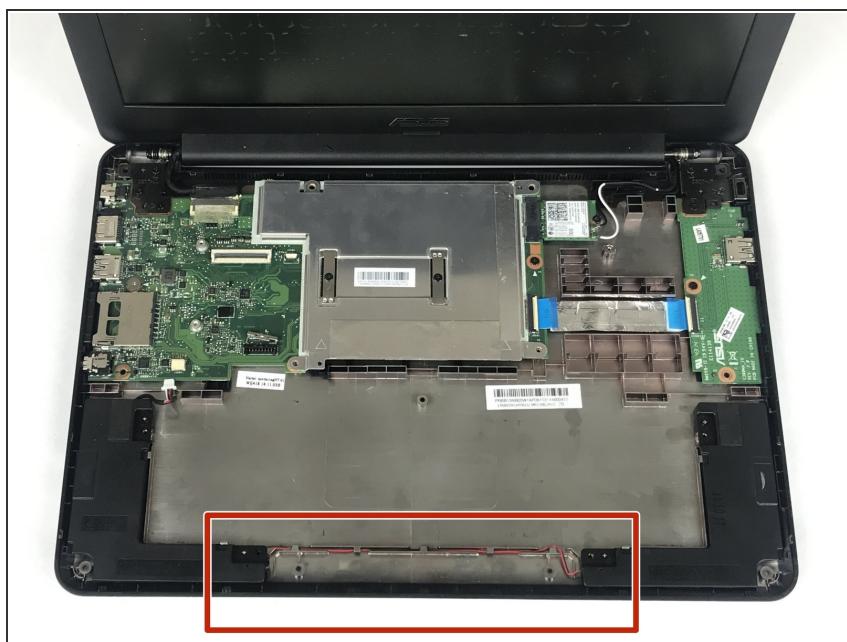


 Gently remove the wire connecting the left and right speakers from its channel. Be careful as to not tear or damage the wire.

Step 11



- Use plastic opening tool to pry off right side speaker.

Step 12

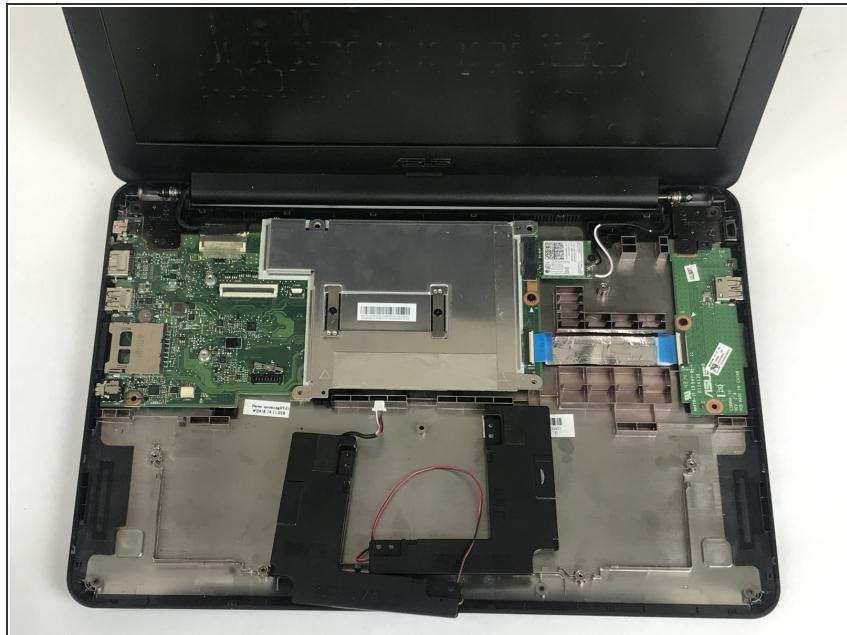

- Lift and remove both speakers and connecting wire.

To reassemble your device, follow these instructions in reverse order.