



Asus Chromebook C300MA-DH02 Keyboard Panel Replacement

This guide will briefly take you through the steps necessary to remove the keyboard panel of an Asus Chromebook C300MA-DH02.

Written By: Juan Pericas



This document was generated on 2019-09-23 05:28:47 AM (MST).

INTRODUCTION

For this model computer removing the keyboard panel is always going to be the first step because it is the only way to access all the key parts.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Keyboard Panel




- Flip the Chromebook over so that the underside is facing up.
- Using the Phillips PH #000 screwdriver, remove the 11 "4mm" screws on the back of the device.

Step 2



- Wedge the plastic opening tool between the bottom cover of the laptop and the keyboard panel.
- Apply pressure and move the plastic opening tool around the border of the laptop until it pops out.

Step 3

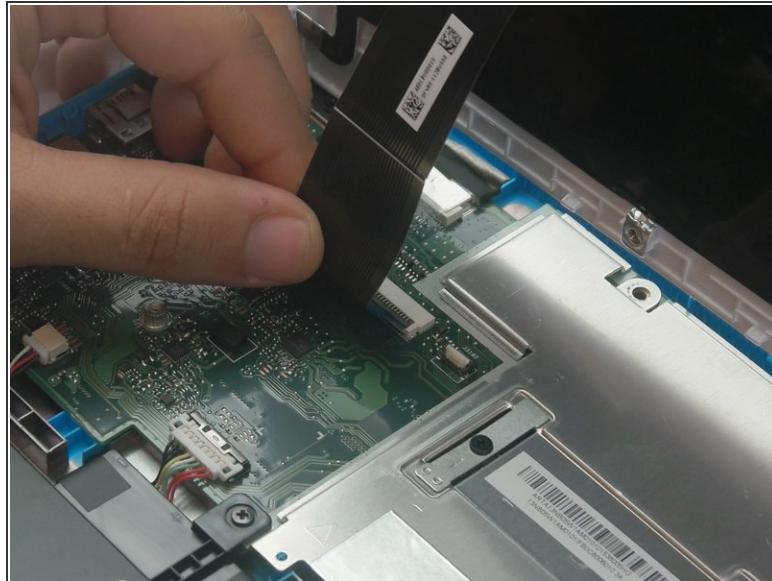

- Once the keyboard panel pops out, slowly move it upwards so that the keyboard connection is visible.
- Remove the keyboard connection from the motherboard by pulling it outwards from the connector.

To reassemble your device, follow these instructions in reverse order.