




Asus Chromebook C523N Back Cover Replacement

How to remove the back cover of the Asus Chromebook C523N.

Written By: Aaron Hogan

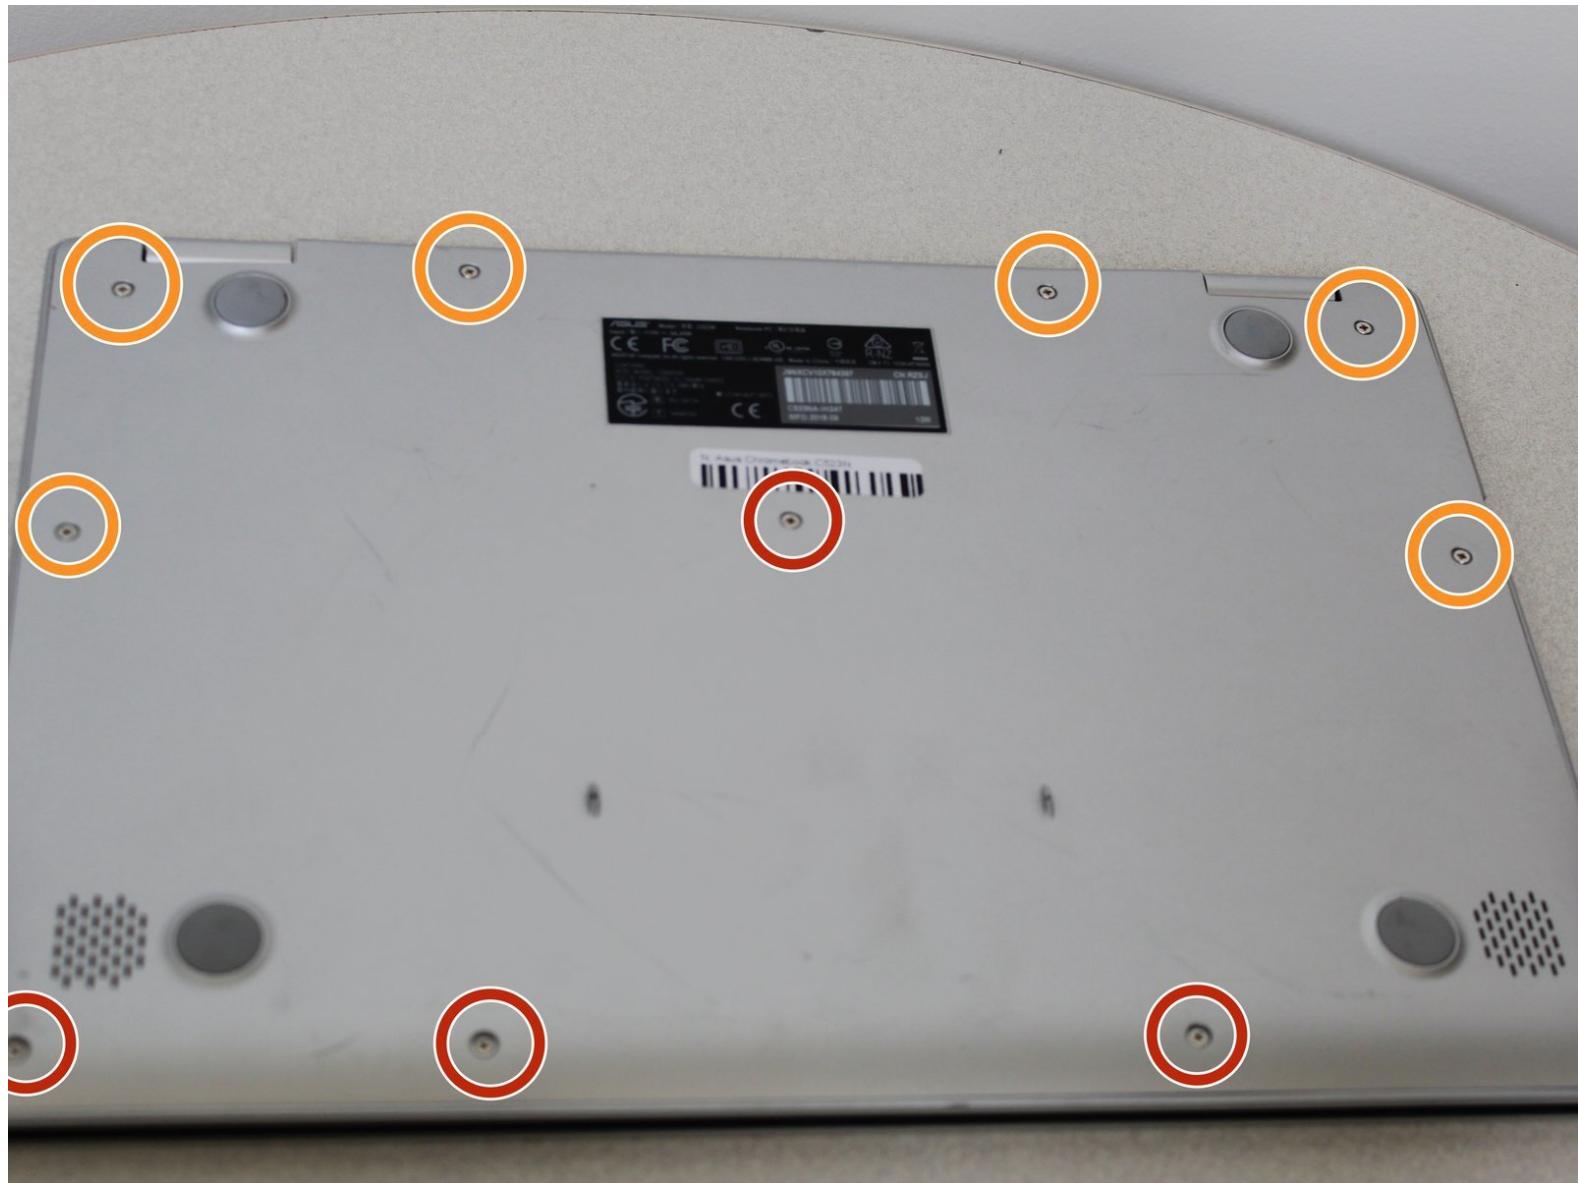

INTRODUCTION

This repair guide is for the back cover of your Asus Chromebook C523N. This repair or removal may be necessary for access to the hardware of the laptop, the battery, or to replace a damaged back cover. You might find yourself needing to repair inner parts of the computer or replace a cracked, scratched, or ill-fitting back cover.



This guide does not require any advanced knowledge or skills for computer repair. To complete this guide you will need to use a screwdriver, iFixit tools, and Spudger.

Prior to starting ensure the computer is unplugged from its charger and you have an understanding of the tools being used.

TOOLS:


- [J00 JIS Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover

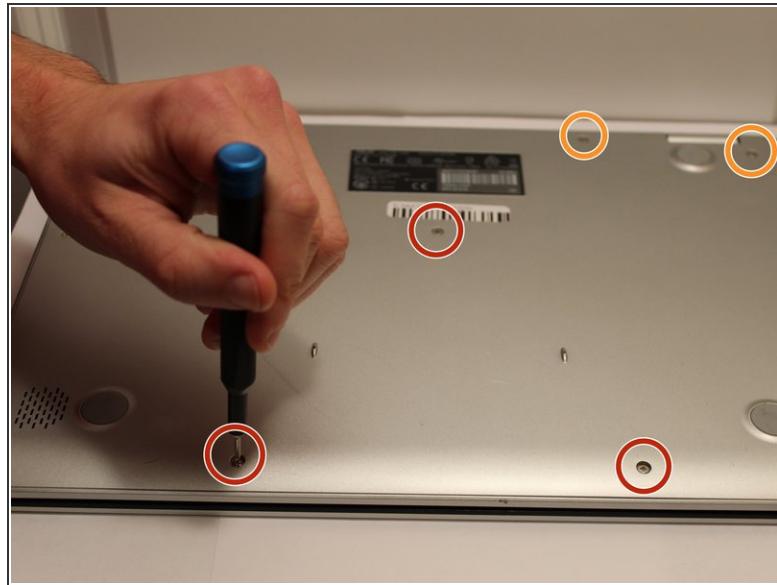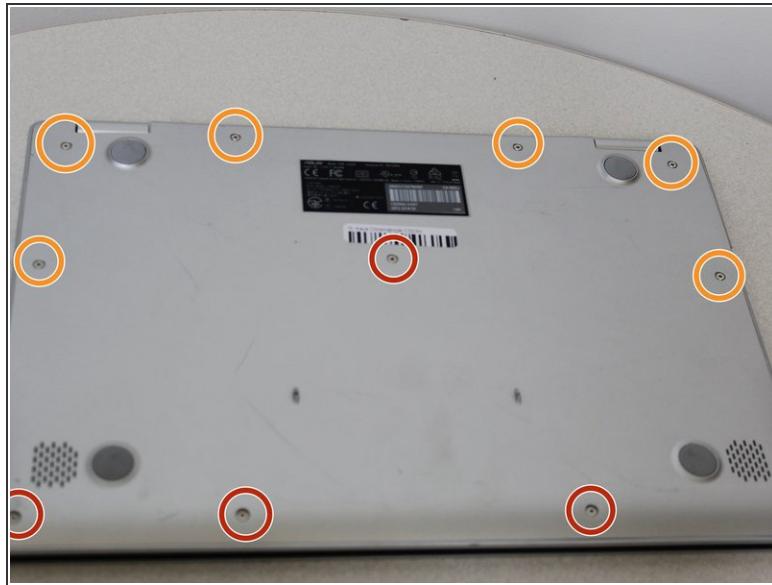

- Remove the four 0.5mm JIS #00 screws from the bottom edge of the Chromebook and one in the center.
- Remove the six 1.7mm JIS #00 screws from the sides and top edge of the Chromebook.

Step 2

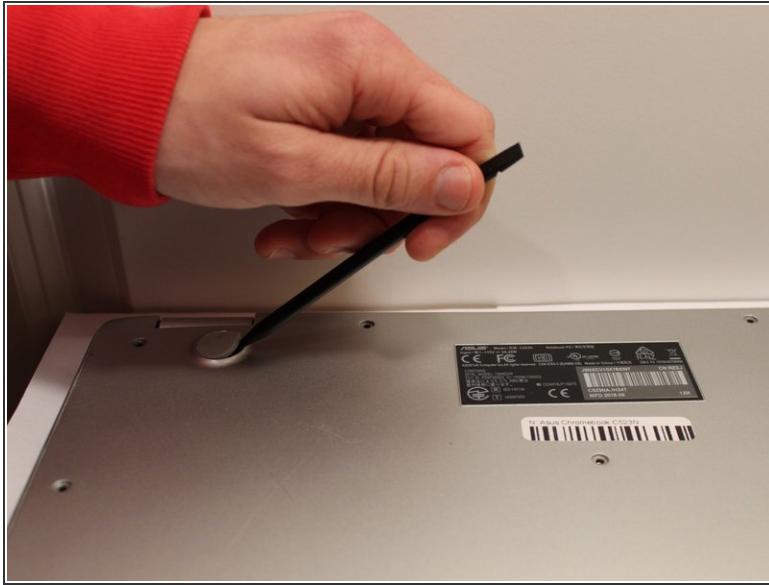

- Using a spudger, lift the top left base pad and remove it to reveal a final screw underneath.
- Remove the one 0.5mm JIS #00 screw underneath the base pad.

Step 3



- Use an opening tool to gently pry the base enclosure up and remove from the laptop.

To reassemble your device, follow these instructions in reverse order.