




Asus Chromebook C523N Battery Replacement

If the battery for the Asus Chromebook C523N is dead or not charging, use this guide to replace it.

Written By: Aaron Hogan

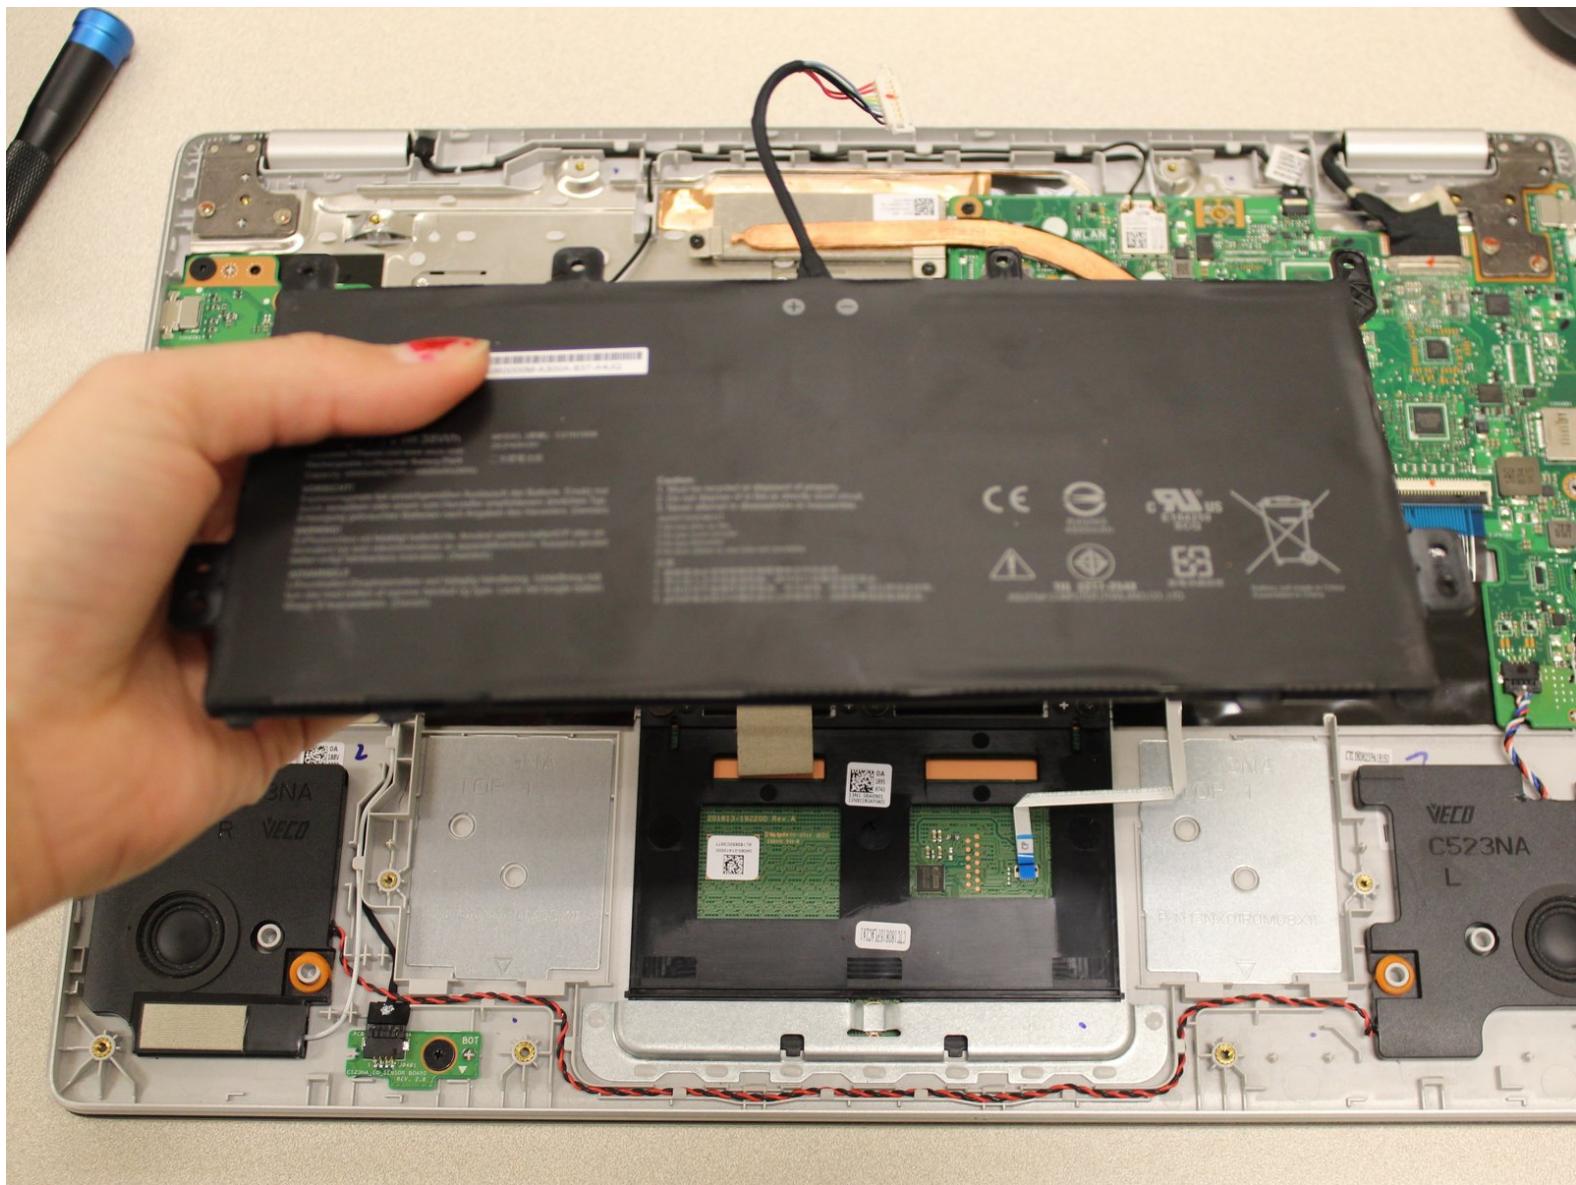

INTRODUCTION

If the Asus Chromebook C523N battery life is extremely short, the unit will not charge, or turn on use this guide to replace the battery.



Before using this guide, check to make sure that the laptop will not charge and that the charger is working.

To begin replacing the battery, make sure that the laptop is powered off and disconnected from any power source.

TOOLS:


- [J00 JIS Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover

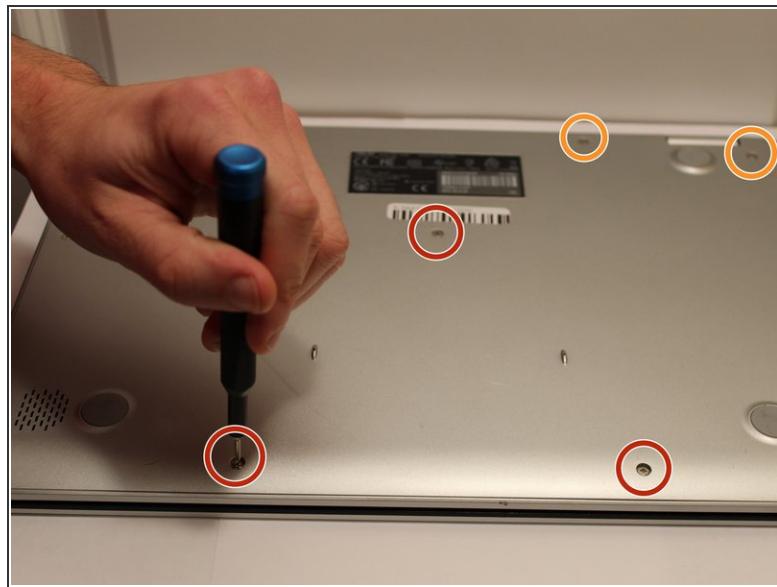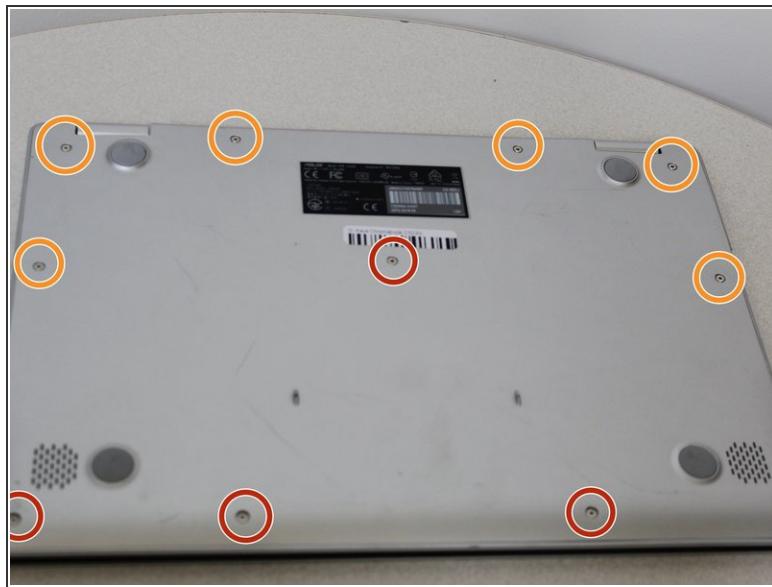

- Remove the four 0.5mm JIS #00 screws from the bottom edge of the Chromebook and one in the center.
- Remove the six 1.7mm JIS #00 screws from the sides and top edge of the Chromebook.

Step 2

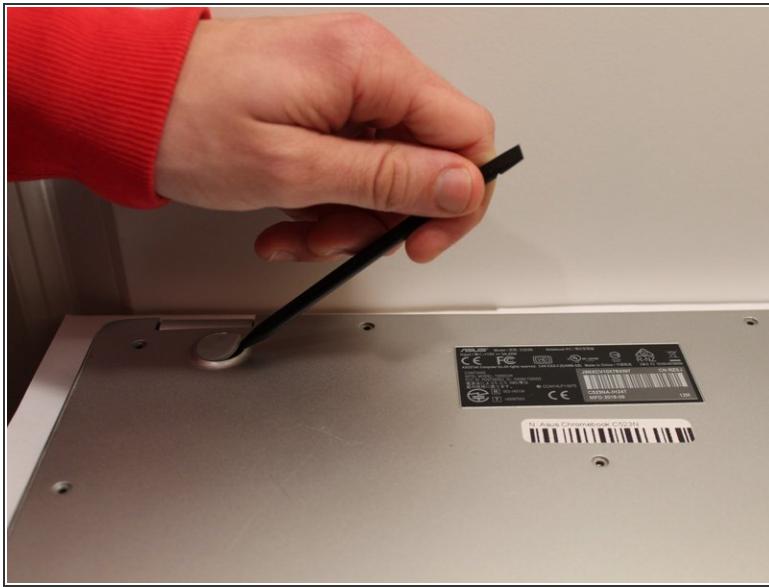


- Using a spudger, lift the top left base pad and remove it to reveal a final screw underneath.
- Remove the one 0.5mm JIS #00 screw underneath the base pad.

Step 3




- Use an opening tool to gently pry the base enclosure up and remove from the laptop.

Step 4 — Battery

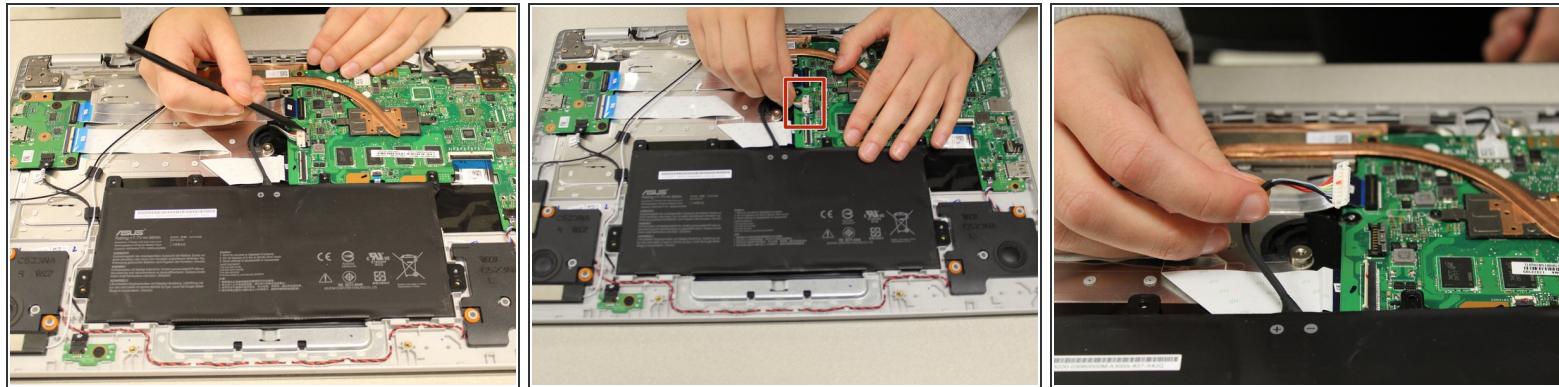

- Using a spudger, gently push back the small metal piece where the cord connects to the motherboard.
- Gently disconnect the battery cable from the motherboard.

Step 5

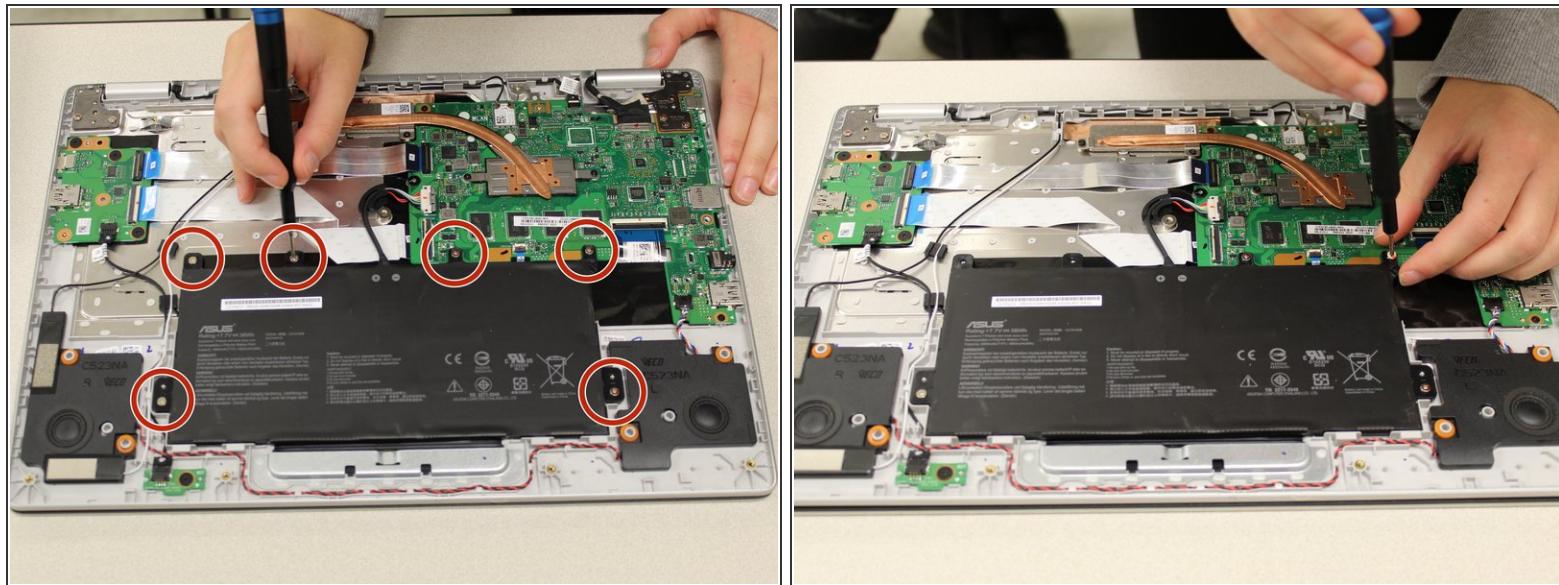

- Remove six 1.4mm JIS #00 screws from the battery.

Step 6



- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.