




Asus Chromebook C523N Touchpad Replacement

Replace the touchpad in your Asus Chromebook C523N.

Written By: Charlotte Arkwright

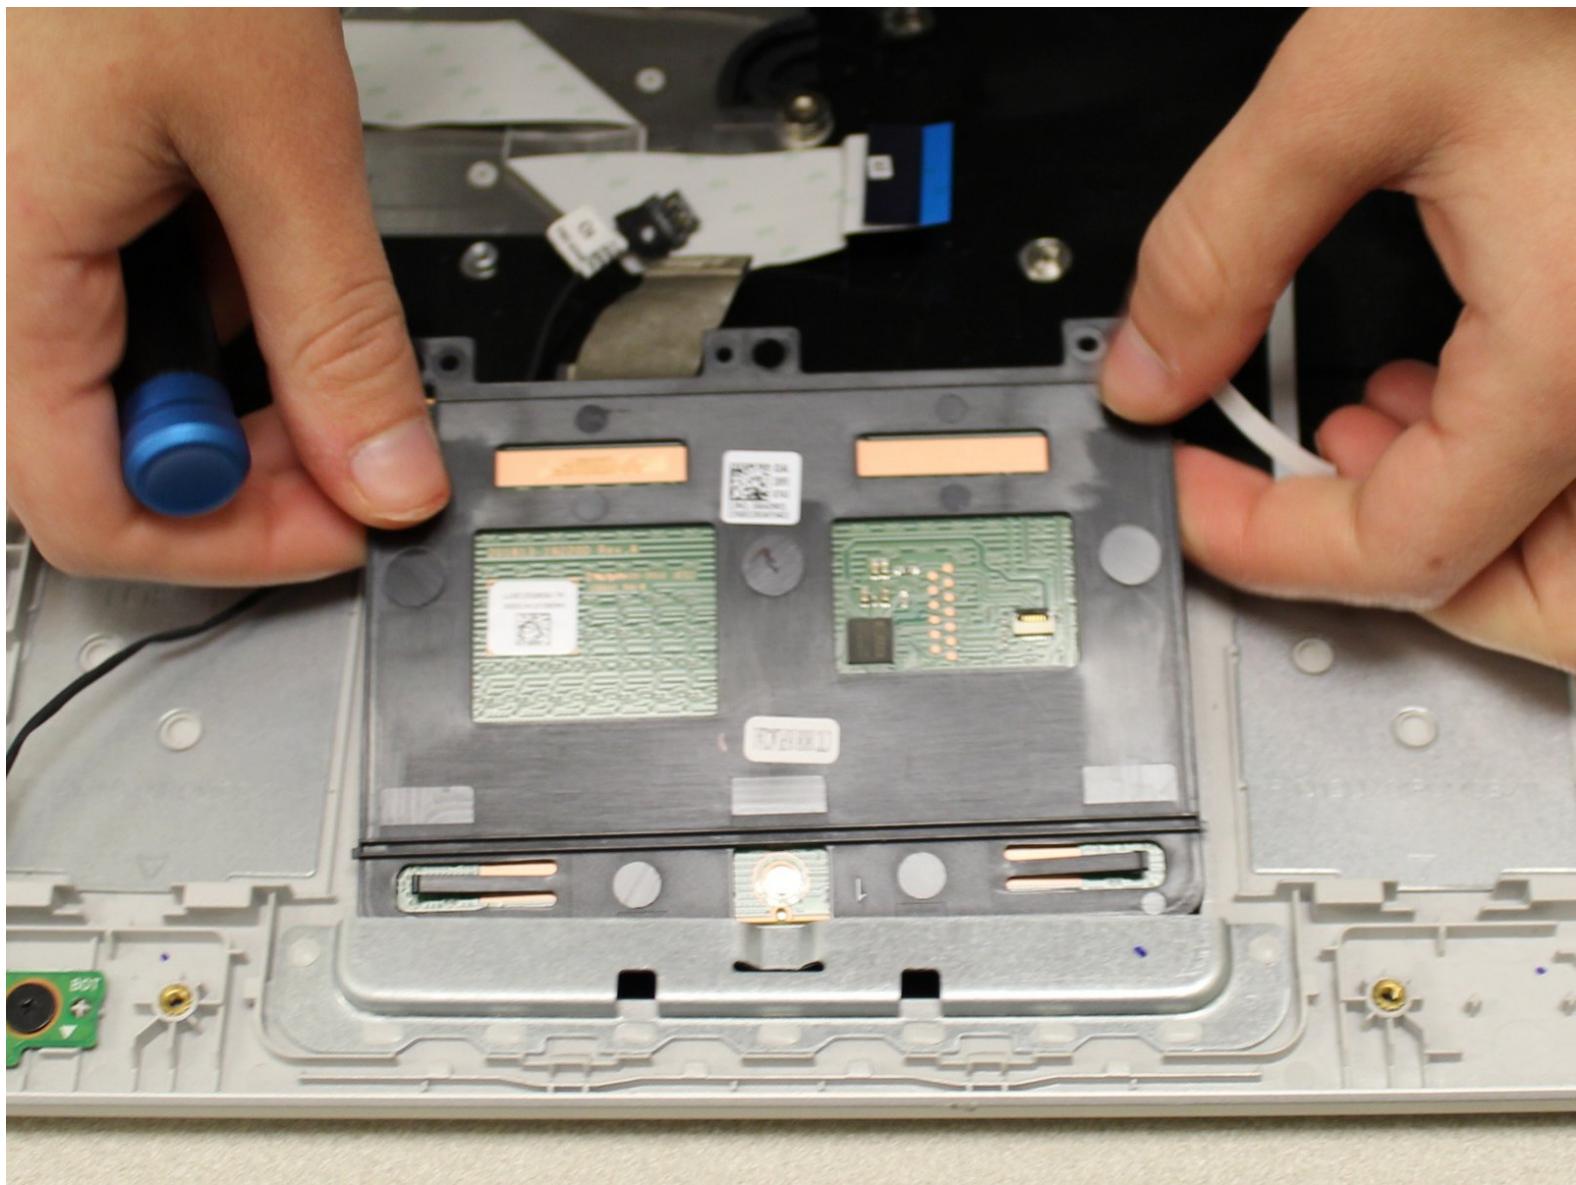

INTRODUCTION



If your Asus Chromebook C523N's touchpad is not responding, use this guide to replace it.

Before beginning this guide, make sure the power is off and the laptop is disconnected from any power source.

TOOLS:


- [J00 JIS Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Cover

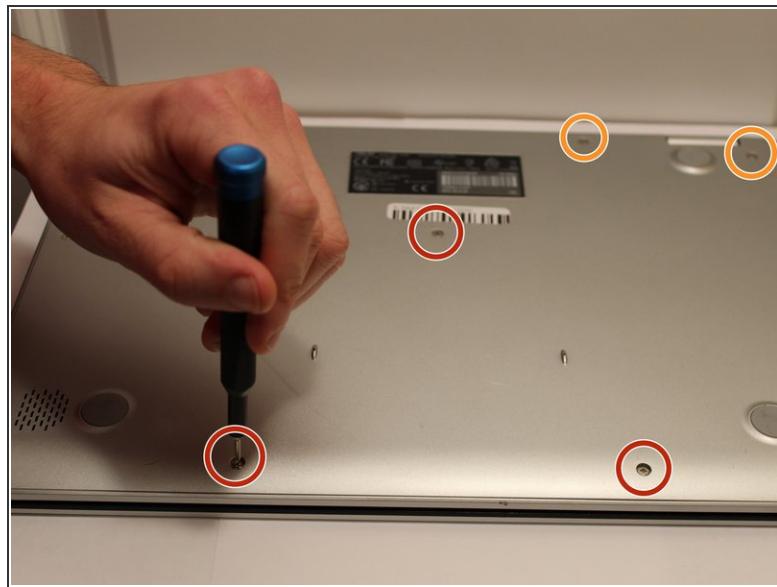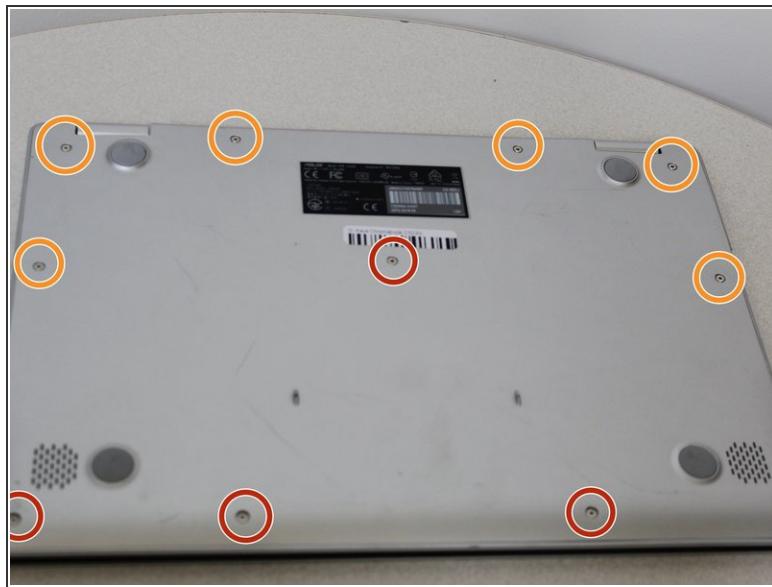

- Remove the four 0.5mm JIS #00 screws from the bottom edge of the Chromebook and one in the center.
- Remove the six 1.7mm JIS #00 screws from the sides and top edge of the Chromebook.

Step 2

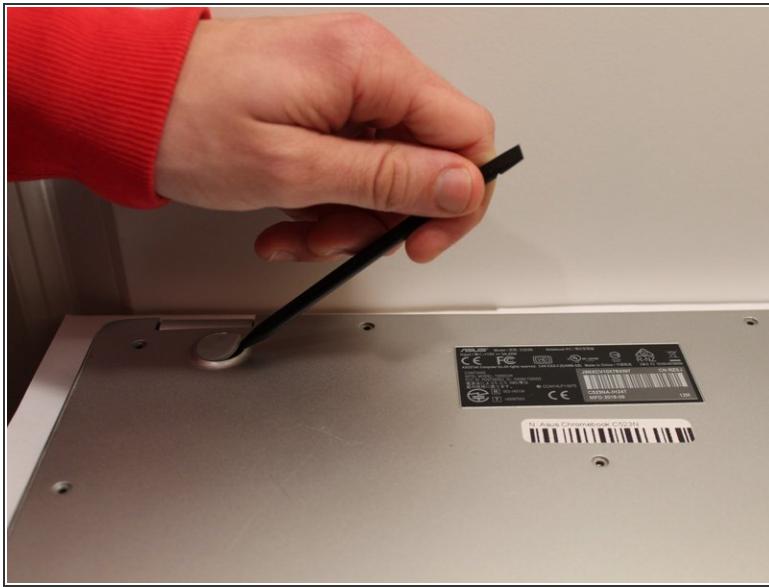


- Using a spudger, lift the top left base pad and remove it to reveal a final screw underneath.
- Remove the one 0.5mm JIS #00 screw underneath the base pad.

Step 3




- Use an opening tool to gently pry the base enclosure up and remove from the laptop.

Step 4 — Battery

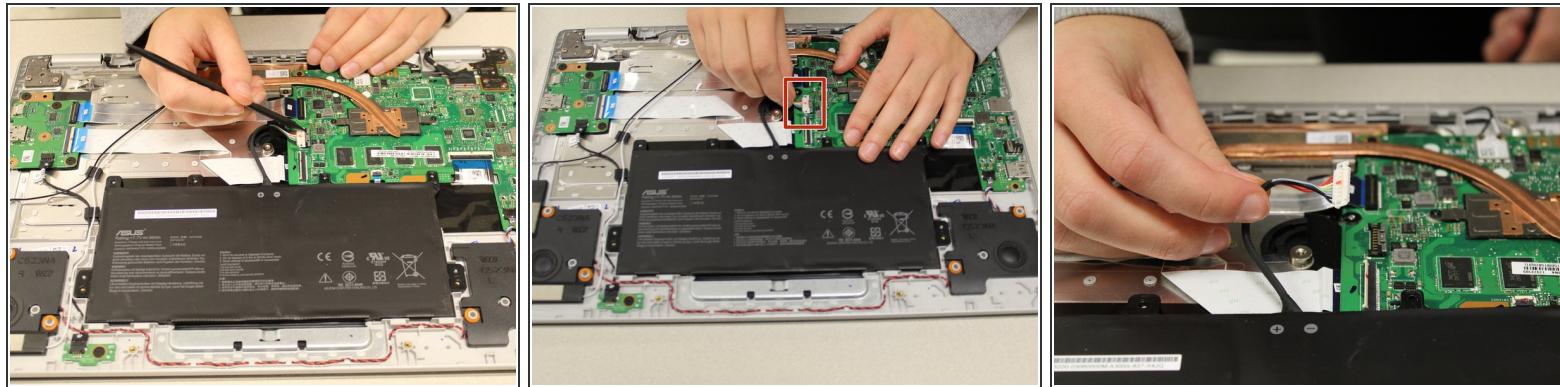


- Using a spudger, gently push back the small metal piece where the cord connects to the motherboard.
- Gently disconnect the battery cable from the motherboard.

Step 5

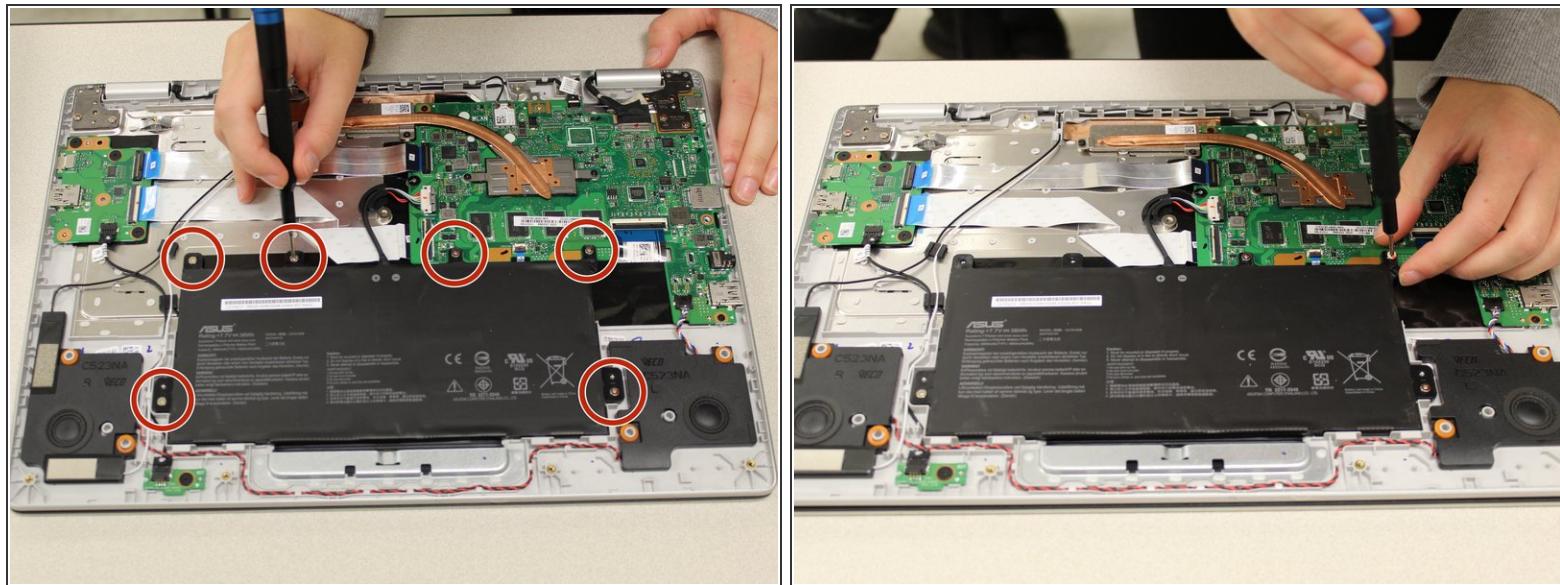

- Remove six 1.4mm JIS #00 screws from the battery.

Step 6

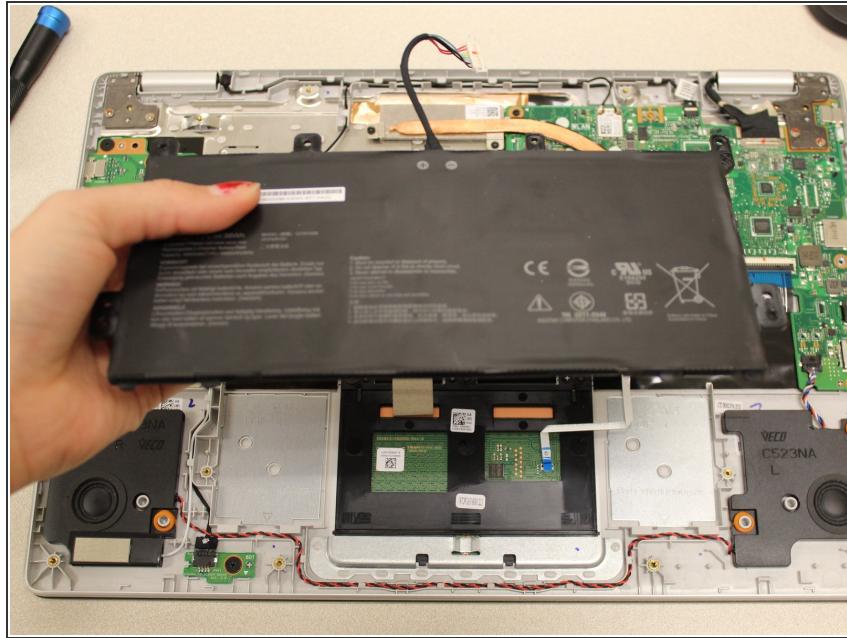


- Remove the battery from the laptop.

Step 7 — Touchpad




- Pull gently on the touchpad cable connector to disconnect.

Step 8

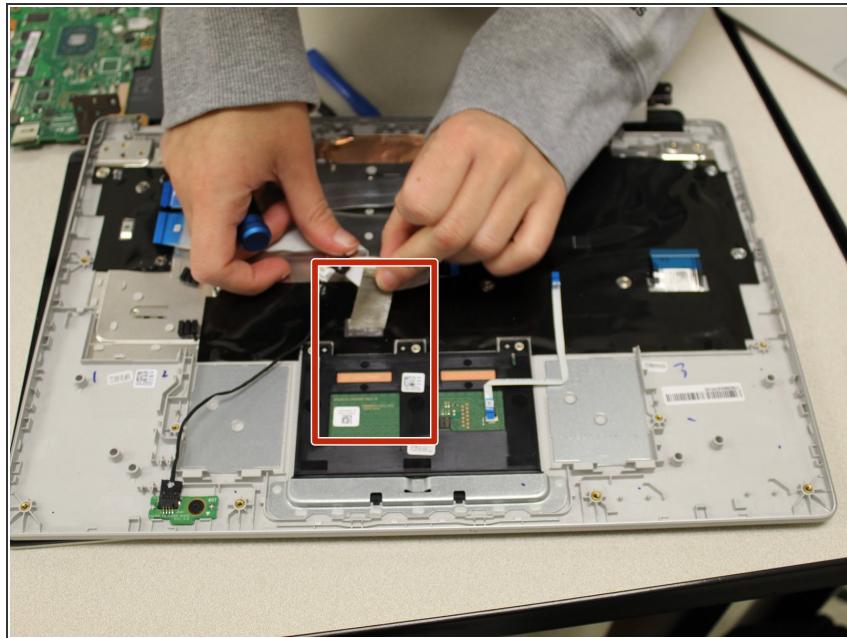



- Carefully, remove the tape from the touch pad only.

Step 9

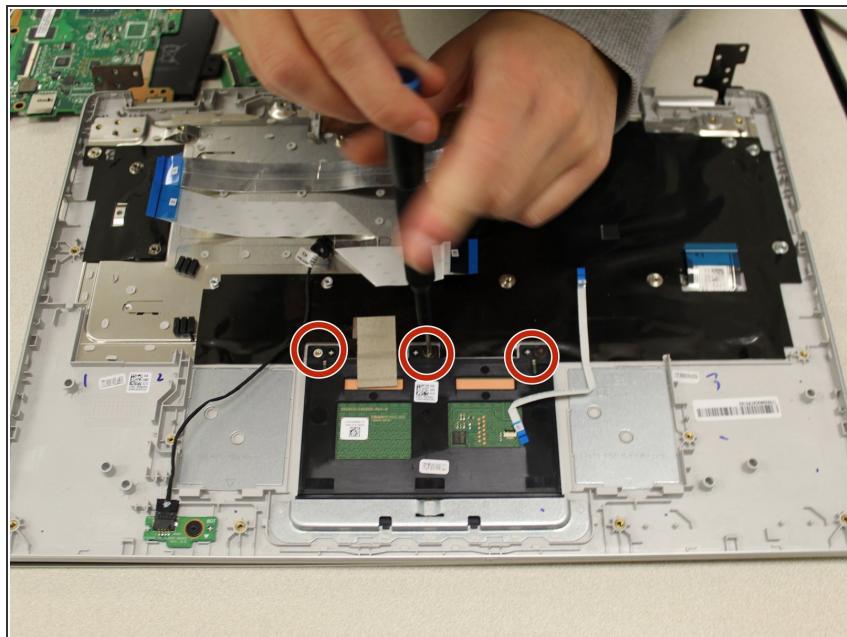

- Remove the three 1.4 mm JIS #00 screws.

Step 10

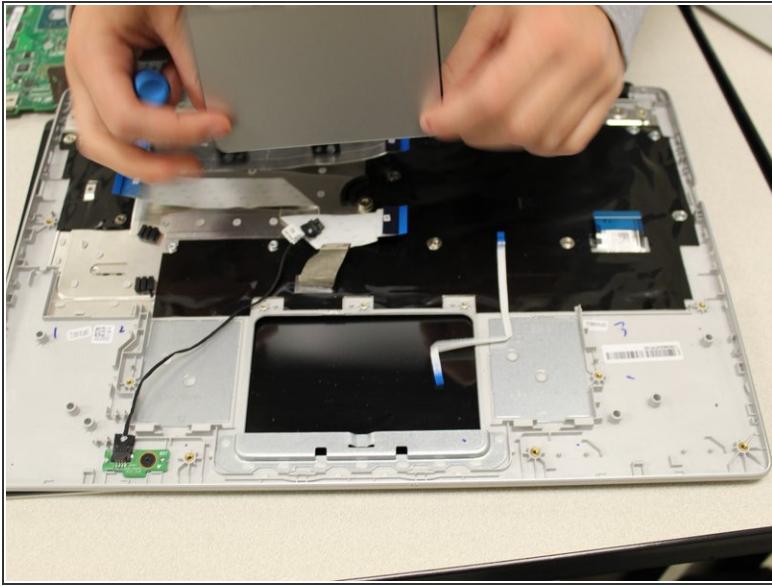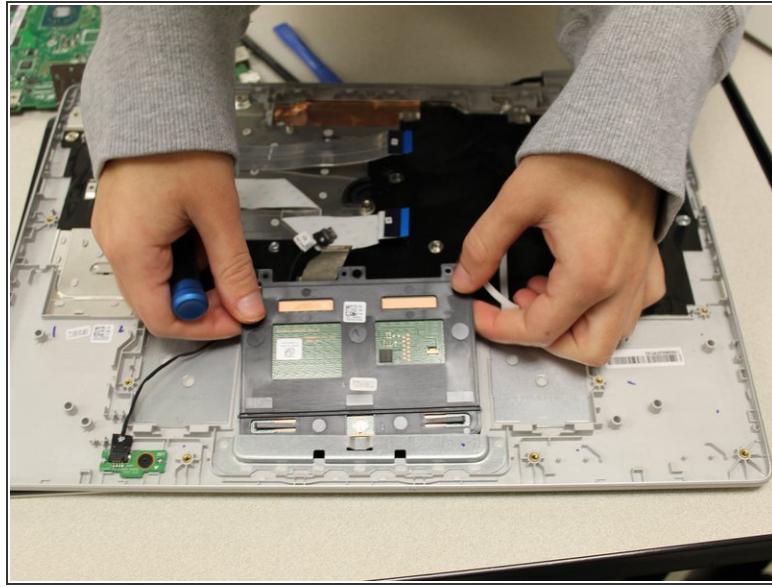

- Lift at the far edge of the touchpad to remove it.

To reassemble your device, follow these instructions in reverse order.