




# Asus Chromebook Flip C100 Lower Case Replacement

Disassemble the bottom part of the device.

Written By: Jesse Ye

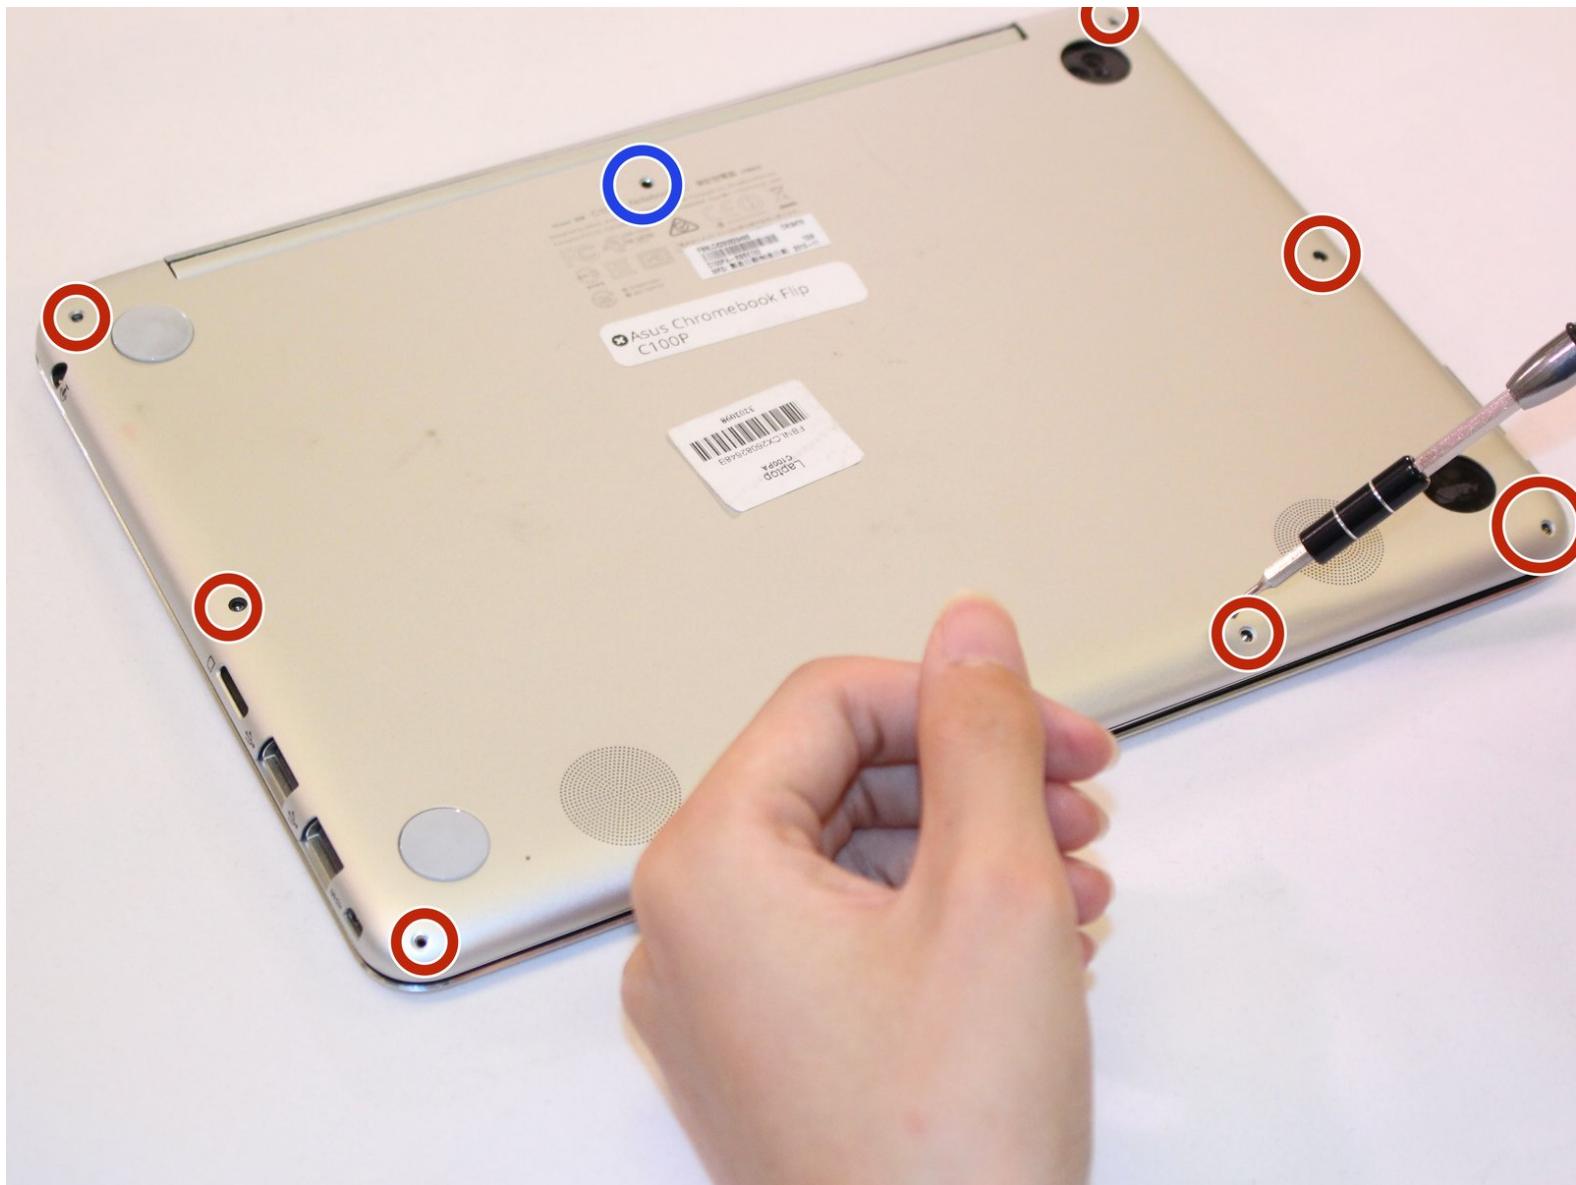

## INTRODUCTION

This prerequisite is required in order to replace or fix some components inside the bottom of the computer.

### TOOLS:

- Tweezers (1)
- JIS Driver Set (1)
- iFixit Opening Tools (1)

### PARTS:

- ASUS Chromebook C100P Lower Case (1)

## Step 1 — Lower Case



- Unscrew the eight bottom cover screws (one of them is under the hand) using a screwdriver with a J1000 tip.
- Unscrew the middle screw using a screwdriver with a T5 tip.

## Step 2




- Use the plastic opening tool to remove the four rear rubber feet.

## Step 3




- Unscrew the five screws under the feet using a screwdriver with a J100 tip.

## Step 4

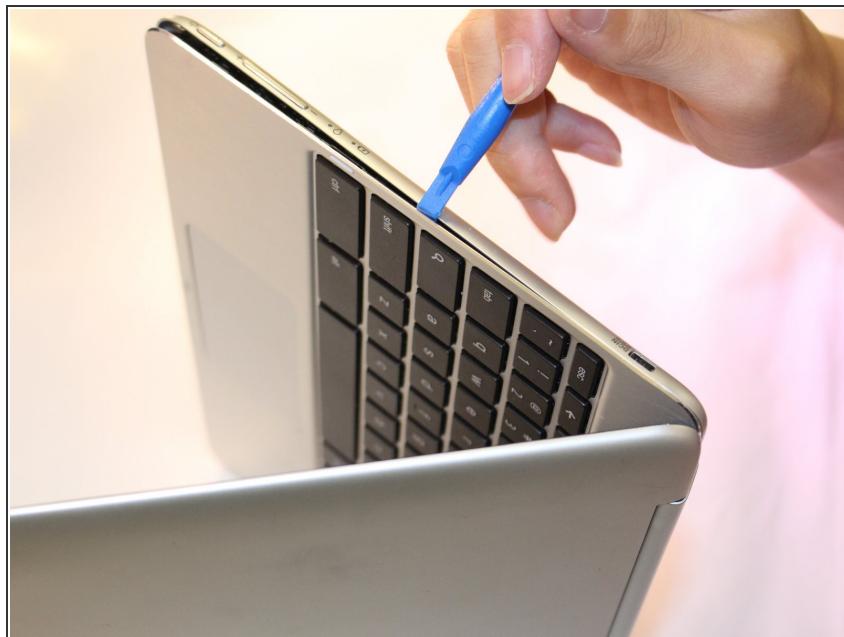

- Use the plastic opening tool to pry up the palm rest assembly.

## Step 5

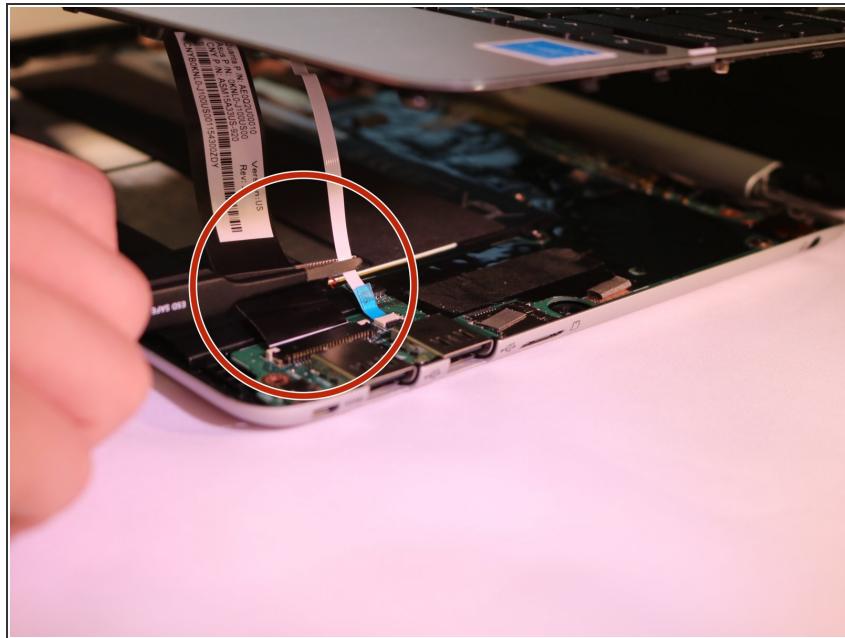

- Use tweezers to disconnect the two cables from the motherboard.

To reassemble your device, follow these instructions in reverse order.