




Asus EEE PC 1000HD Keyboard Replacement

This guide shows how to change a faulty keyboard on the Asus EEE PC 1000HD.

Written By: Emily Gao

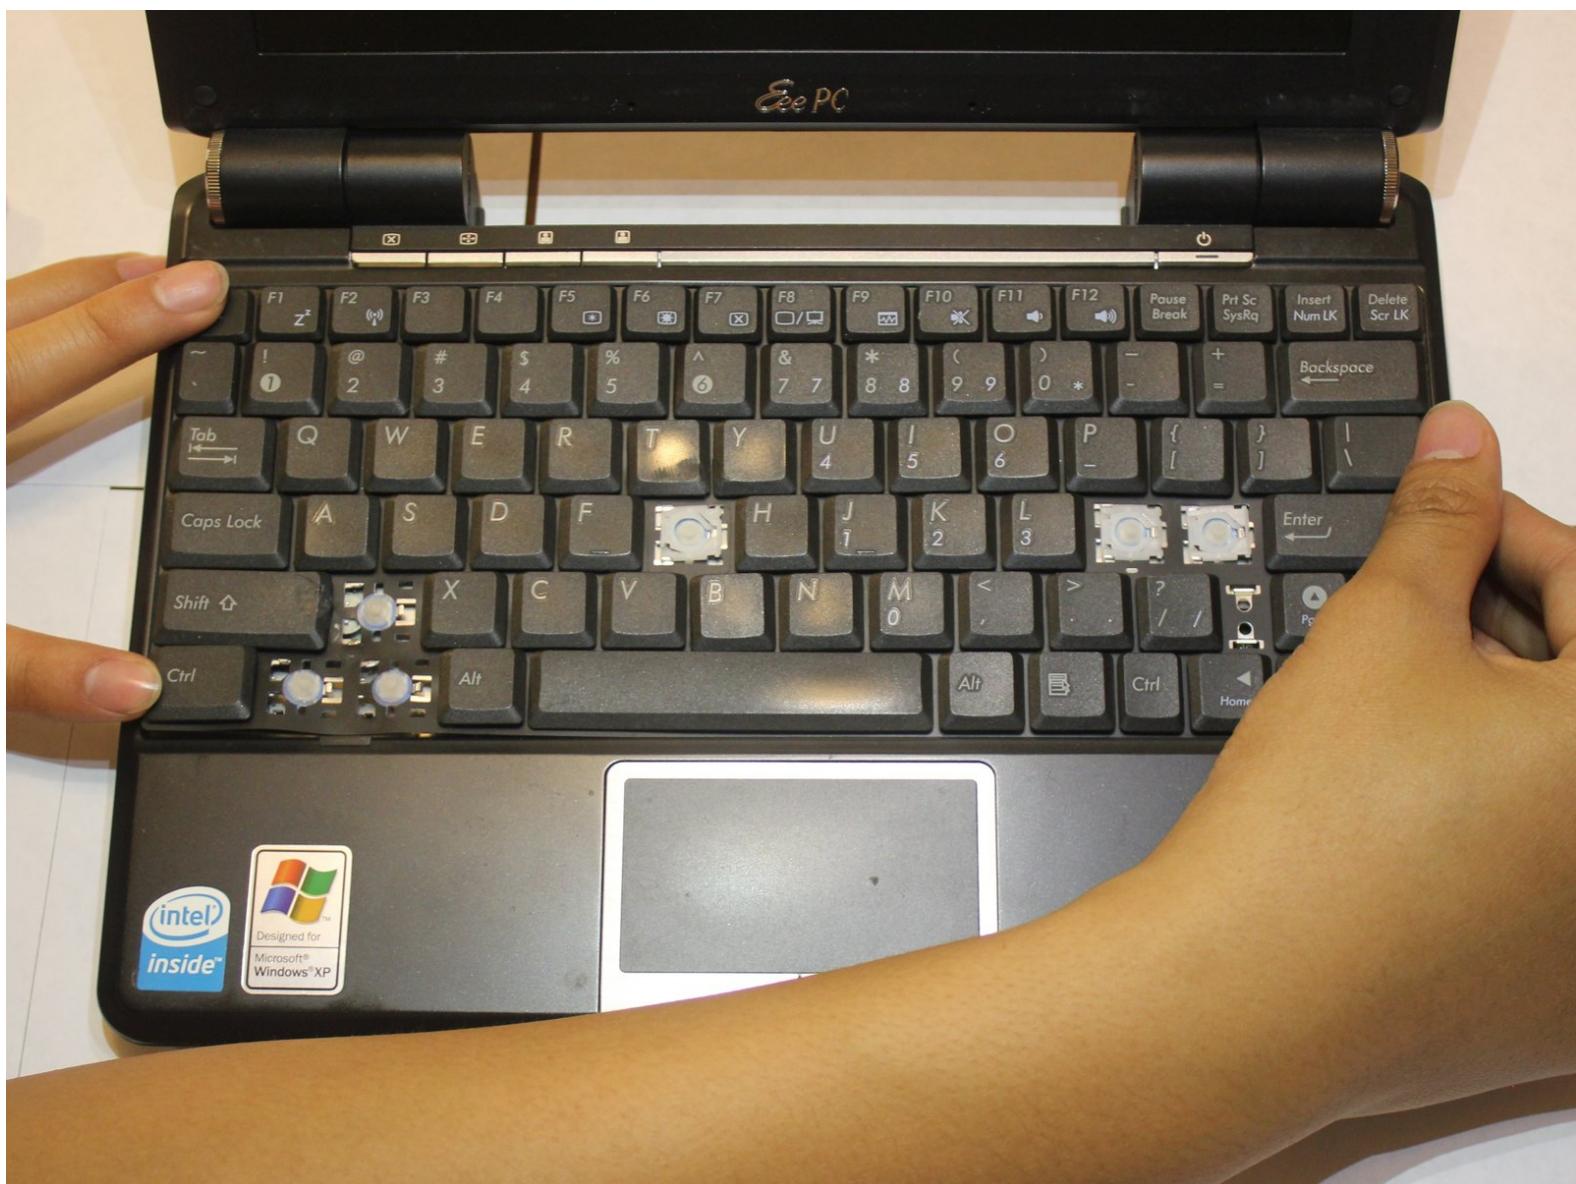

INTRODUCTION

In this guide, we'll show you how to replace the keyboard on the Asus PC EEE 1000HD completely. For this process, you will need a metal spudger tool for powerful prying. You will also need a (preferably) new replacement keyboard.

TOOLS:

- Metal Spudger (1)

PARTS:


- Replacement Laptop Keyboard for Asus PC EEE 1000HD (1)

Step 1 — Keyboard



- Note: Prior to changing the keyboard on your laptop, be sure to have a replacement keyboard on hand.


Step 2

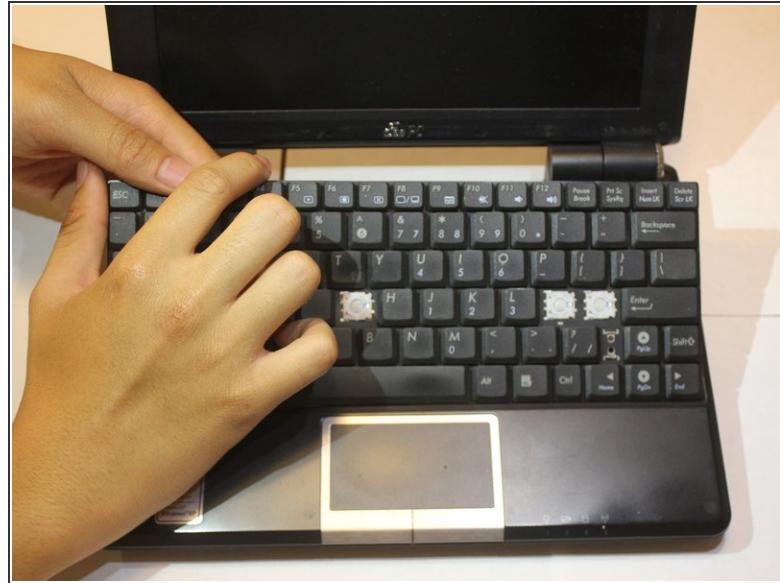

- Use a metal spudger and *carefully* insert the end of the flat tip into the edge of the keyboard.
- Hold one end of the keyboard down to make prying easier.
- Gently lift the metal spudger until you begin hearing *clicking* noises; these are the sounds of the keyboard unclasp from the board below.


This document was generated on 2019-11-06 04:01:00 PM (MST).

Step 3

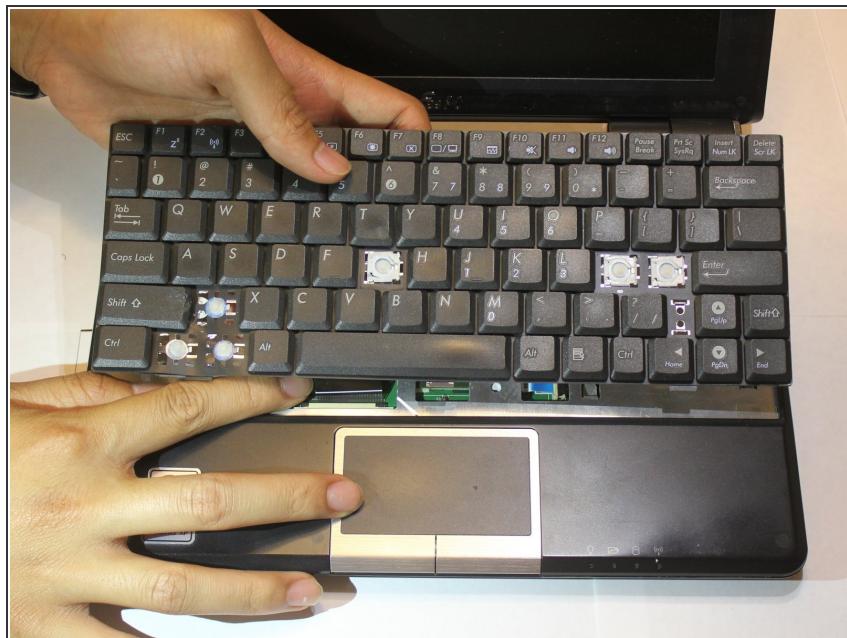

- Once you lift the keyboard, there will be a metal tab that connects the keyboard to the metal panel below.
- Detach this metal tab slowly.

Step 4

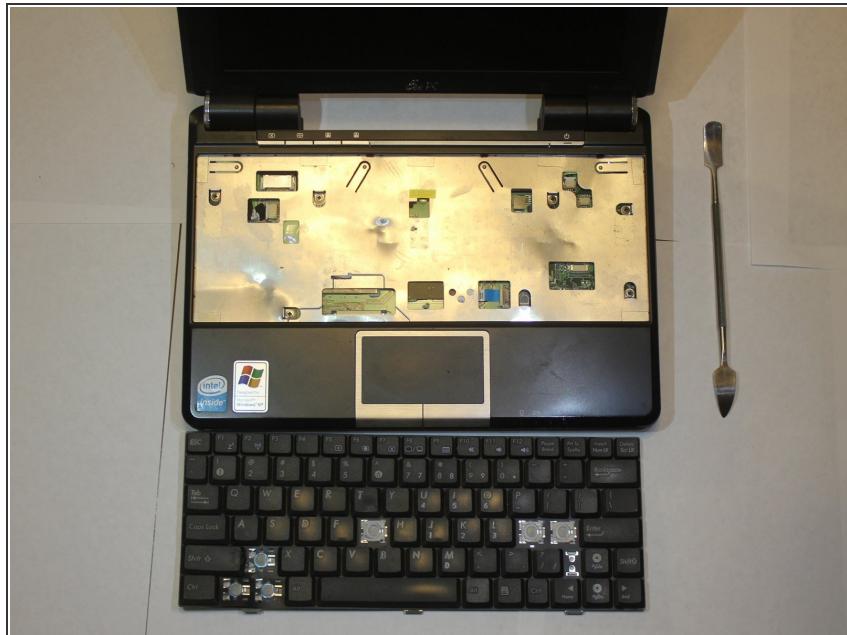

- The keyboard should be fully detached.
- With your new replacement keyboard, insert the metal tab back into the metal panel. Press gently on the keyboard to lock it into place.
- There should be a few clicking noises as the new keyboard latches onto the metal board.

To reassemble your device, follow these instructions in reverse order.