



Asus ET1620IUTT All In One Guide

This will show you how to open the AiO and upgrade RAM or replace harddrive

Written By: ansel cadien



This document was generated on 2019-09-23 02:39:20 PM (MST).

INTRODUCTION

This will show you how to open the AiO and upgrade RAM or replace hardrive

TOOLS:


- Essential Electronics Toolkit (1)

Step 1 — Removing Back Cover




- Remove screw cover plugs
- Remove the two screws
- Use prying tool/knife to remove rubber strip from the bottom
- unscrew five small screws
- Use prying tool/knife to unsnap clips all around the edges

Step 2 — Replace Hard drive

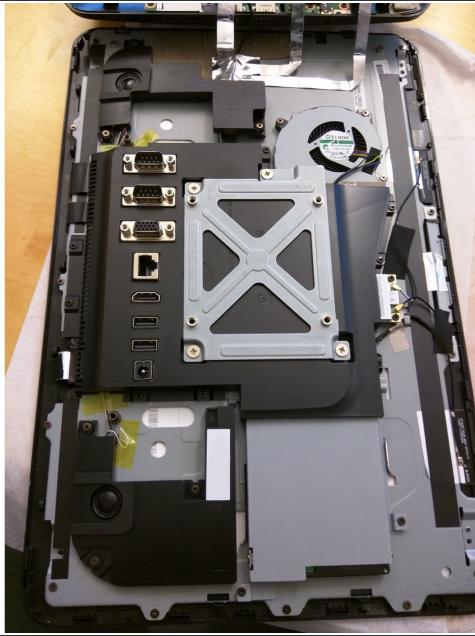

- Remove the two screws holding hard drive
- Slide out and replace.

Step 3 — Getting to the memory enclosure

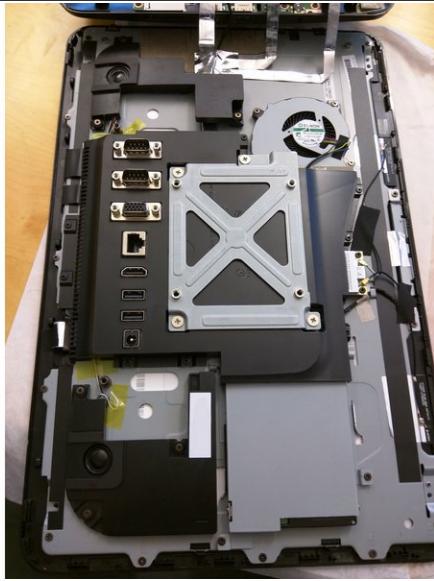

- Remove metal X which is the bracket or wall mount area.

To reassemble your device, follow these instructions in reverse order.