



# Asus Eee PC 1000HA RAM Replacement

This guide will show you how to replace the RAM.

Written By: Ashlee Stickle



## INTRODUCTION

This will show you how to remove the RAM on an Asus Eee PC 1000HA.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Magnetic Project Mat](#) (1)

## Step 1 — RAM



- Remove the battery before working on your device. See this [LINK](#) for a step-by-step guide.
- Gently turn the laptop up side down so that the battery is facing away from you. The battery is outlined by the red rectangle in the picture to the left.

## Step 2



- Use a #00 Phillips Head screw driver to remove the two 1/4" screws that hold the back panel in place.

## Step 3



- Place the blue plastic 1/4" opening tool into the small indentation and gently pry the back panel off.

## Step 4




- Remove the back panel.
- The RAM is shown by the orange marker.

## Step 5



- Push the two silver tabs outwards and the RAM will pop up to be removed.

## Step 6

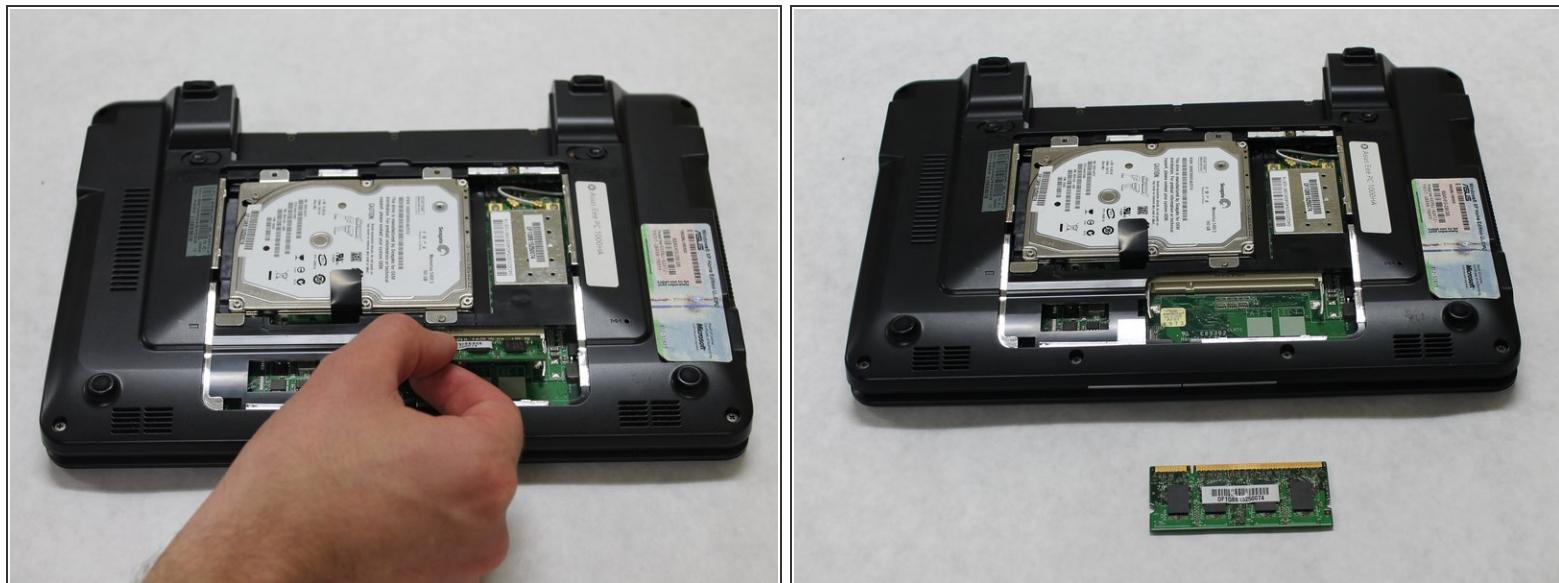

- Gently pull the RAM outwards to remove.

To reassemble your device, follow these instructions in reverse order.