




Asus Eee PC 1000HE RAM Replacement

Replacing the RAM card of your Asus EEE PC 1000HE.

Written By: Mike Glenn

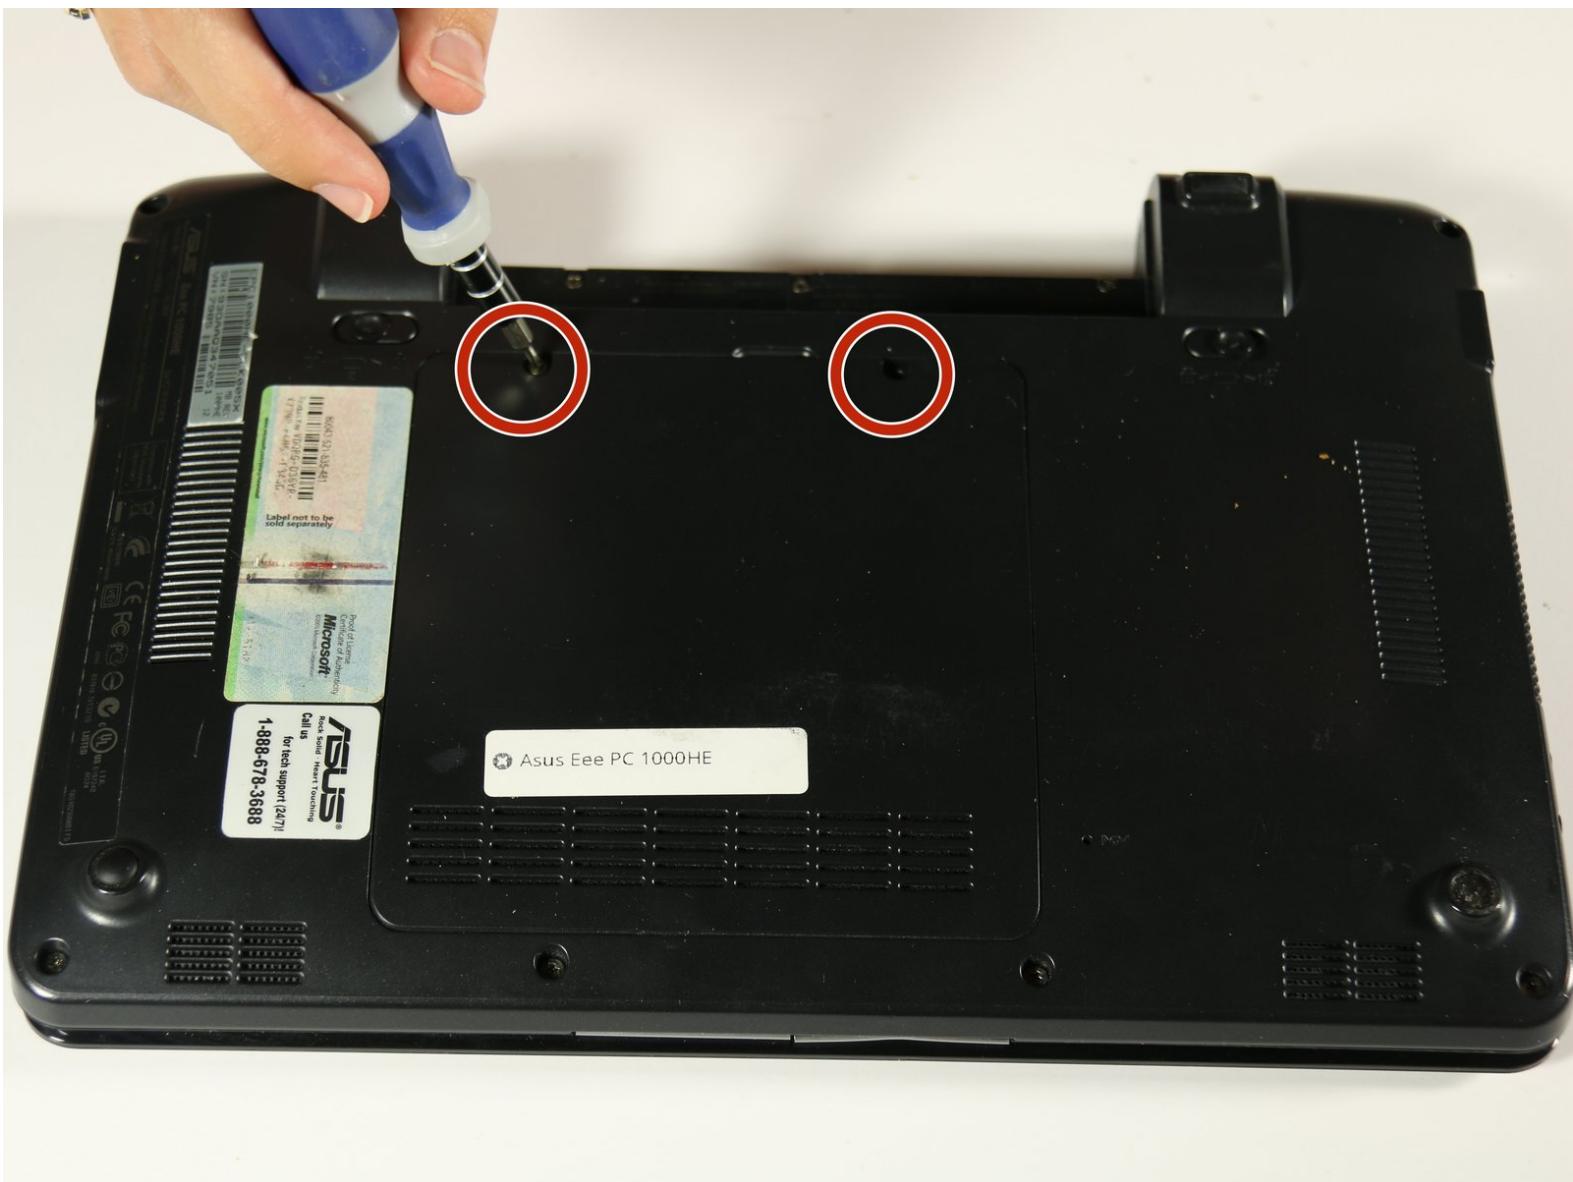

INTRODUCTION

If you are having problems with the RAM on your device, this guide will help you replace it.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Lay the laptop down with the bottom facing upwards.
- Locate the two battery lock slide tabs.

Step 2


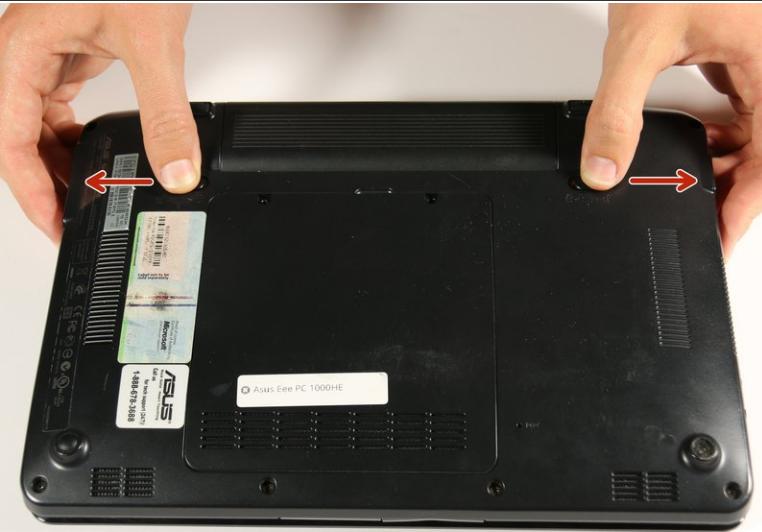


- Slide the tabs outward to unlock the battery.

(i) The right tab will remain in the unlocked position while the left tab must be held.


- While holding the left tab outward, slide the battery away from you to remove it.

Step 3 — RAM

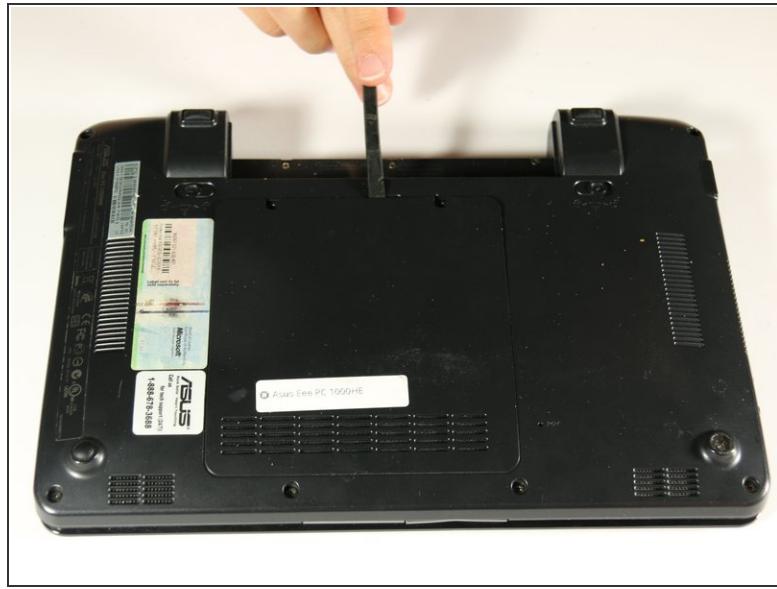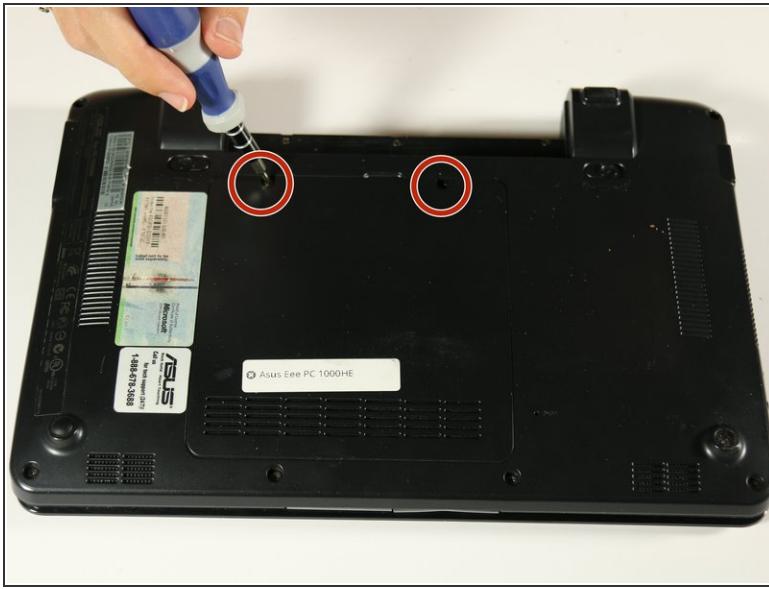

- Use a PH00 (+) phillips head to unscrew the two 7 mm screws holding down the back panel.
- Use the spudger to pry off the back cover.

Step 4

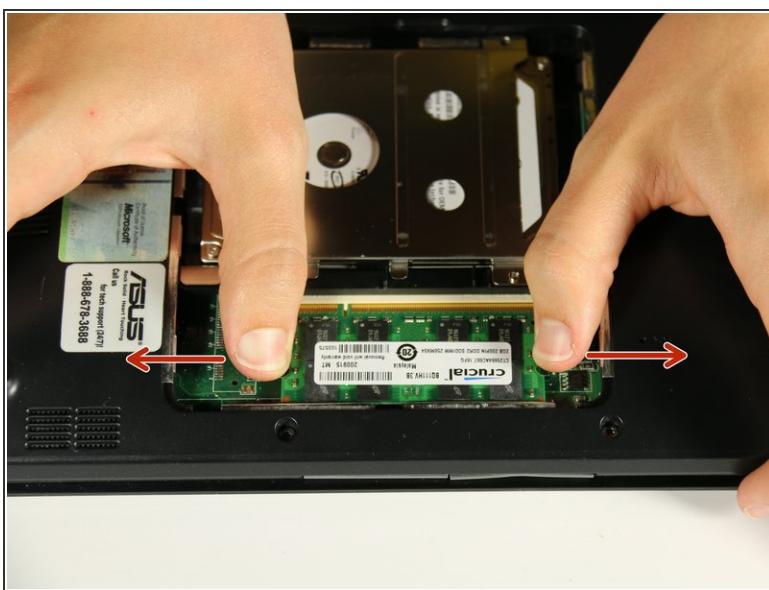

- Push the metal bars on the sides of the RAM card to pull them out away from each other
- Lift the RAM card out

This document was generated on 2019-10-03 02:49:15 PM (MST).

To reassemble your device, follow these instructions in reverse order.