




# Asus Eee PC 1215N RAM Replacement

Get Access to the RAM compartment and RAM Module Removal/Instalation


Written By: Gaetan

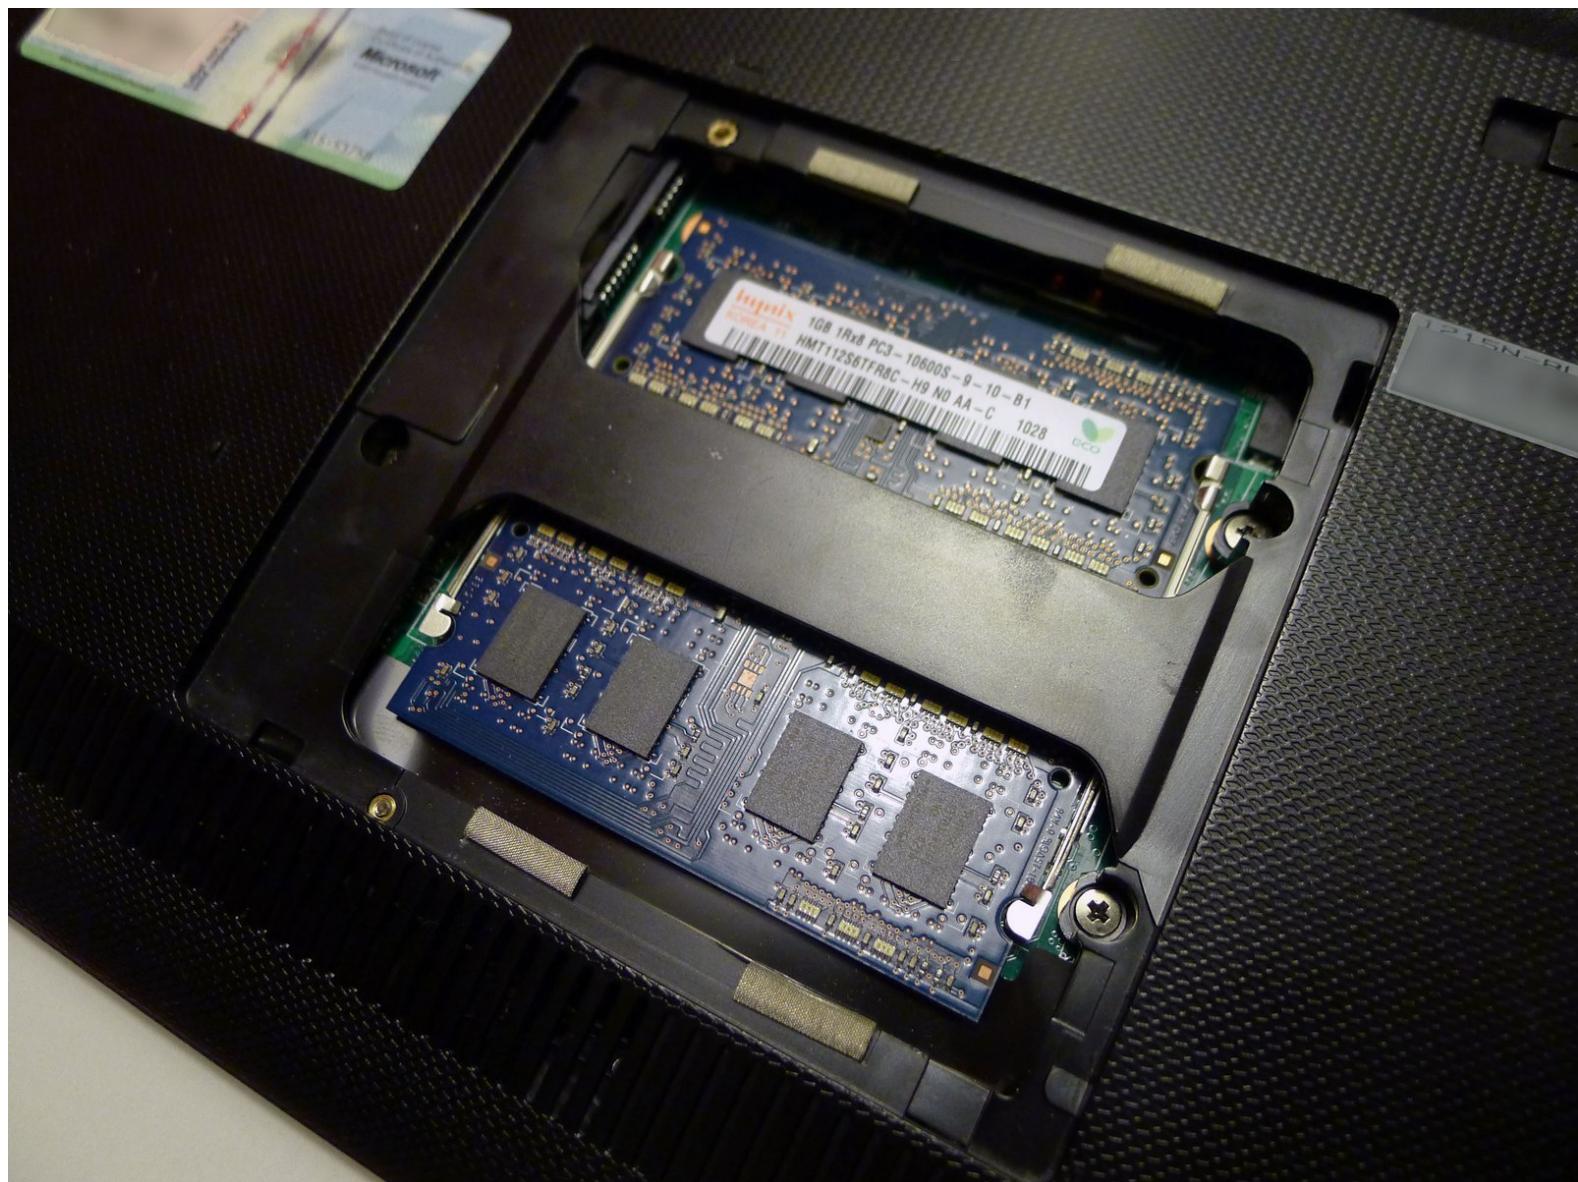

 **TOOLS:**


- [Anti-Static Wrist Strap \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Battery

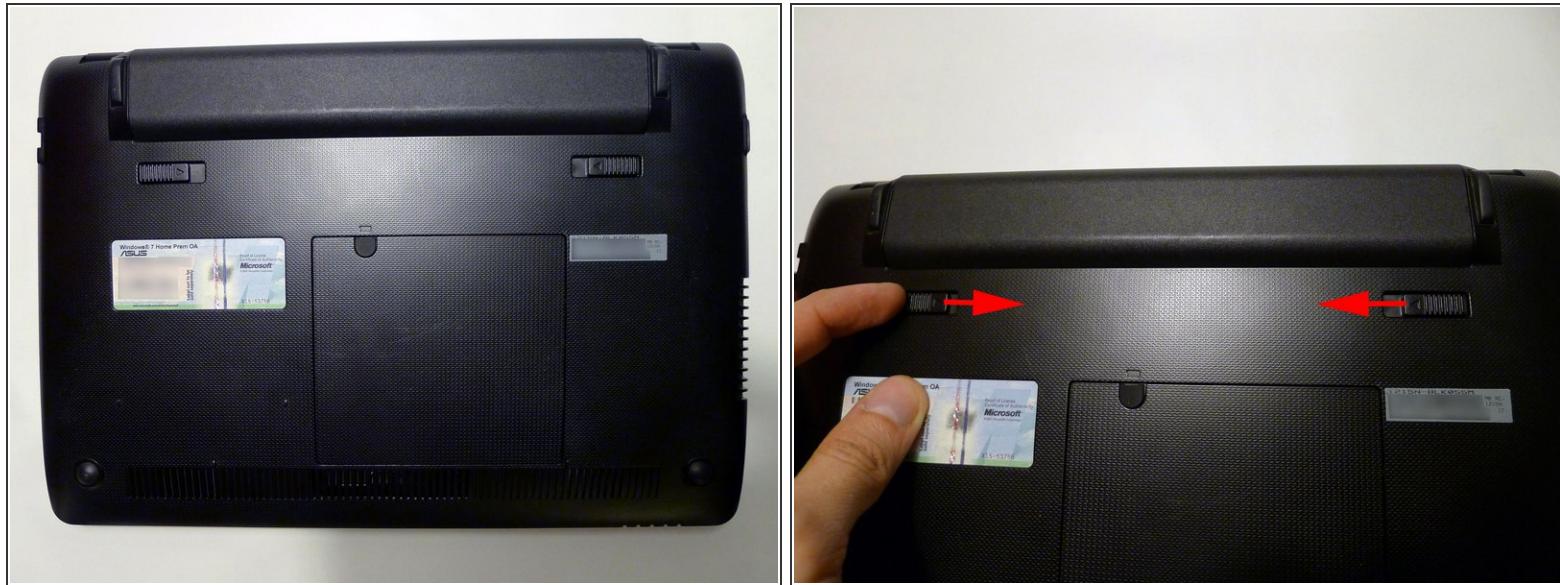


- Turn the power off and turn the netbook upside down.
- Slide both battery catches together to release the battery.
- Slide the battery out.

## Step 2 — RAM

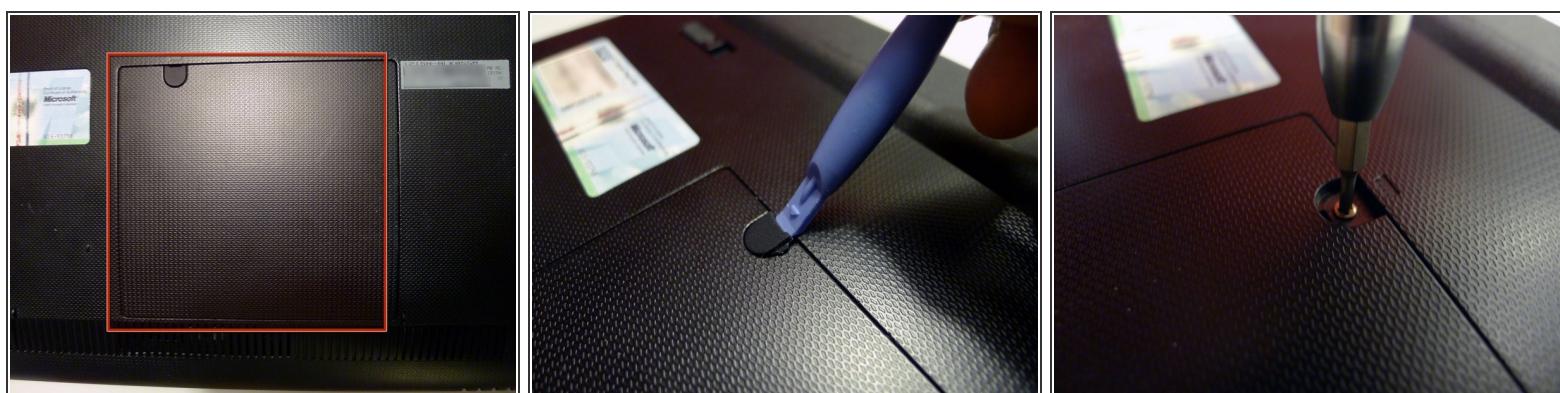


- Locate the memory compartment.
- Using a [Plastic Opening Tools](#), remove the screw rubber cover.
- Remove the screw.

## Step 3

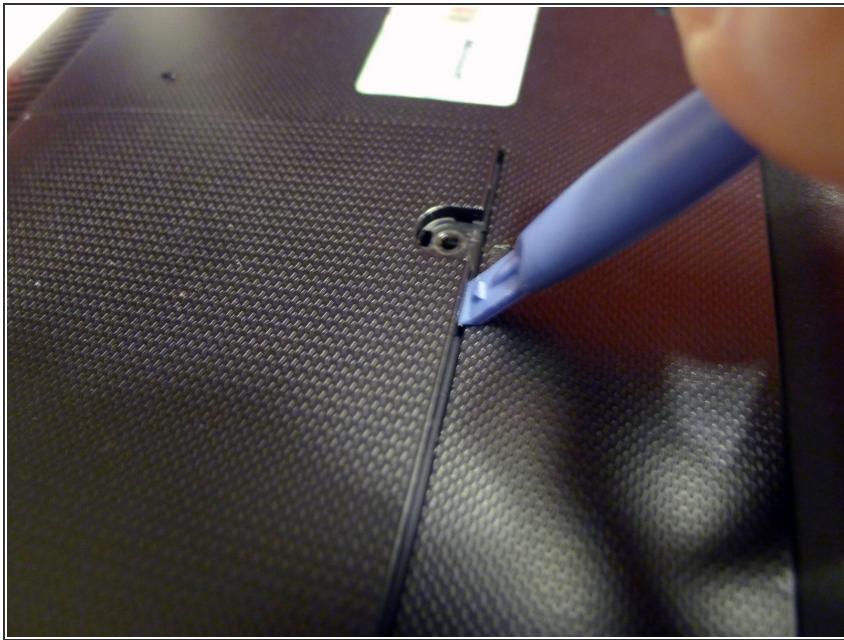

- Use a [Plastic Opening Tools](#) near the screw hole to release the cover.
- Remove the cover

## Step 4

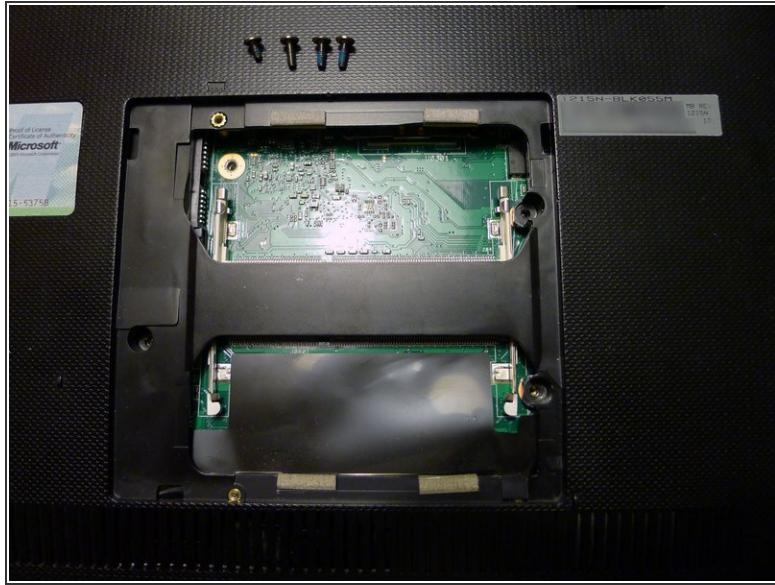

- Using a [Spudger](#), push both right and left metal clip to release one of the RAM module.
- Slide out the RAM module.
- Do the same with the second RAM module if necessary.

To reassemble your device, follow these instructions in reverse order.