 




Asus Eee PC T101MT RAM Replacement

If you are looking to replace the RAM in your Asus Eee PC T101MT, you've come to the right place.

Written By: Jarnell Miranda

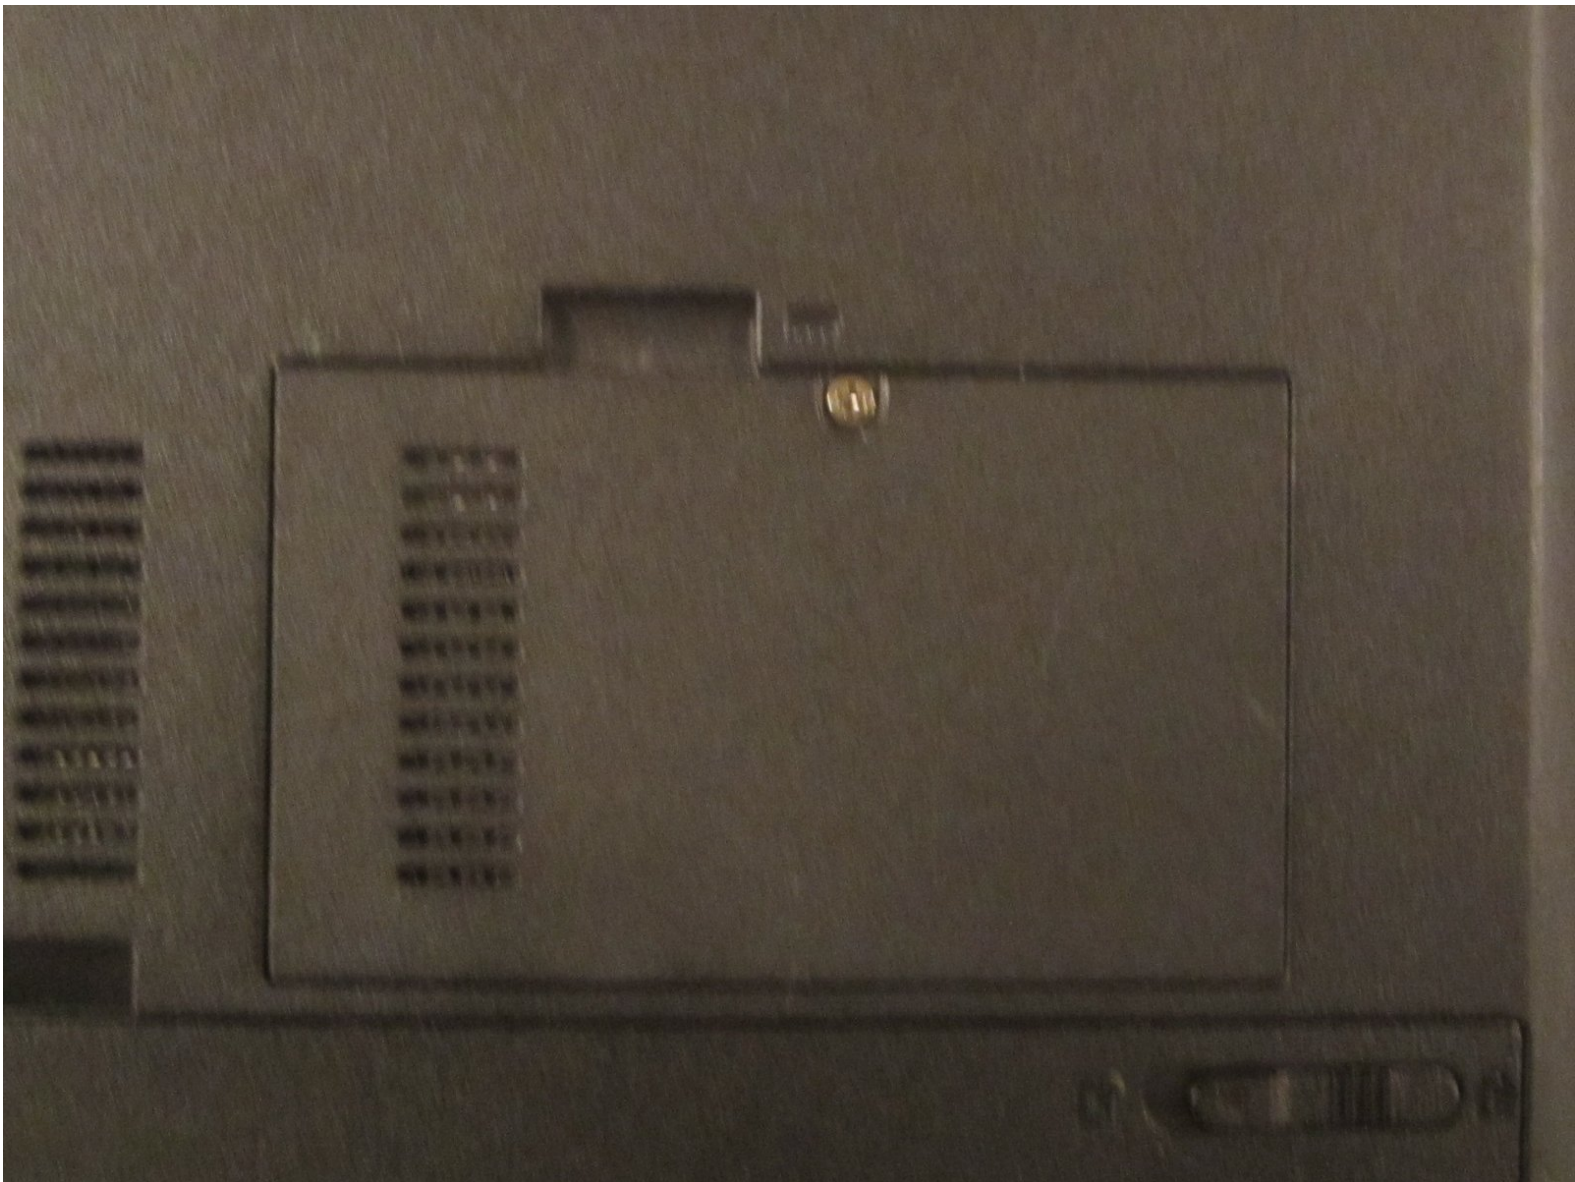

INTRODUCTION

Use these easy to follow instructions to replace your RAM.



TOOLS:

 
- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- ⚠ Before you begin, make sure your device is powered off and not connected to the power supply.
- Turn the tablet over and position it so it matches the picture.

Step 2

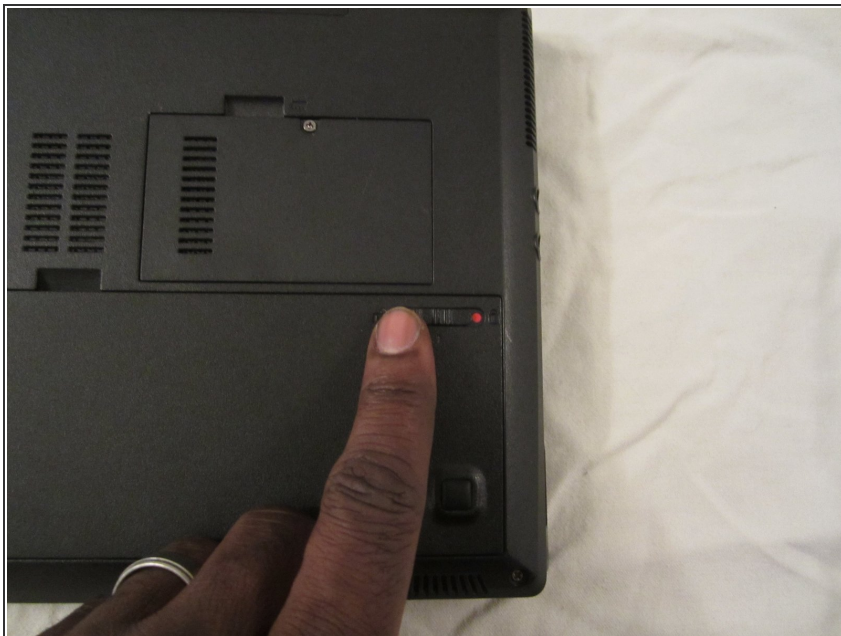

- Locate the sliding tab on the right and slide it to the left in order to unlock the battery.

Step 3

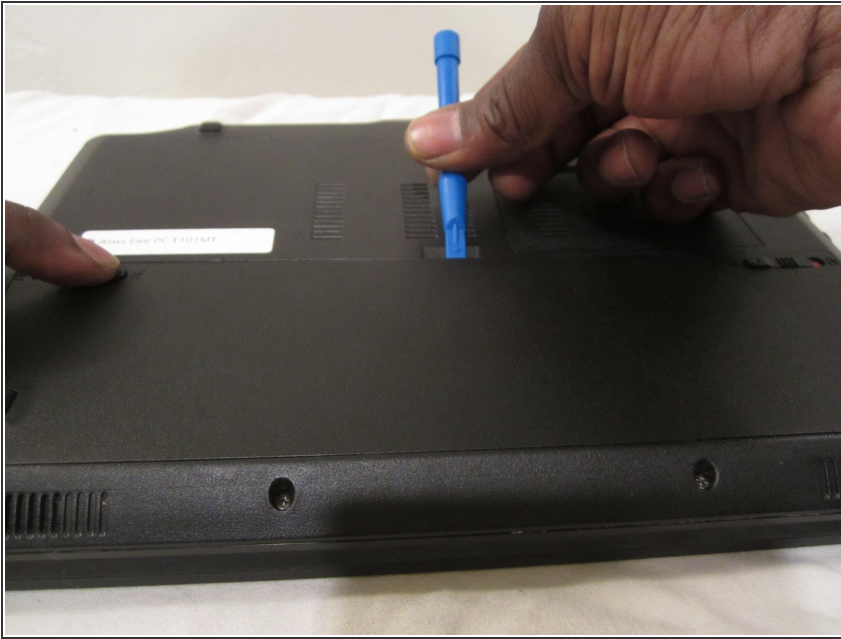

- Use a plastic opening tool to lift the battery up as you slide the tab on the left to the right.

Step 4





- Lift the battery out of the device.

Step 5 — RAM





- Locate the compartment where the RAM is stored.

Step 6

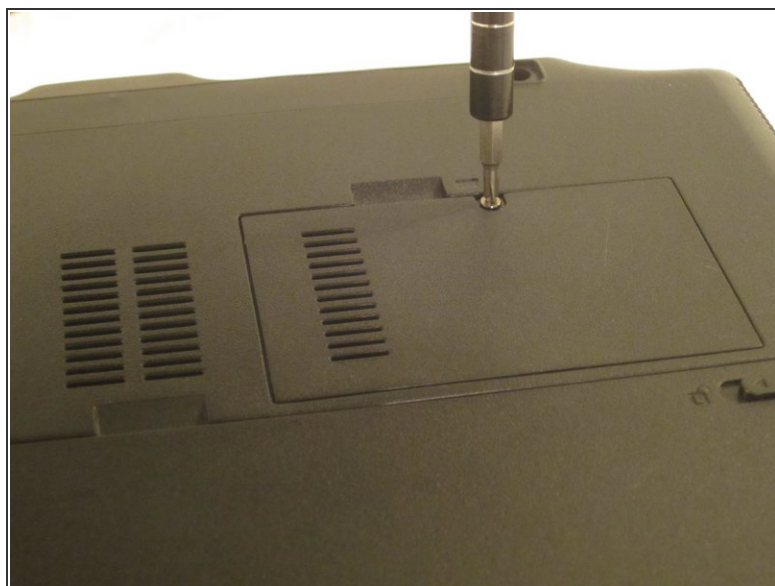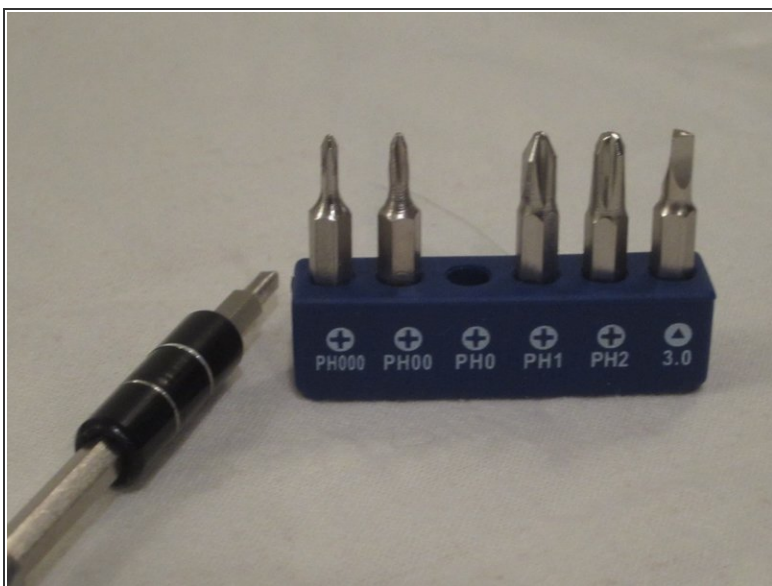




- Grab a drive adapter and a PH0 phillips head bit and use the screwdriver to remove the 5mm screw from the cover of the compartment.

  Step 7

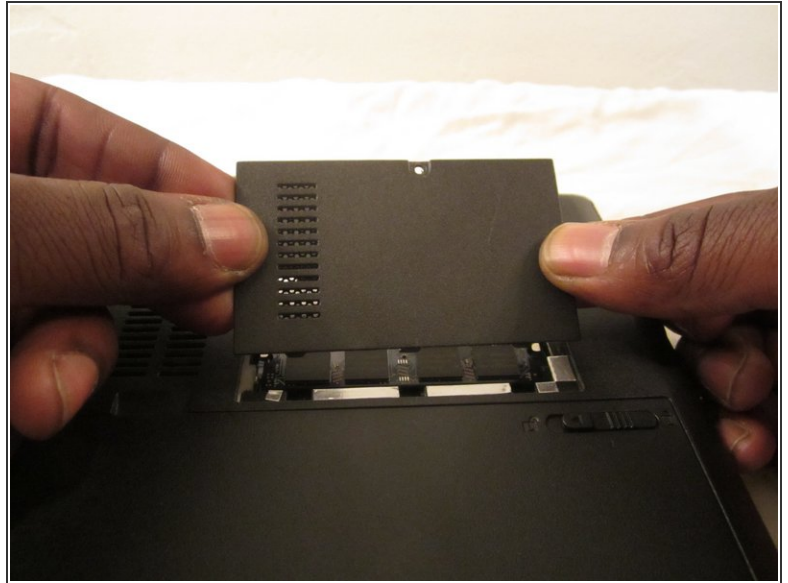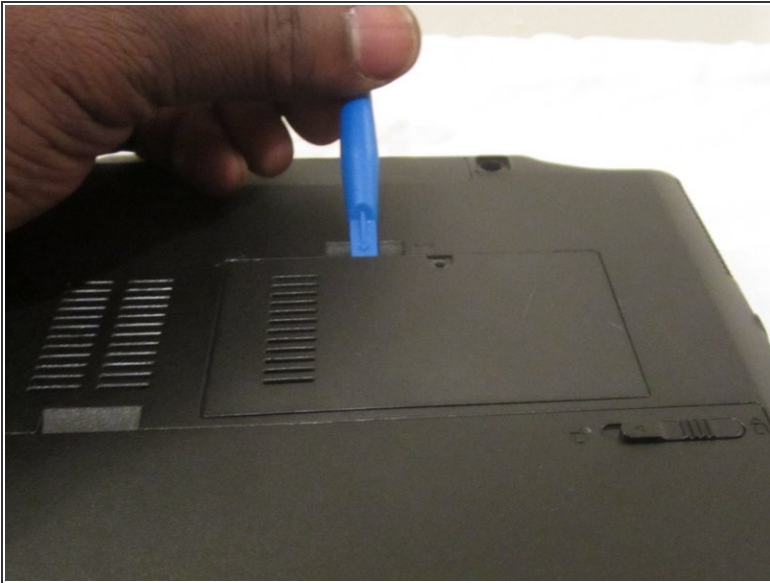



- Use a plastic opening tool to remove the cover.

   Step 8

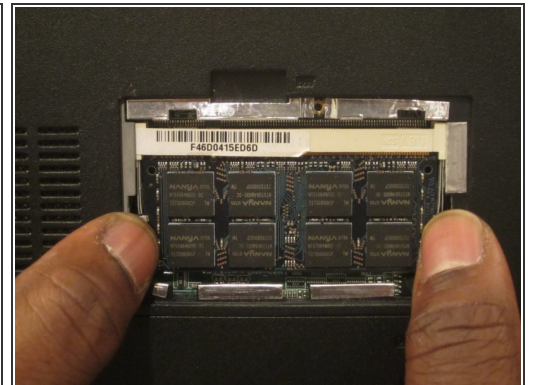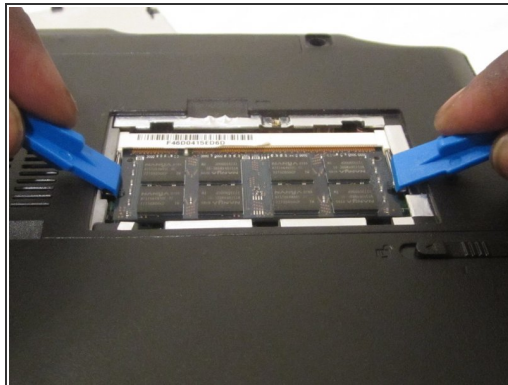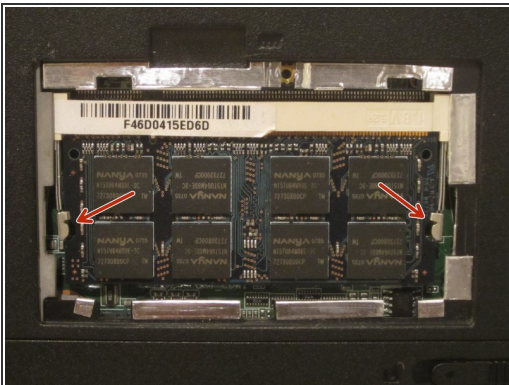

- In order to release the RAM module, you will need to move the metal tabs on both sides at the same time. This can be accomplished by using plastic opening tools or your fingers.

  Step 9

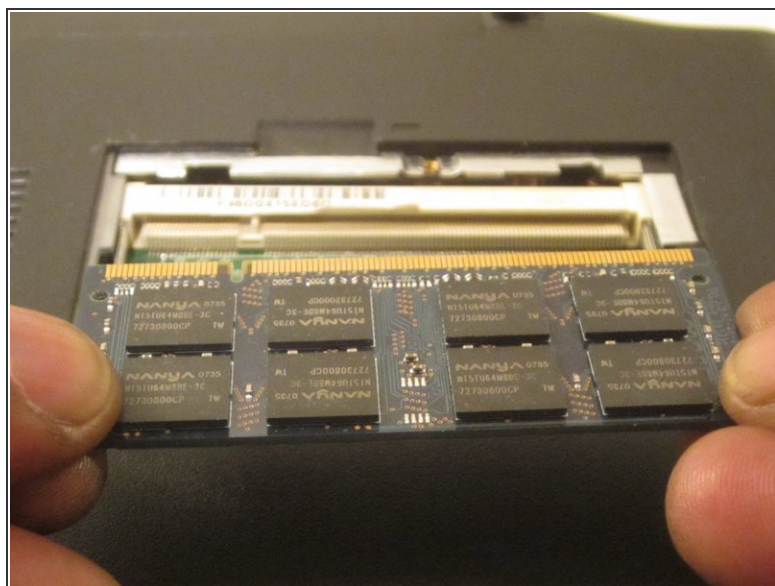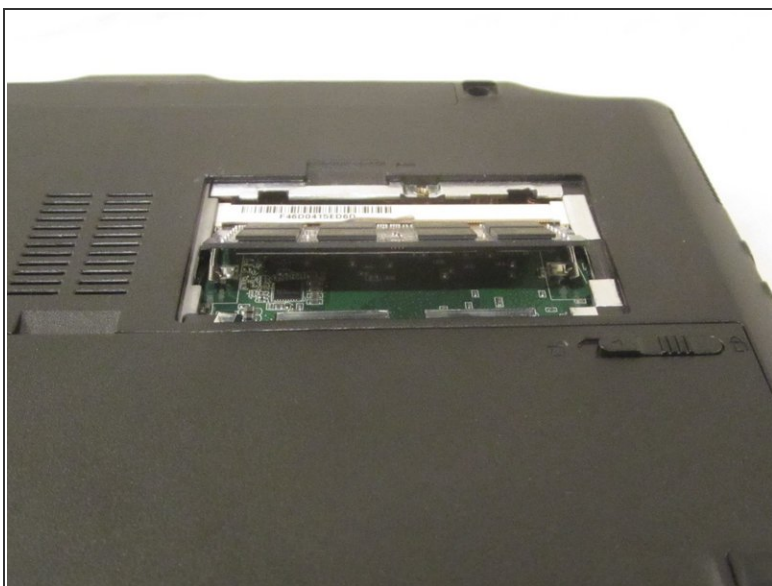

- Once you move the tabs, the RAM module will pop up and you can remove it with your fingers so you can put in a replacement.

To reassemble your device, follow these instructions in reverse order.