




Asus F555LA-AB31 CD Drive Replacement

This guide shows how to replace the compact disk drive in a Asus F555LA-AB31 laptop.

Written By: Darren Early

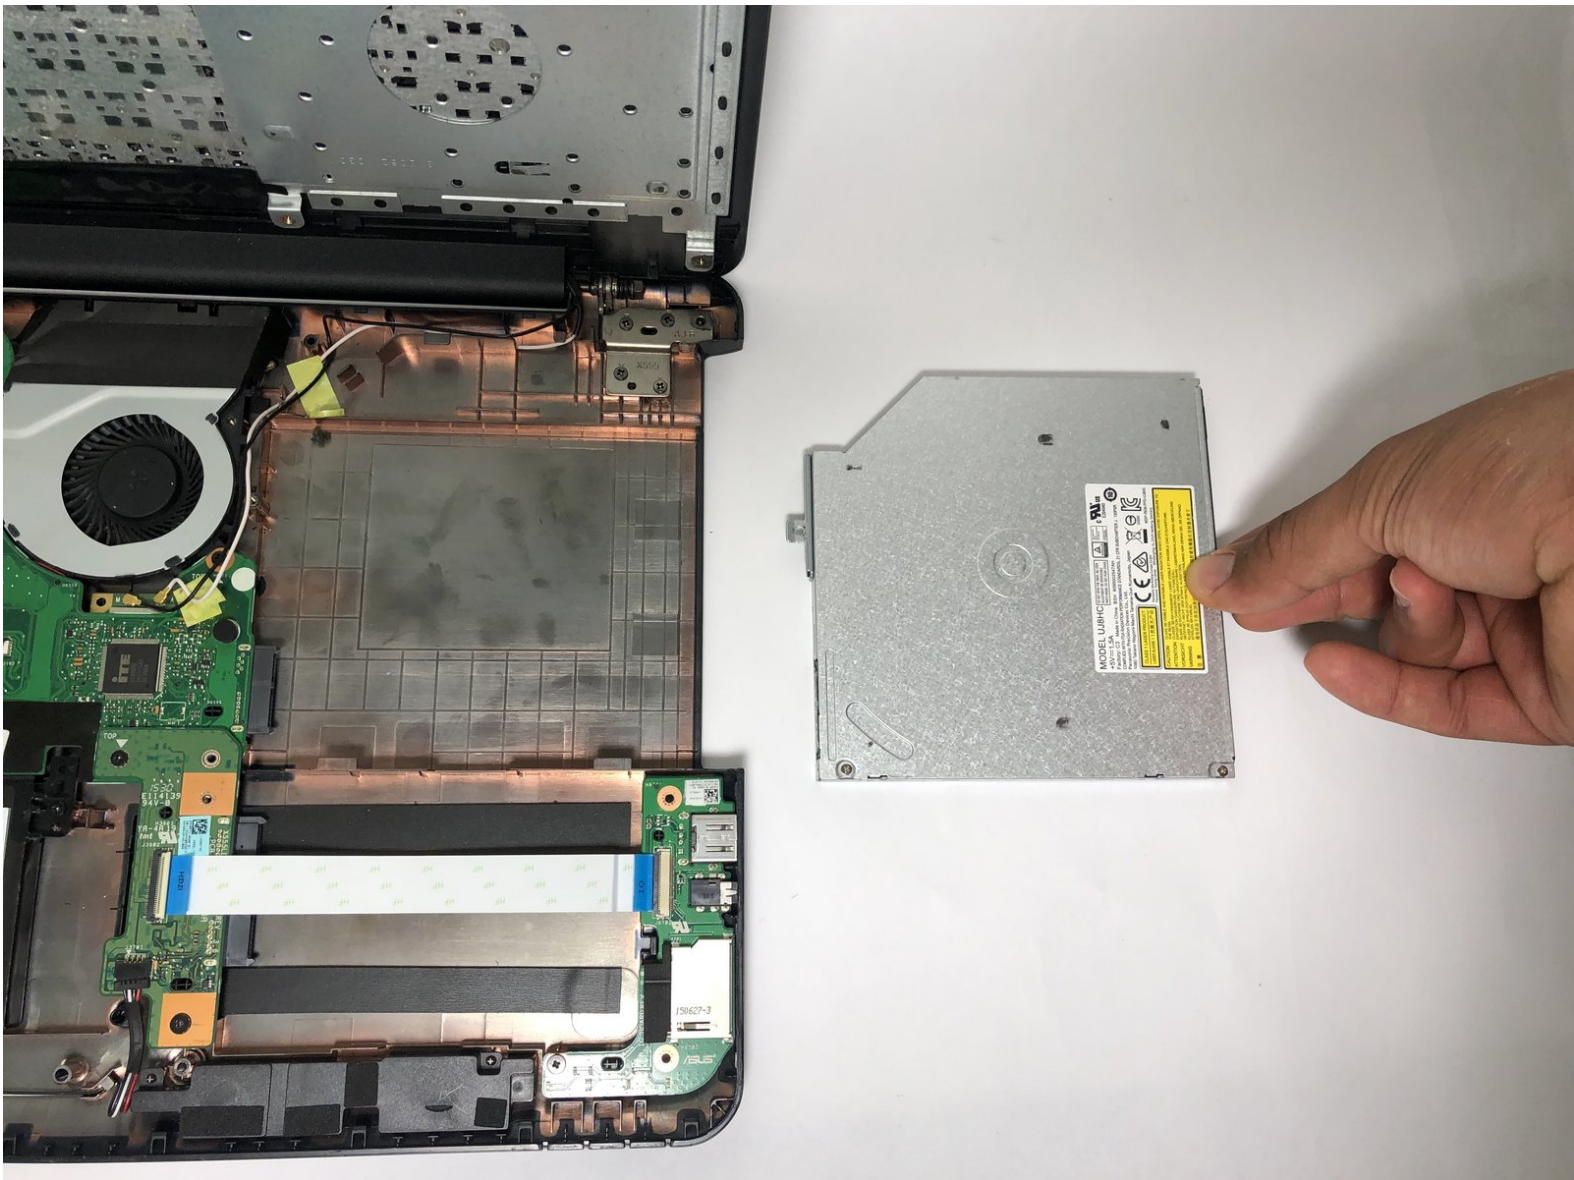




TOOLS:



- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — CD Drive

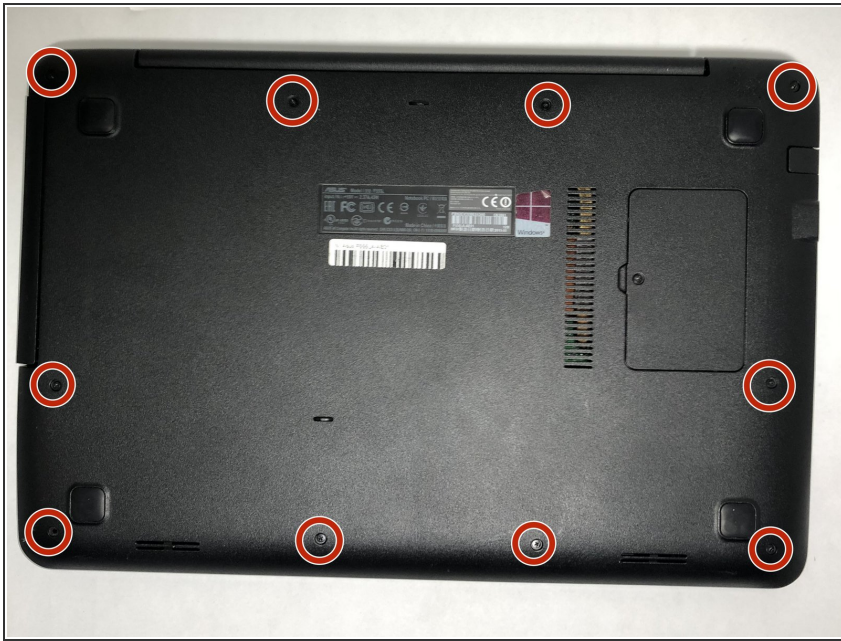



- Remove ten 18mm Phillips #0 screws from the backside of the device.
- ⓘ Removal of the RAM access panel is not necessary.

Step 2

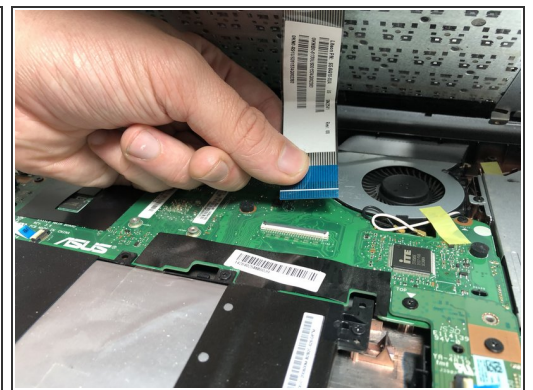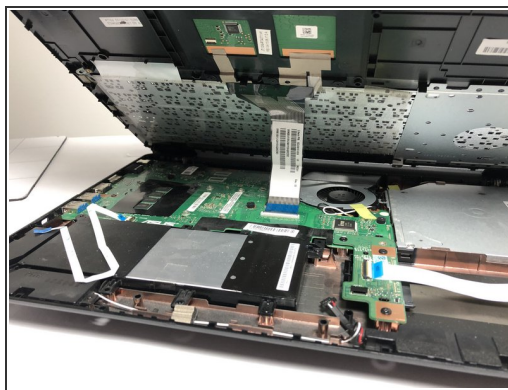

- Open the laptop.
 - Begin to pry upward on the edges of the faceplate in order to separate the keyboard and trackpad from the rest of the device.
- ⚠ Be cautious of the cables connecting the keyboard and trackpad to the motherboard.
- To remove the ZIF connector, gently lift upward on the blue tab to disconnect it from the motherboard.

Step 3

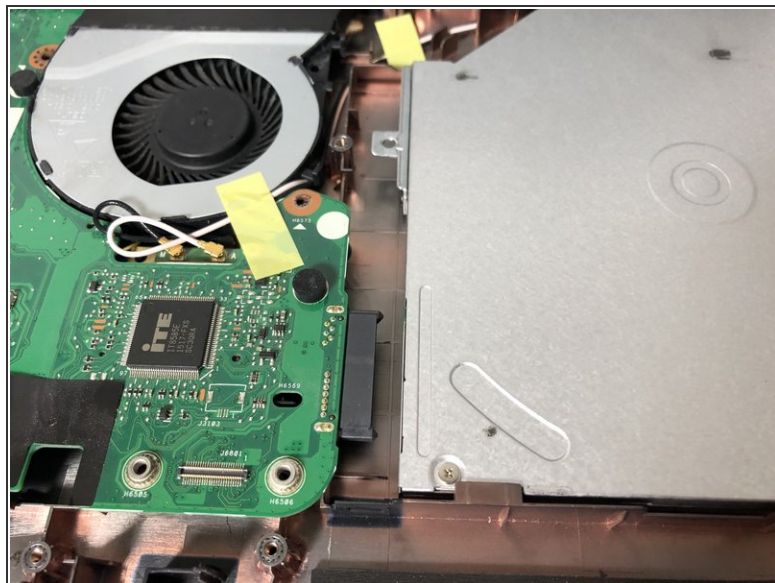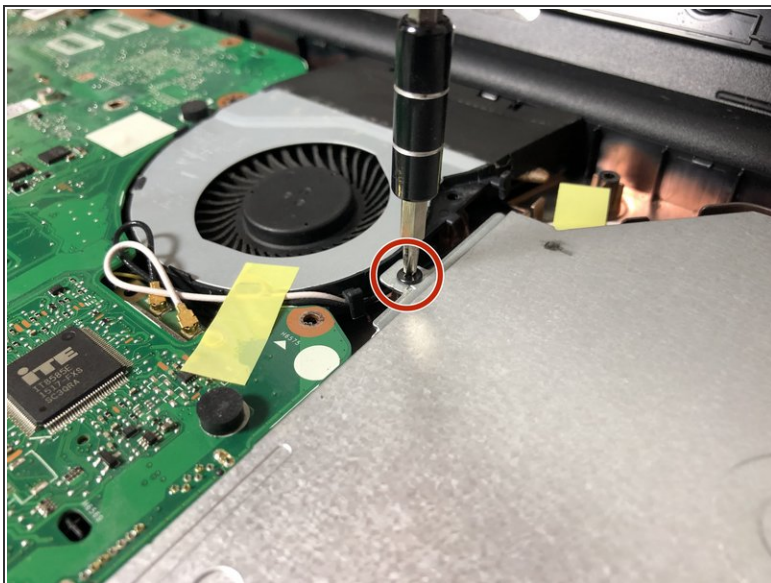

- Fold the faceplate upwards towards the screen to fully expose the inside of the laptop.
- Remove the CD Drive by unscrewing the single Phillips #0 screw and sliding the drive away from the motherboard.

To reassemble your device, follow these instructions in reverse order.