



Asus F555LA-AB31 Network Card Replacement

This guide will show you how to remove and replace the network card in your Asus F555LA-AB31 laptop.

Written By: David Burns




This document was generated on 2020-01-30 04:54:38 PM (MST).

 **TOOLS:**


- Phillips #0 Screwdriver (1)

Step 1 — CD Drive

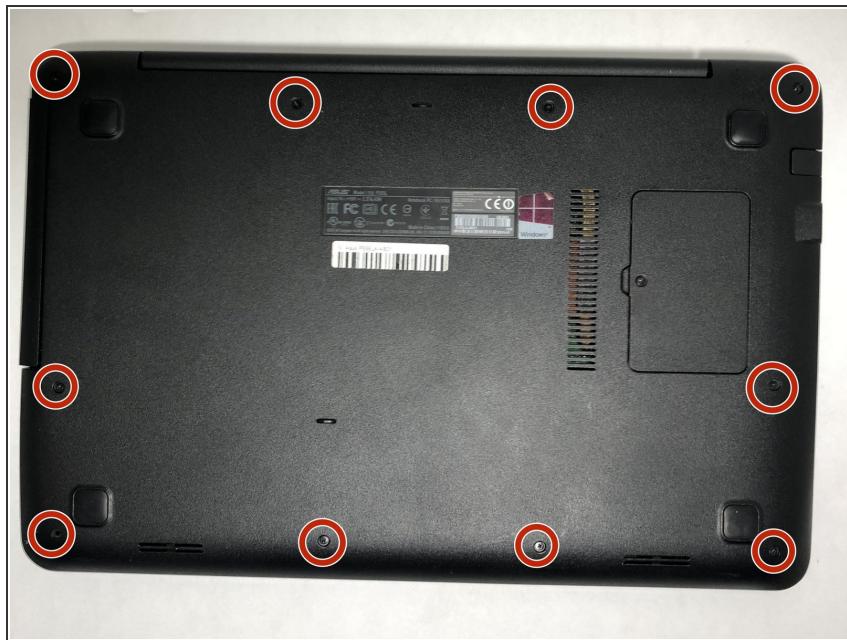

- Remove ten 18mm Phillips #0 screws from the backside of the device.
- *i* Removal of the RAM access panel is not necessary.

Step 2


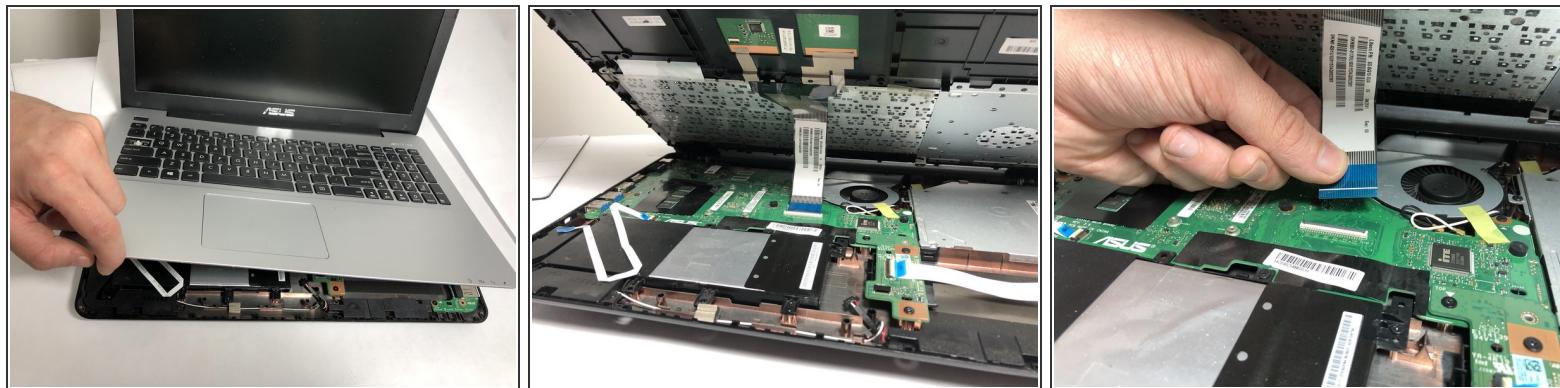


- Open the laptop.
- Begin to pry upward on the edges of the faceplate in order to separate the keyboard and trackpad from the rest of the device.

⚠ Be cautious of the cables connecting the keyboard and trackpad to the motherboard.

- To remove the ZIF connector, gently lift upward on the blue tab to disconnect it from the motherboard.

Step 3

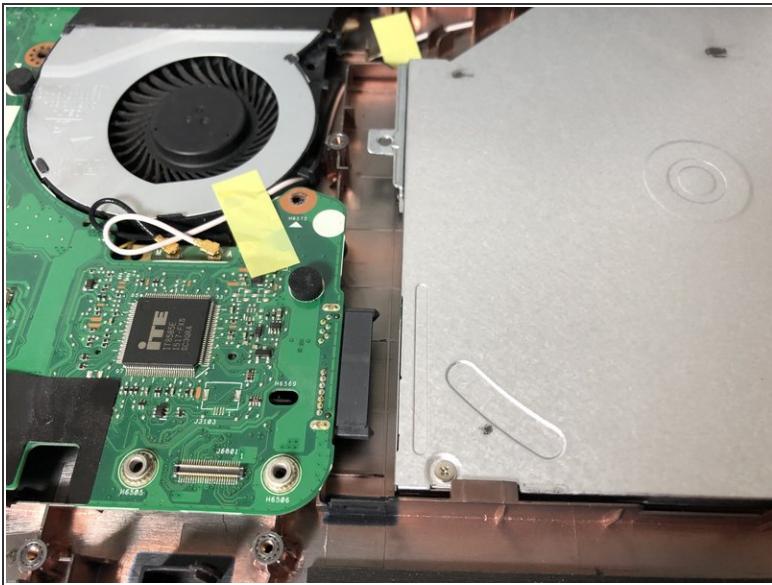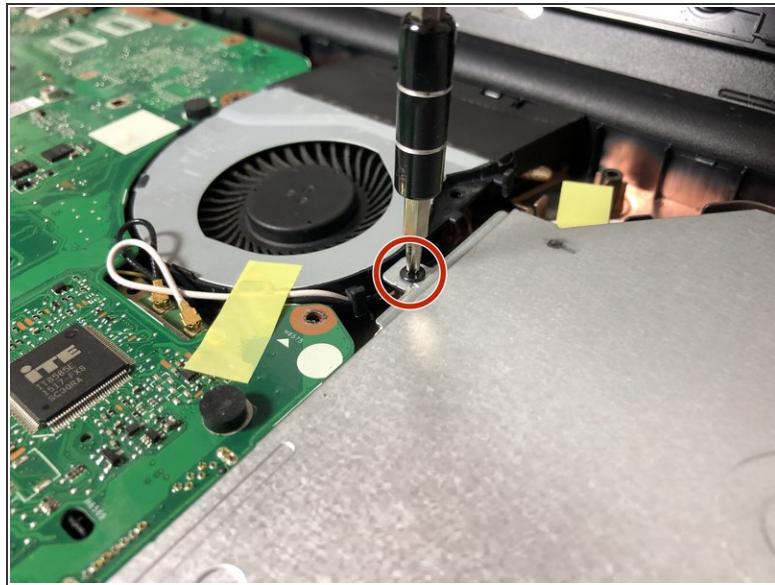


- Fold the faceplate upwards towards the screen to fully expose the inside of the laptop.
- Remove the CD Drive by unscrewing the single Phillips #0 screw and sliding the drive away from the motherboard.

Step 4 — Hard Drive



- Remove ten 18mm Phillips #0 screws from the backside of the device.
- *Removal of the RAM access panel is not necessary.*

Step 5

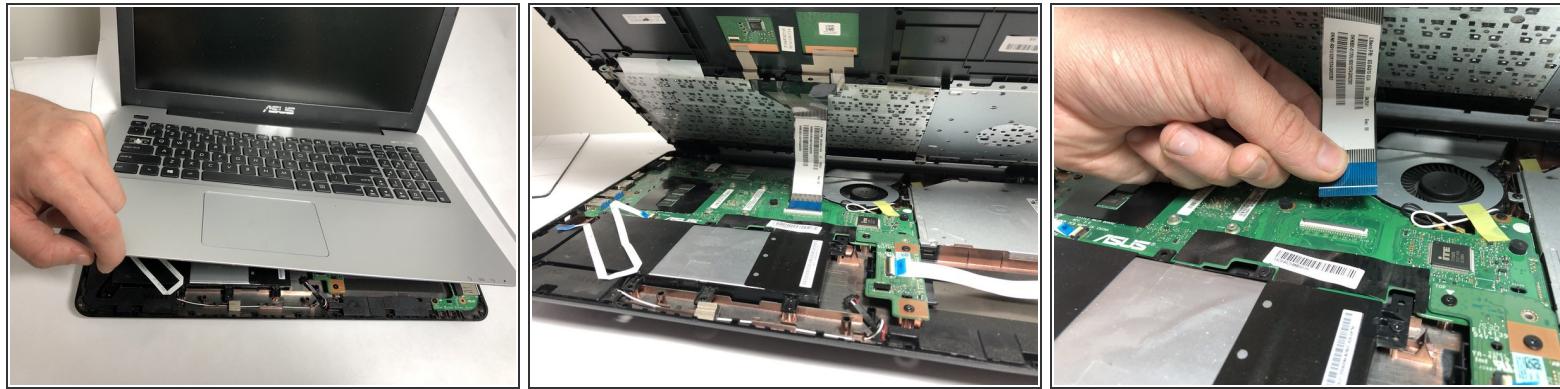

- Carefully fold the device open.
- Begin to pry upward on the edges of the faceplate in order to separate the keyboard and trackpad from the rest of the device.

 Be cautious of the cables connecting the keyboard and trackpad to the motherboard.

- To remove the ZIF connector, gently lift upward on the blue tab to disconnect it from the motherboard.

Step 6





- Fold the keyboard section of the laptop up towards the screen to fully expose the inside of the device.
- Unscrew the four 4mm Phillips #0 screws holding down the hard drive.

Step 7




- Disconnect the ZIF connector and lift the hard drive out of the space.

Step 8 — Battery

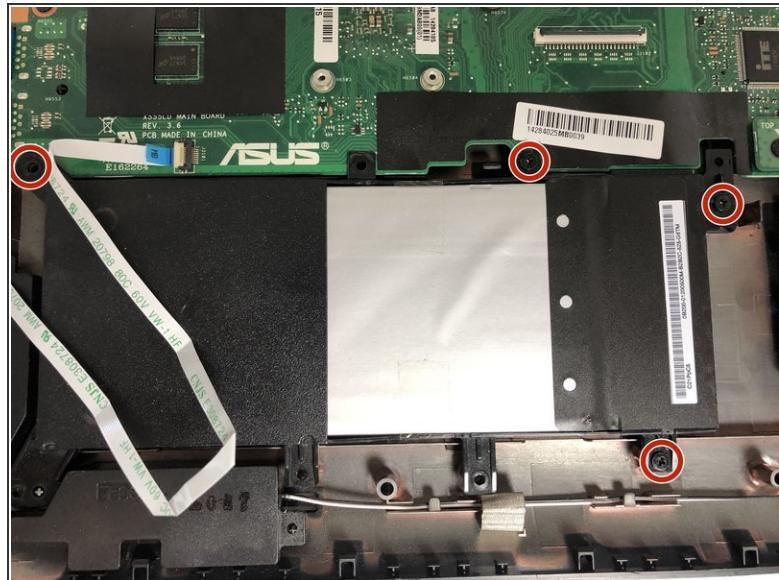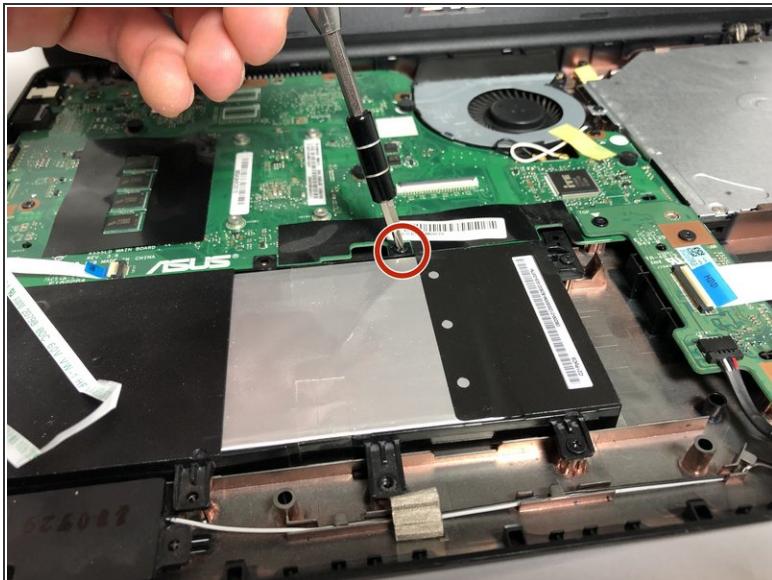


- Remove the 4mm Phillips #0 screws.

Step 9

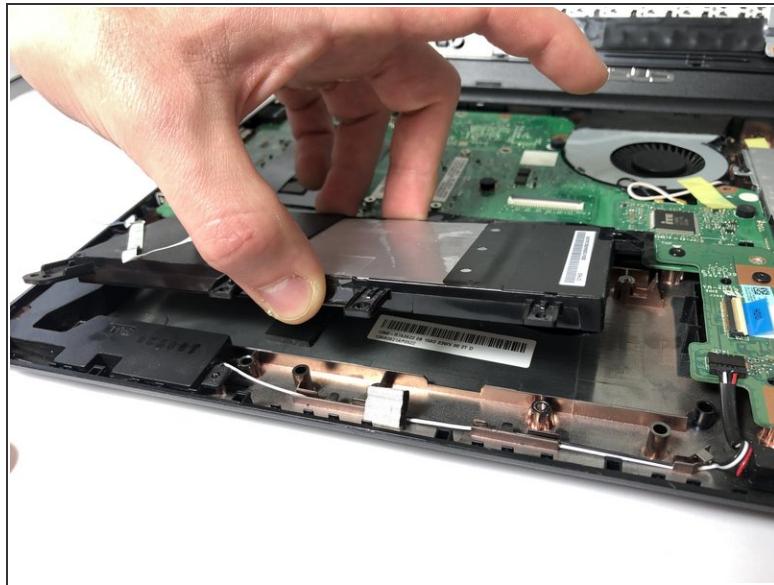

- Lift up battery and remove.

Step 10 — Network Card

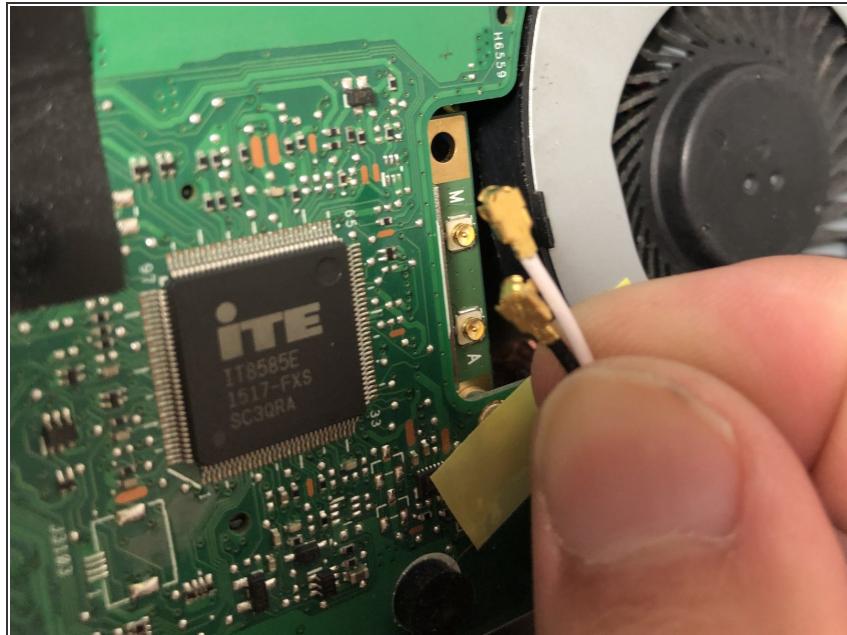

- Disconnect the two wires connected to the network card.

Step 11



- Remove the seven Phillips #0 screws holding the motherboard down.
- Lift the motherboard upwards, folding it towards the laptop chassis.
- Unscrew the Phillips #0 screw holding down the network card, and slide it out.

To reassemble your device, follow these instructions in reverse order.