



# Asus F6A-X2 Battery Replacement

A step-by-step guide for replacing the laptop's battery.

Written By: Jonathan



This document was generated on 2019-09-18 03:37:53 PM (MST).

## INTRODUCTION

The main battery provides portable power to the laptop. Without the battery, the laptop cannot stay powered on without a power cord. Make sure to select a compatible battery for this laptop when replacing it.

## Step 1 — Battery



 Remove any power cords and turn the laptop off. Attempting to replace part of the laptop while power is running through it may cause electrocution or damage to the device.

- Flip laptop face down and rotate so the battery is facing toward you.
-  The battery is not shown in this picture.
- To remove the battery, place one finger on each of the two black slide tabs. Push each tab toward the center of the laptop to release the lock.
- Slide the battery toward you and lift it out of the laptop.

To reassemble your device, follow these instructions in reverse order.