



Asus G501JW-BHI7N12 Device Page RAM Replacement

This guide will remove a ram stick in order to replace it.

Written By: Bruce Baker




INTRODUCTION

Make sure your replacement RAM stick is compatible with this model of laptop before you dispose of your old one. Improving RAM can help your computer run faster and handle more tasks at once.

TOOLS:


- [Anti-Static Wrist Strap \(1\)](#)

Step 1 — RAM

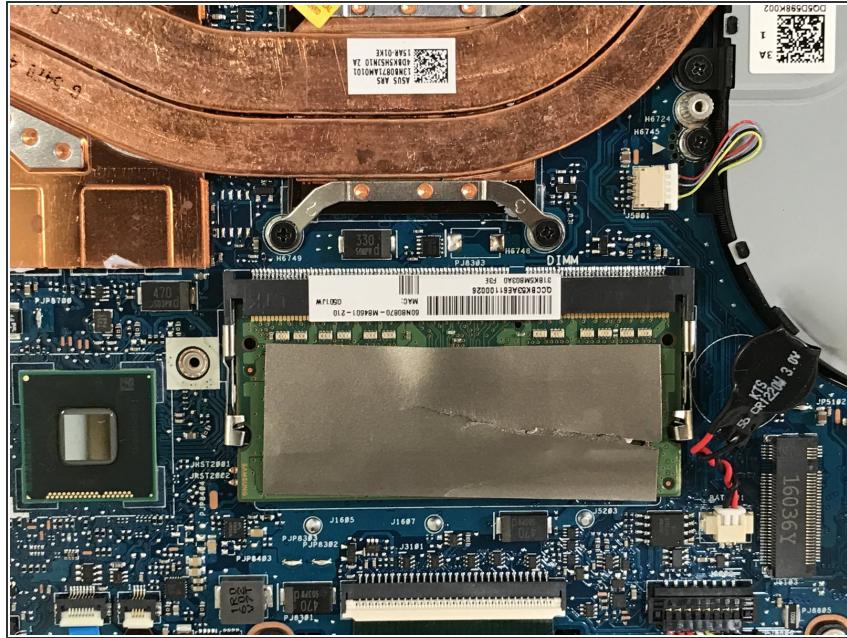


- Attach the Anti-Wrist Strap to the corner of the laptop case.
- Remove metallic tape off the ram.

Step 2

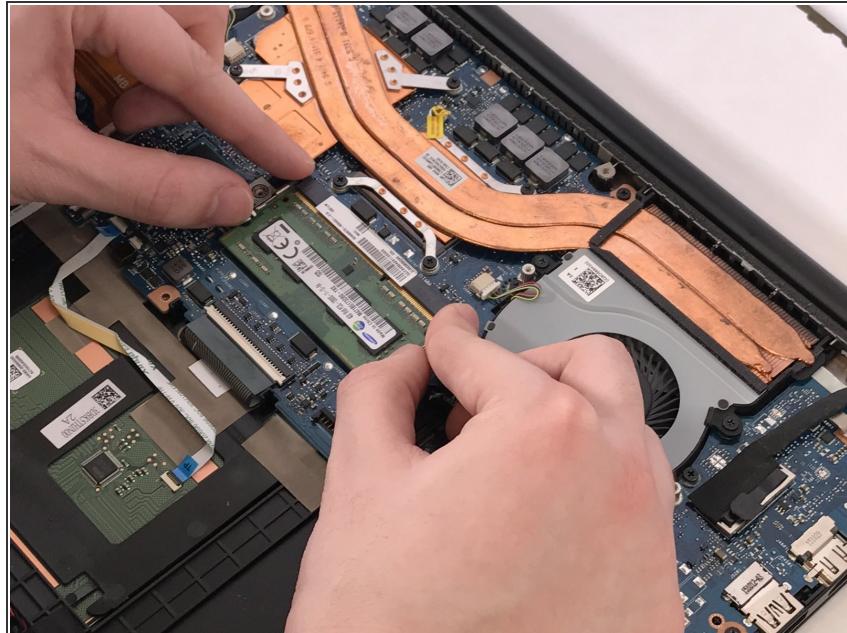


- Place fingers on metal clamps that hold the RAM stick in place.

Step 3

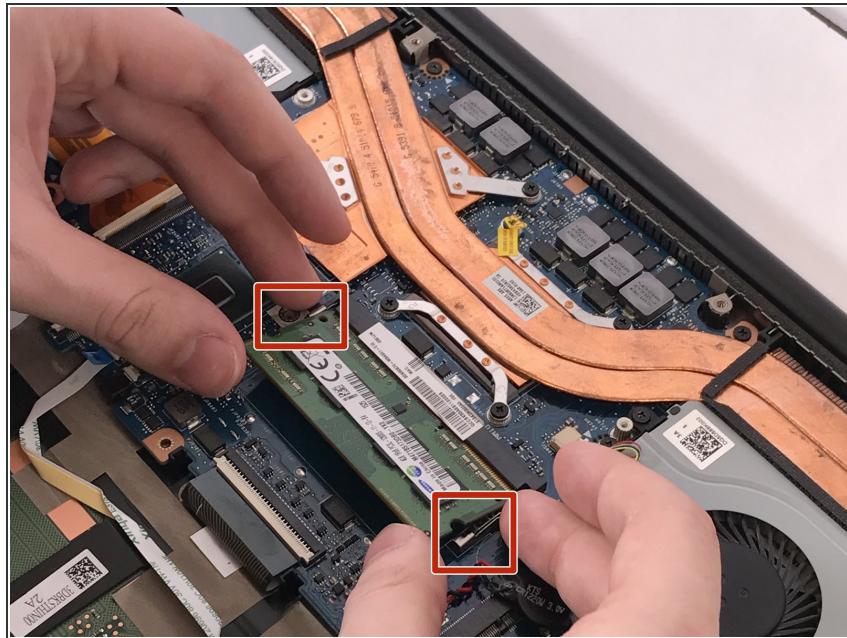

- Pull metal clamps and lift RAM stick up.

Step 4

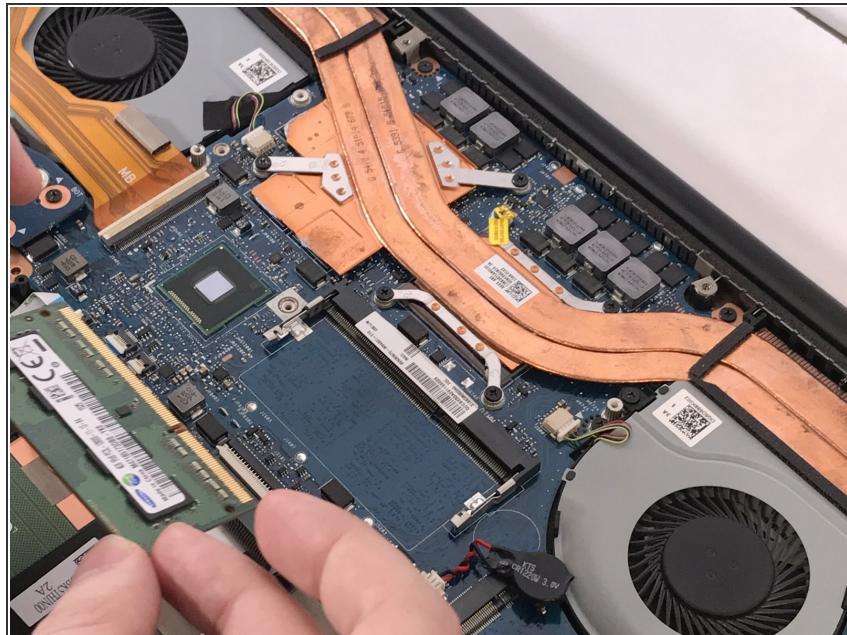

- Pull the RAM stick out of the motherboard.

To reassemble your device, follow these instructions in reverse order.