



Asus G750JW-BB17N05 Battery Replacement

If your Asus G750JW-BB17N05 laptop has lost or is losing power, this guide will help you replace the battery.

Written By: Sandy Jewell



INTRODUCTION

As a laptop battery ages, it will gradually lose the ability to hold a charge and die more quickly. This guide will show you how to replace your battery and bring life back to your laptop.

Step 1 — Battery



- Power off and unplug your laptop, then turn it over.

Step 2



- Slide the battery release latch all the way to the right. This will cause the battery to "pop" out slightly.

Step 3



- Remove the battery from its compartment.

To reassemble your device, follow these instructions in reverse order.