



# Asus G75VW-BHI7N07 Optical Drive Assembly Replacement

Remove the optical drive to fix DVD/CD issues.

Written By: Joy



## INTRODUCTION

The optical drive can wear out over time or stop working completely. This guide will show you how to remove the optical assembly on the side of the device.

### TOOLS:


- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Optical Drive




- If you have power, press the eject button.
- If you don't have power, use the opening tool to pry off the disk drive cover.
- Press the Manual Eject button with the spudger and the disk drive should slide out. (Might need tweezers if it doesn't pop out immediately)
- Once the disc drive pops out, flip the laptop over.

## Step 2

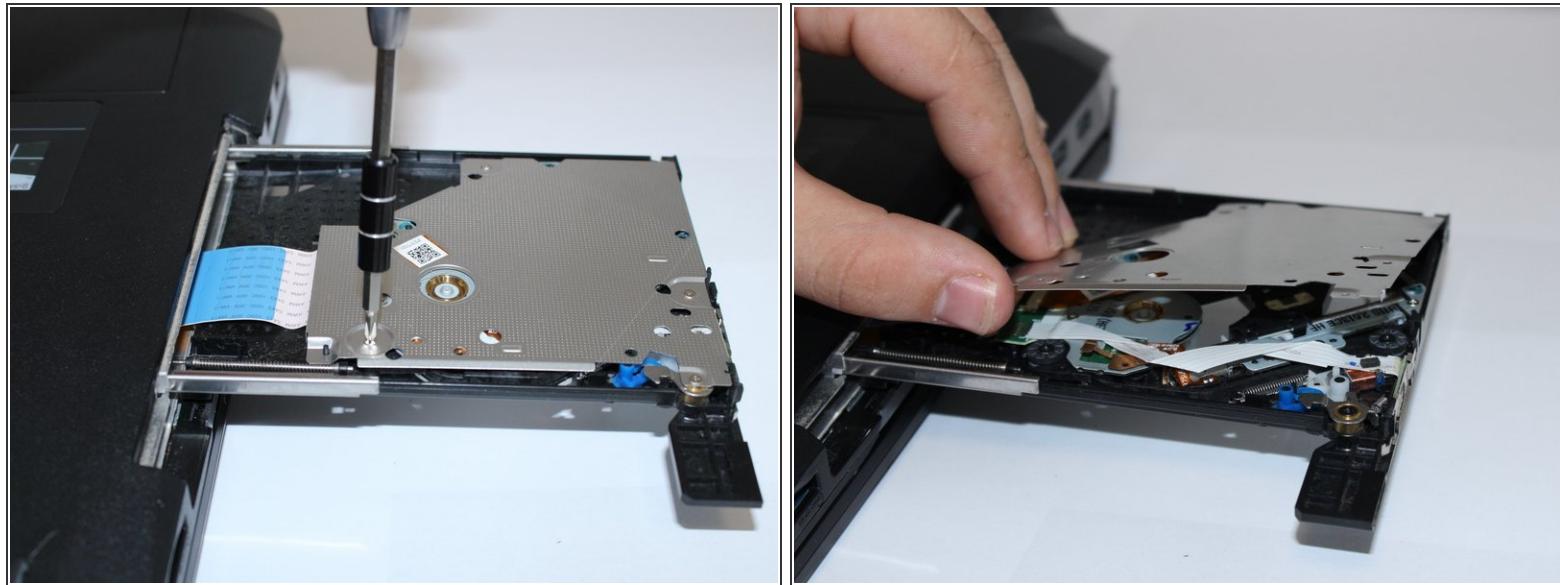

- Remove the 4 screws that hold down the metal plate with the J0 Phillips-head screwdriver.
- Put the screws onto the magnetic pad, to avoid losing any.
- Lift the metal plate off the optical drive with your fingers.

## Step 3

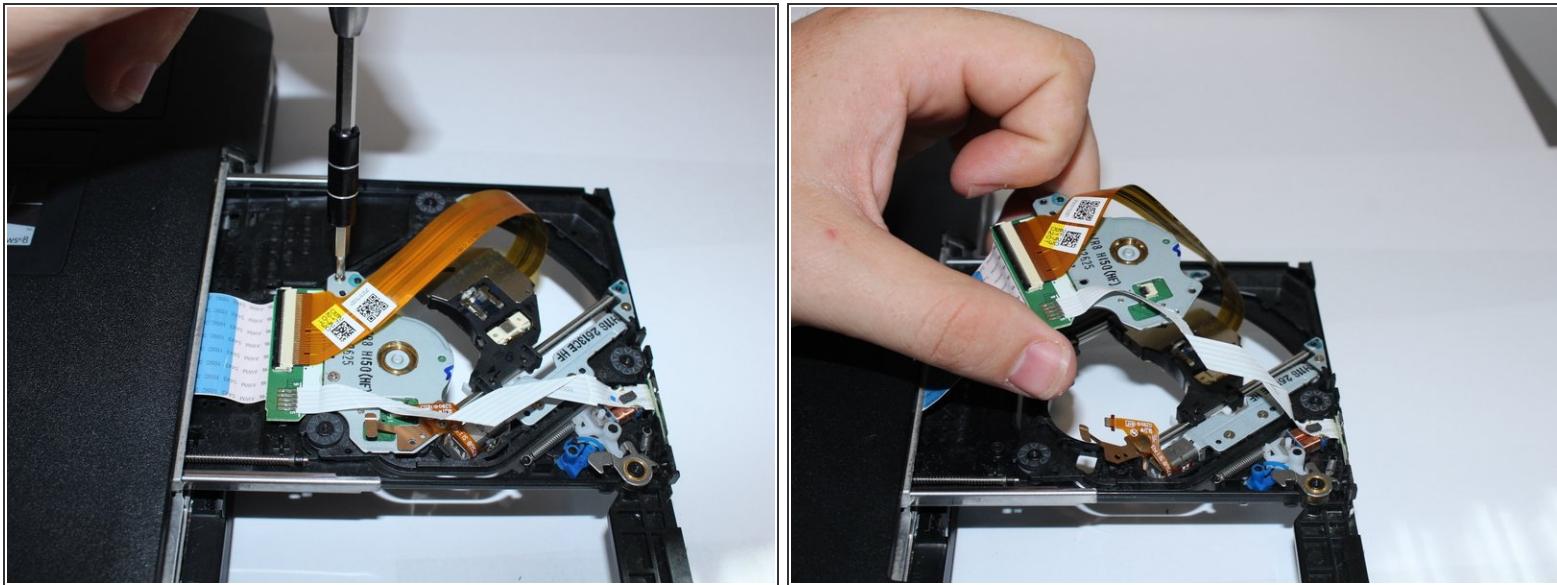

- Remove 3 screws of disc drive with the J0 Phillips-head screwdriver.
- Pick up the disc drive assembly and pull it out.

## Step 4



- Remove optical assembly by hand.
- Remove disc reader by removing 2 bolts from the top using the J0 Phillips-head screwdriver.
- Lift the metal piece out.

 Make sure no edges are sticking out when putting the metal plate back in place.

To reassemble your device, follow these instructions in reverse order.