



Asus GL551JW-AH71 Hard Drive Replacement

This is a guide outline how to replace the hard drive for a Asus GL551JW-AH71

Written By: William Kelley



INTRODUCTION

This guide outlines how to remove the hard drive in the Asus GL551JW-AH71. This guide also serves as a prerequisite for guides that require the removal of the back cover.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)


Step 1 — Battery



- Close the device and lay it upside down.

 Unplug the device and make sure the device is powered off before removing the battery.

Step 2

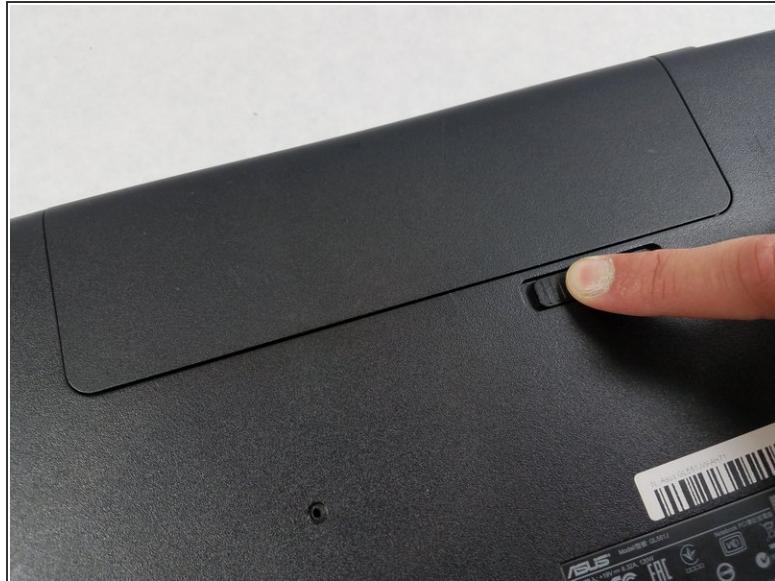

- Move the battery eject button to the right. The battery will be ejected.

Step 3



- Grab the battery and remove it from the device.

Step 4 — Hard Drive





- Use a Phillips #000 screwdriver to remove the two 16 mm screws on the access panel.

Step 5



- Remove the access panel by lifting it up.

Step 6

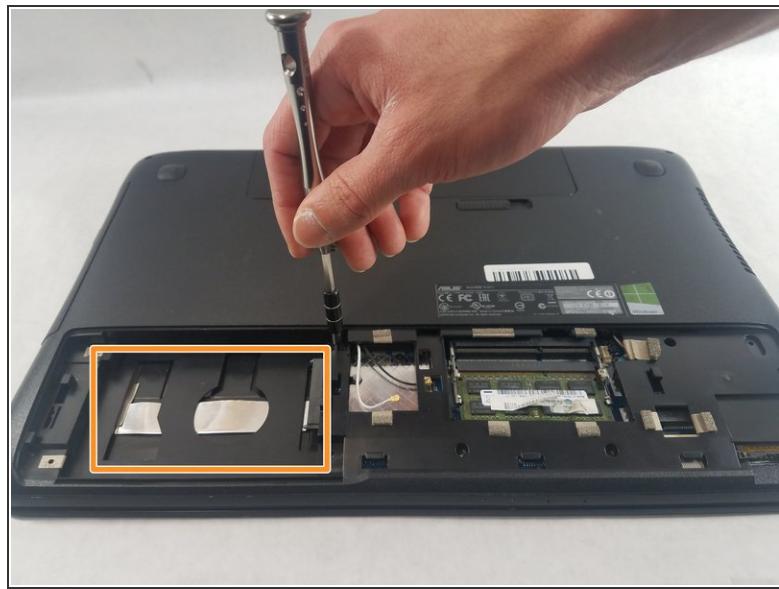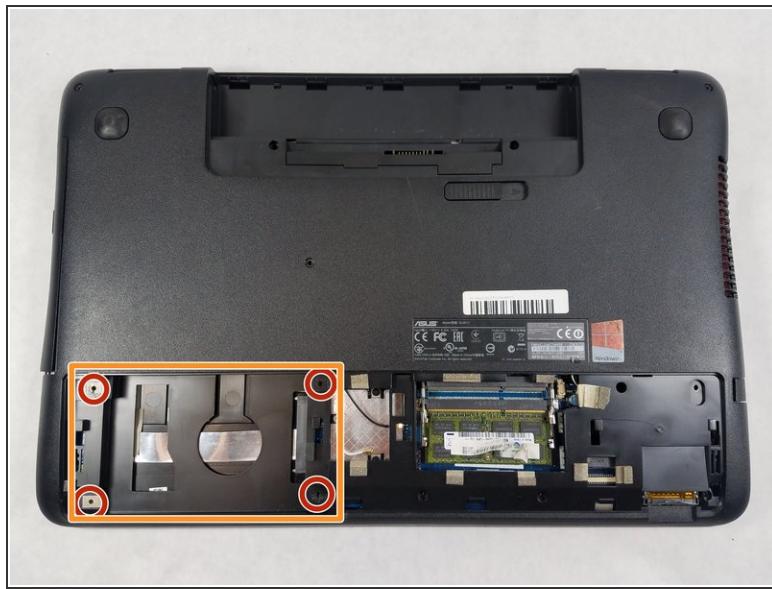

- Using the Phillips #000 screwdriver, remove the four screws holding the hard drive in place.

(i) The pictures in this step do not contain a hard drive. The location where the hard drive would be located is indicated by the orange rectangle.

Step 7



- Pull out hard drive.

To reassemble your device, follow these instructions in reverse order.