


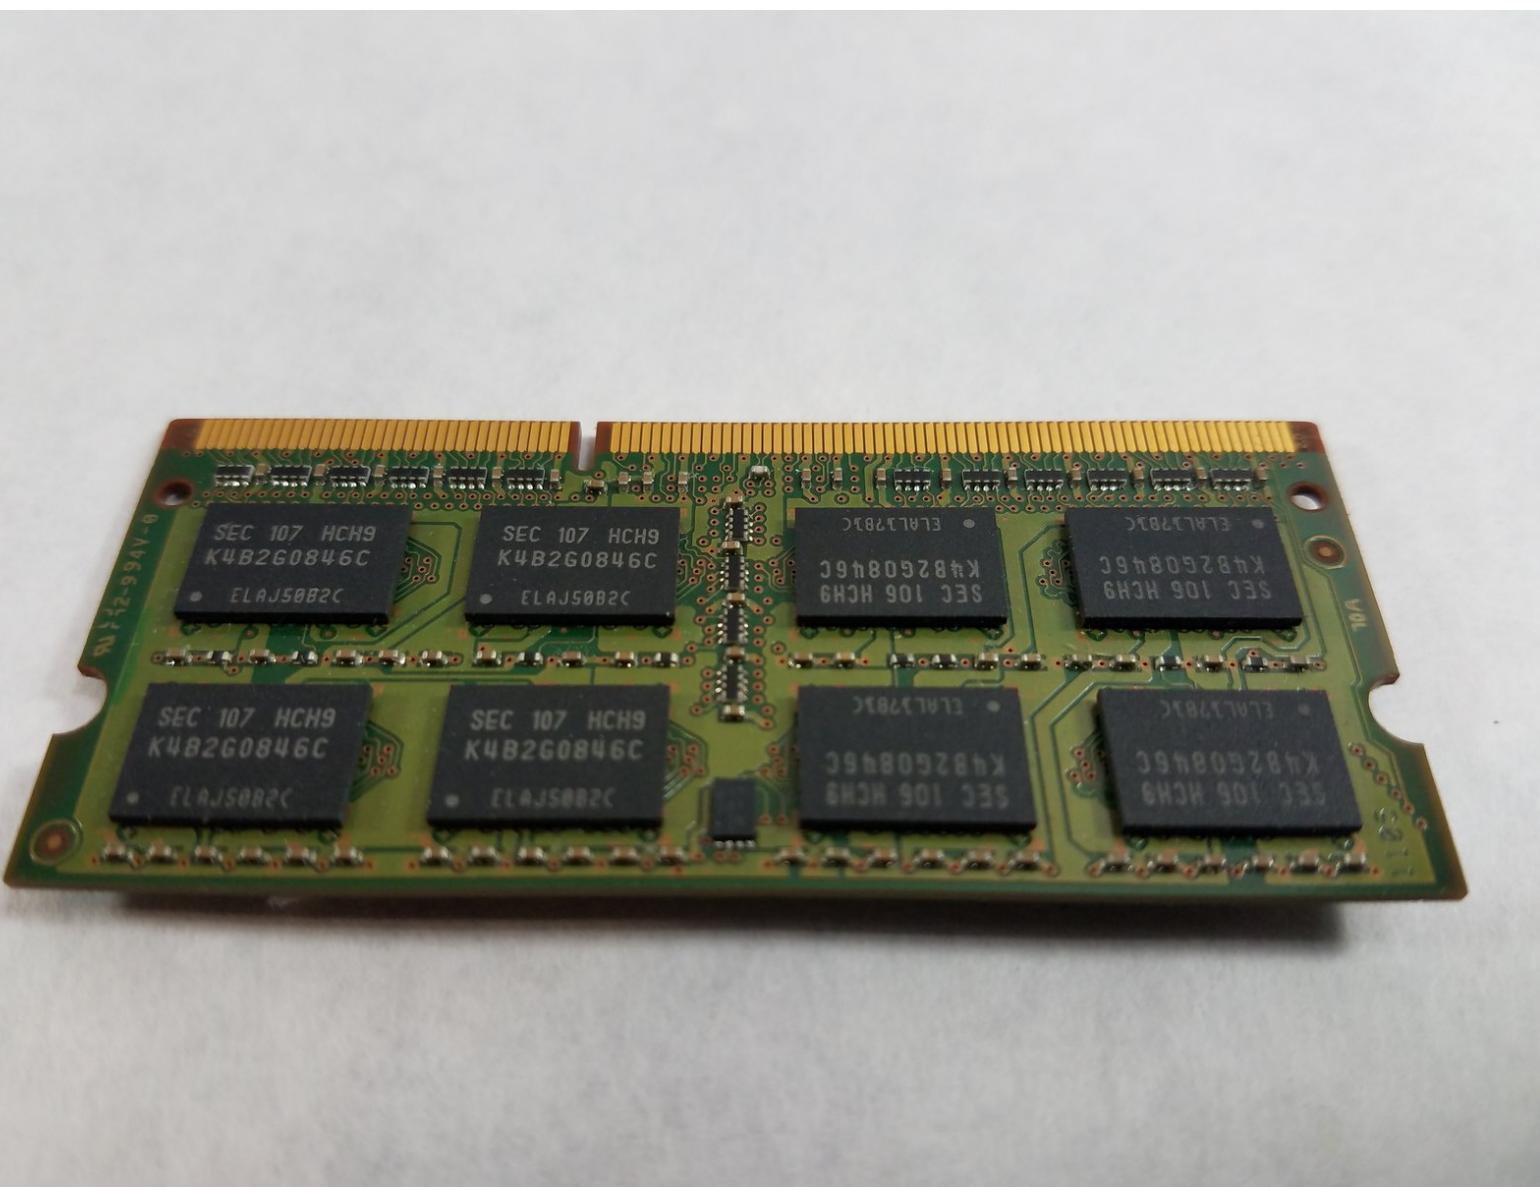

Asus GL551JW-AH71 RAM Replacement

This guide outlines how to replace the RAM in the Asus GL551JW-AH71.

Written By: William Kelley



INTRODUCTION

This guide outlines how to replace the RAM in the Asus GL551JW-AH71.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Close the device and lay it upside down.

 Unplug the device and make sure the device is powered off before removing the battery.

Step 2



- Move the battery eject button to the right. The battery will be ejected.

Step 3



- Grab the battery and remove it from the device.

Step 4 — RAM



- Using a Phillips #00 screwdriver, remove the two 11mm screws that hold the access panel in place.

Step 5



- Remove the access panel by lifting it up.

Step 6



- Locate the tabs holding the RAM chip in place.
- Push the tabs in an outward direction from the RAM and the RAM will be released.
- Gently remove the RAM from the motherboard.

To reassemble your device, follow these instructions in reverse order.