



Asus MeMO Pad 7 ME176C Side Buttons Replacement

Use this guide to replace or clean the buttons on your Asus MeMO Pad 7 ME176C.

Written By: Jeffrey Sorenson




INTRODUCTION

This guide will take you through the necessary steps to replace or clean the buttons on your Asus MeMO Pad 7 ME176C.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Side Buttons

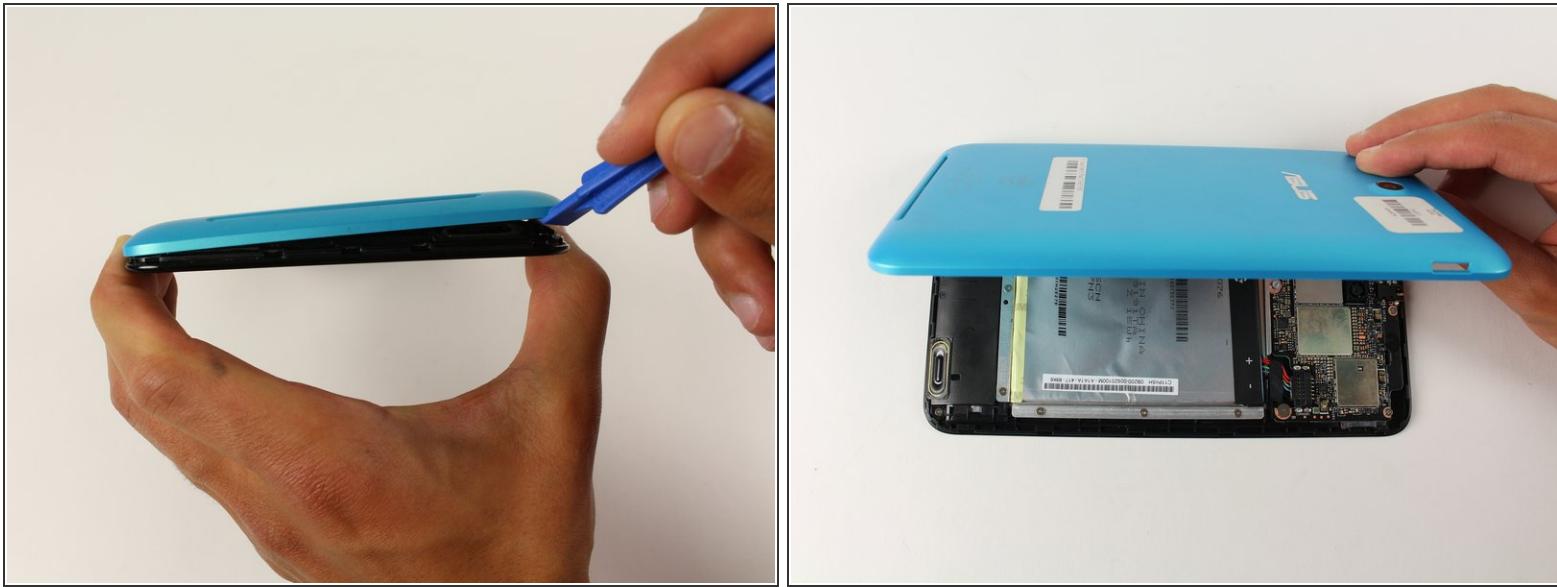


- Separate the front and back by prying in between the two with a plastic opening tool.

Step 2



- Now that the back has been removed, you can see the buttons marked in red.
- Remove the buttons using the plastic opening tool.

Step 3

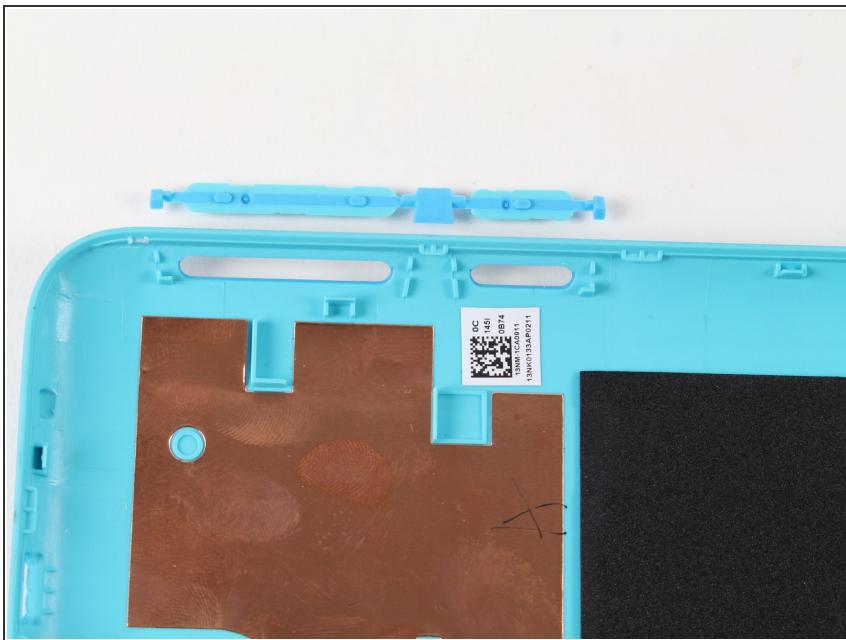

- Your buttons have been removed.
You may now clean or replace them.

To reassemble your device, follow these instructions in reverse order.