



Asus MeMO Pad 7 ME176C Speaker Replacement

Learn how to disassemble your malfunctioning speakers on the ASUS MeMo Pad and replace them

Written By: Maxime



This document was generated on 2019-10-11 06:39:19 PM (MST).

INTRODUCTION

This guide will take you through the necessary steps to replace the speakers in your Asus MeMO Pad 7 ME176C.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [Phillips PH000 Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Speakers



- Make sure device is turned off. Carefully remove the light blue back panel with a plastic tool by working around the edges.

Step 2

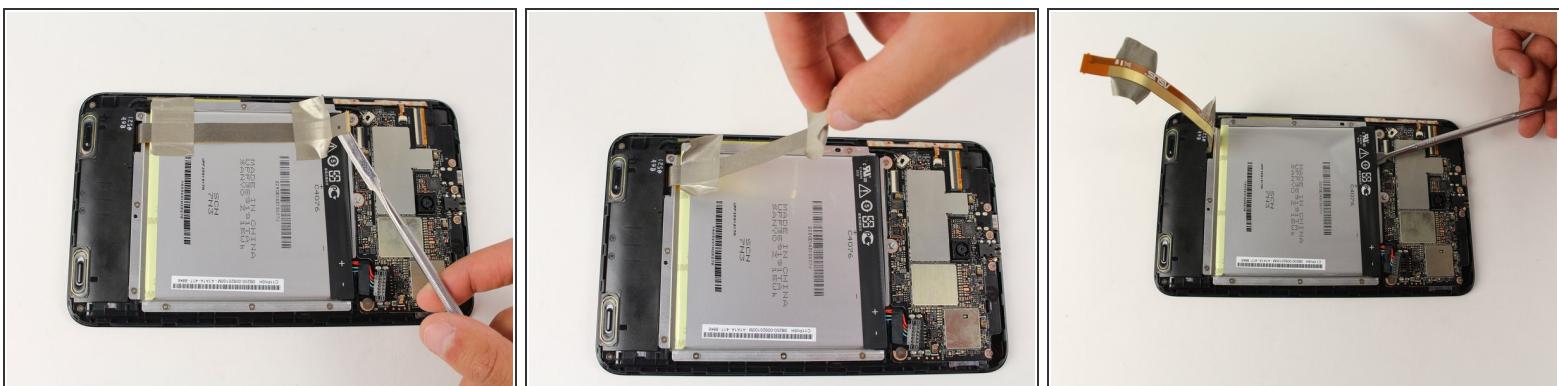

- Disconnect the ZIF connectors to release the cables holding in the battery.


 ZIF connectors are fragile, so work with caution.

Step 3



- Locate where the battery is connected on the device.
- Using tweezers or a plastic opening tool, carefully disconnect the connector and remove the battery.

Step 4

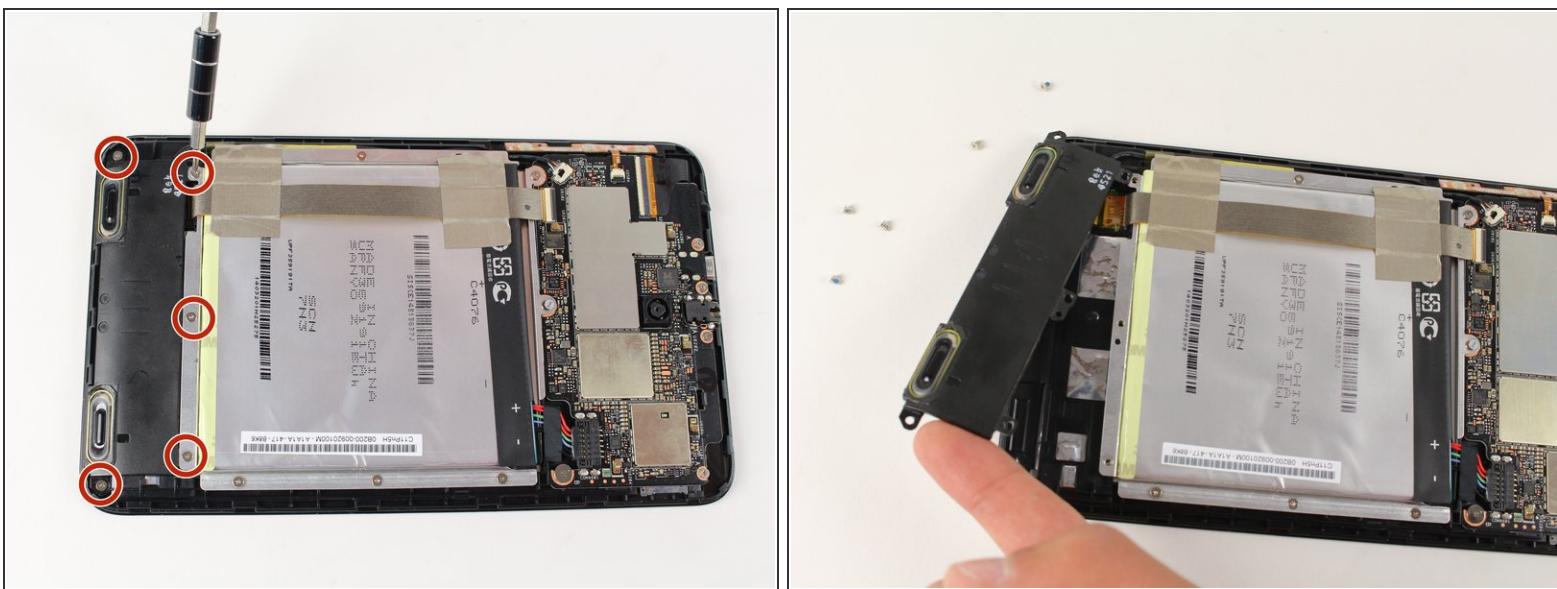


- Using a Phillips head screwdriver PH000, locate the 2.6mm screws and gently unscrew them from the device.

 Place these screws somewhere you will remember.

 Unscrew without applying pressure to the screen, which may cause it to break.

Step 5

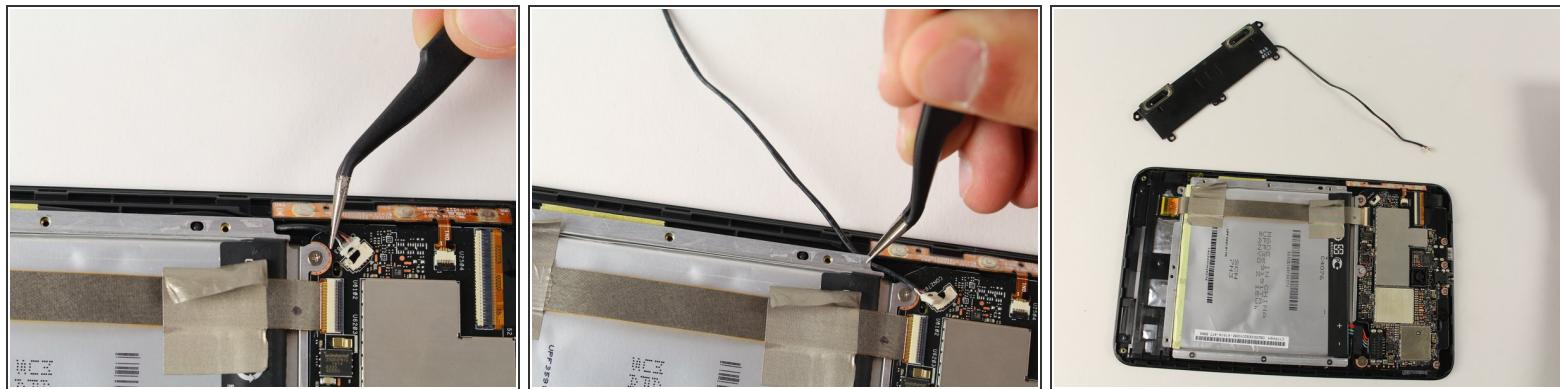

- Locate where the speaker is connected on the motherboard.
- Carefully remove the wire connected to the motherboard, then remove the speaker system completely.

 Be sure not to damage other components on the motherboard when doing so.

To reassemble your device, follow these instructions in reverse order.