



Asus MeMO Pad HD 8 ME180A Touch Screen Replacement

Please review this guide if you are looking to learn about replacing the touch screen on an Asus MeMO Pad HD 8 ME180A.

Written By: Rebecca Ellerhorst



INTRODUCTION

You will learn how to replace the touch screen. Review this guide if you are having difficulties with the touch screen. In order to replace the touch screen, you have to remove the battery and motherboard. Please use our Asus MeMO Pad HD 8 ME180A Battery Replacement Guide and Asus MeMO Pad HD 8 ME180A Motherboard Replacement Guide to do so prior to starting.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [iOpener](#) (1)

Step 1 — Touch Screen



- Flip the device and let the touch screen face you.

Step 2



- Use the plastic opening tool to carefully separate the touchscreen from the LCD.

i Some heating may be required to melt the glue on the inside of the tablet, but this is not always the case.

 Check out iFixit's [iOpener Instructions](#) if you need further assistance.

Step 3



- Lift the touch screen straight up to separate.

To reassemble your device, follow these instructions in reverse order.