




Asus Q325U Battery Replacement

How to replace the battery in your Asus Q325U.

Written By: Flo Costa

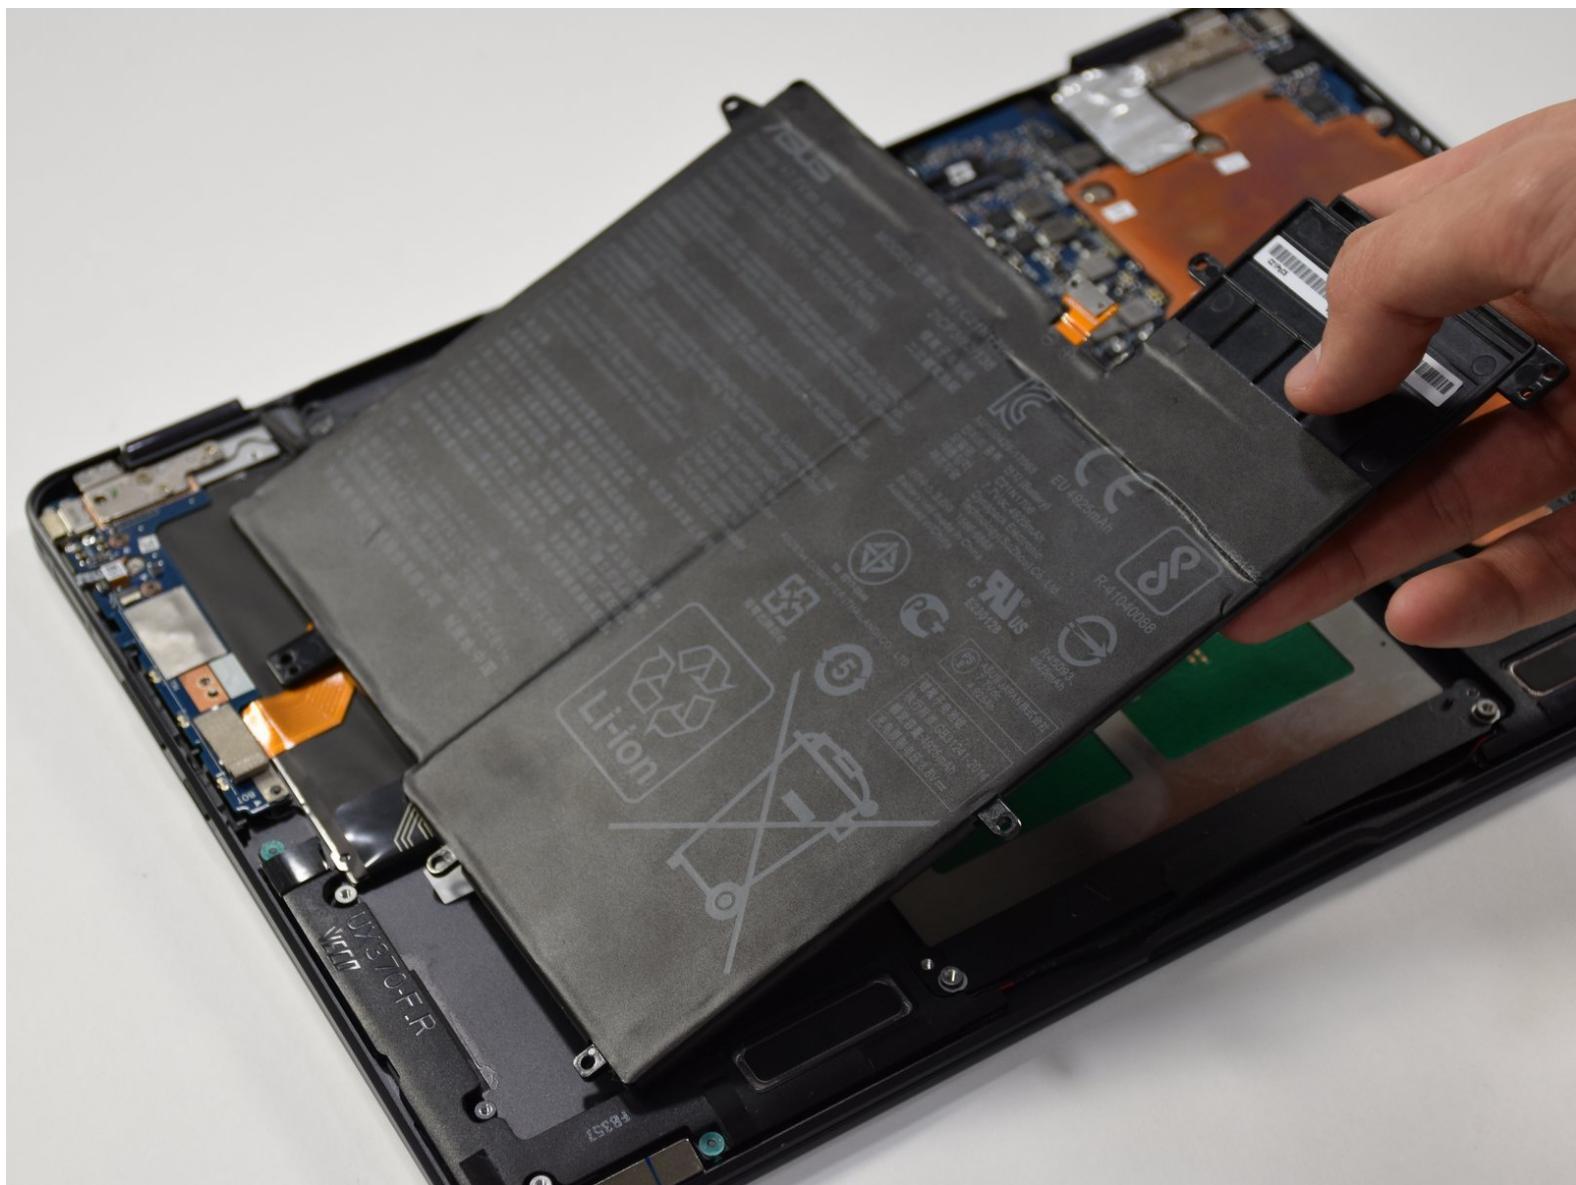

INTRODUCTION

This guide will take you through the steps needed to replace the battery in your Asus Q325U.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Suction Handle](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Back Panel




- Remove the ten 5mm screws using a T5 Torx screwdriver.

Step 2





- Lift the back panel upward using the suction tool.

Step 3 — Battery

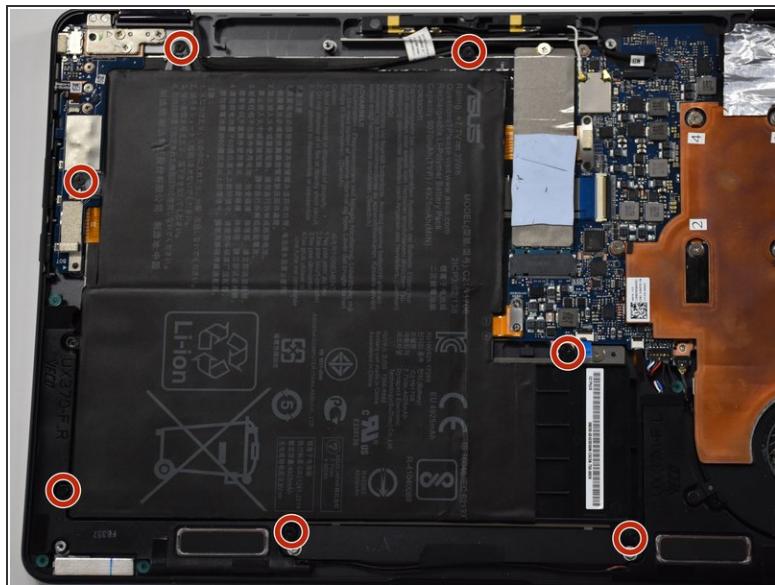


- Remove the seven 5mm screws around the battery using a Phillips #00 screwdriver.

Step 4

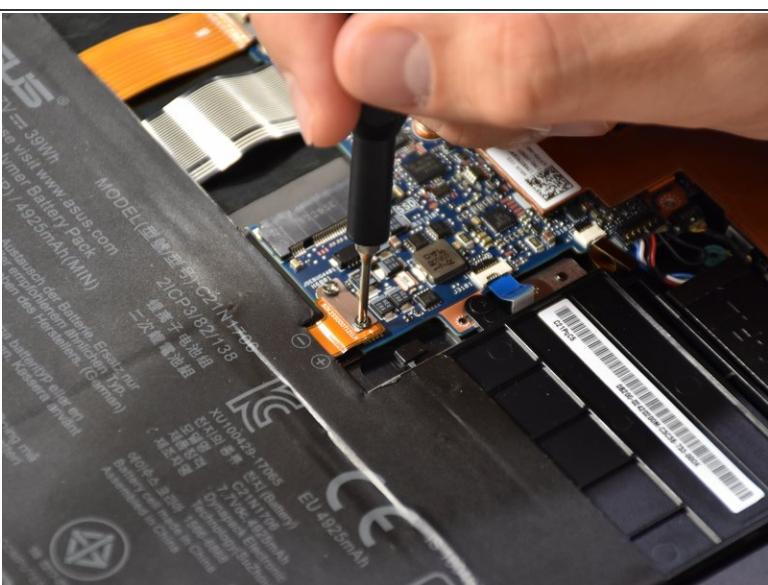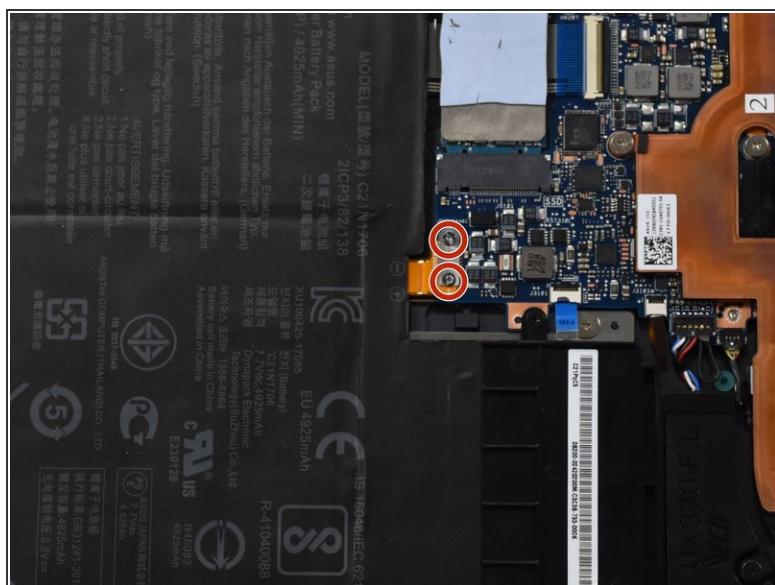

- Using a Phillips #000 screwdriver, remove the two 3mm screws on top of the orange battery connector.

Step 5

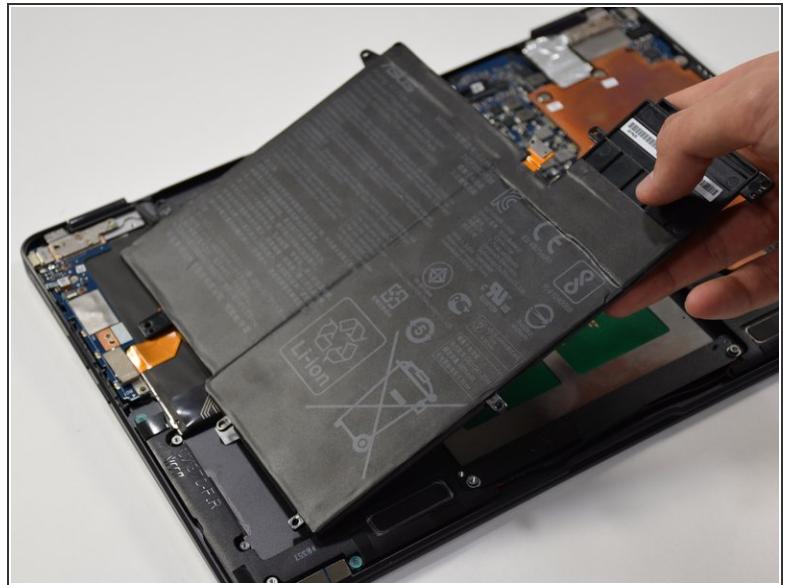

- Lift the battery out from the laptop.

To reassemble your device, follow these instructions in reverse order.