



Asus Q325U Copper Plate Replacement

How to replace the copper plate inside the Asus Q325U.

Written By: Jacob Tang





INTRODUCTION

Use this guide to replace the copper plate inside the Asus Q325U

TOOLS:



- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Copper Plate

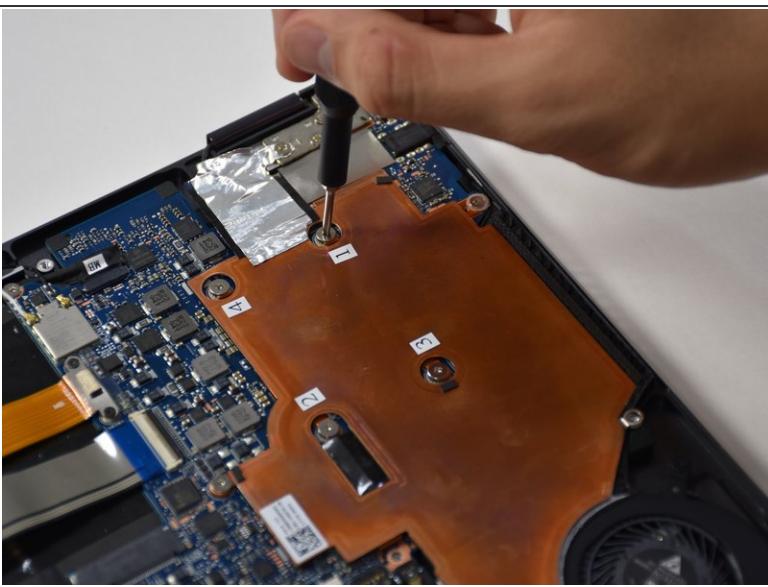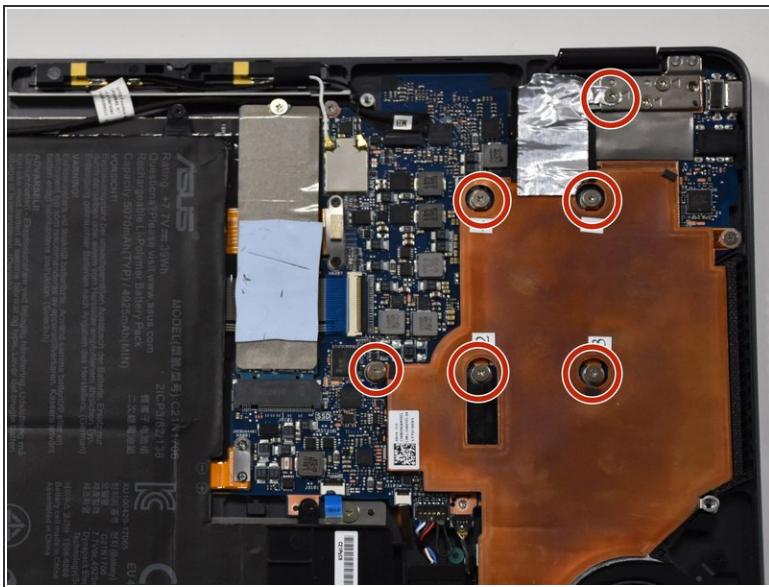


- Remove the six 3mm screws using a Phillips #00.

Step 2

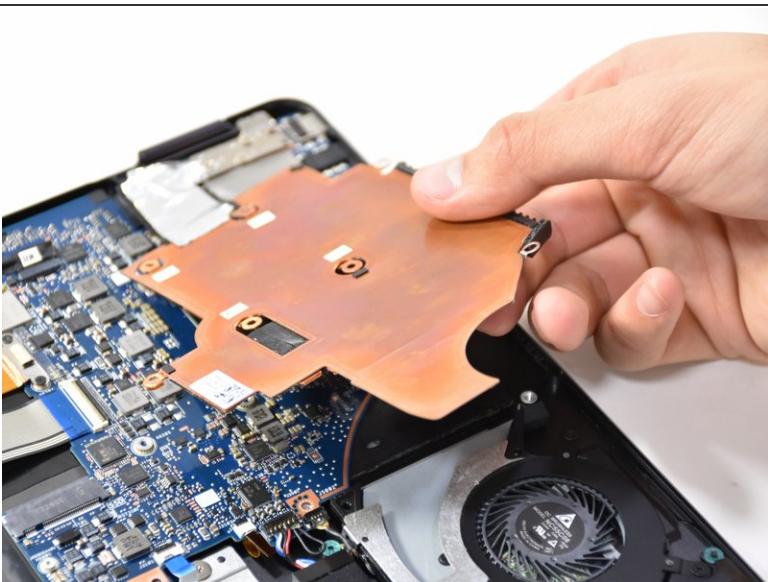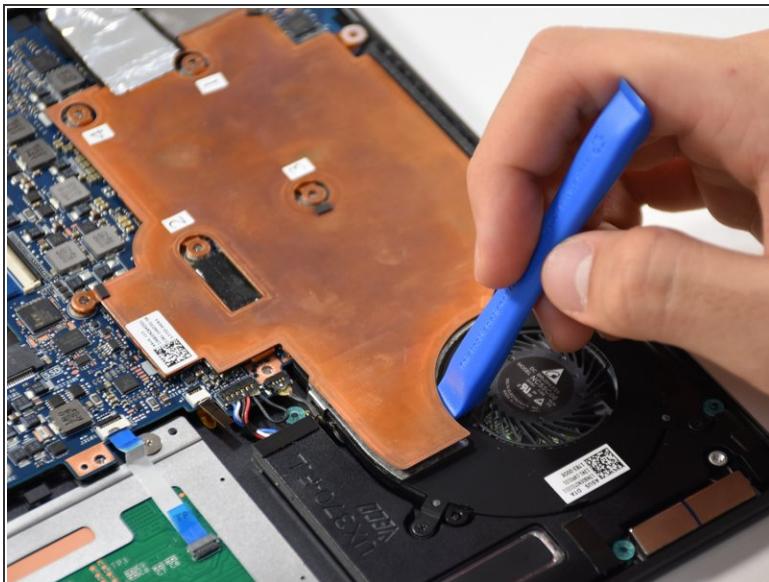

- Use the plastic opening tool to lift up the edge. Pull upward on the edge.

Step 3

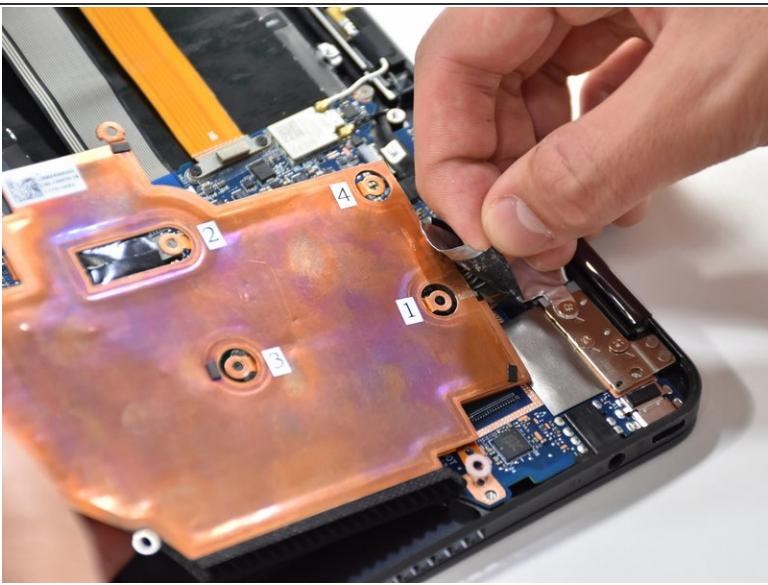

- On the other side of the plate, remove the tape.

To reassemble your device, follow these instructions in reverse order.