



Asus Q325U SSD Replacement

How to replace the Solid State Drive (SSD) in your Asus Q325U.

Written By: Jacob Tang



INTRODUCTION

Use this guide to replace the Solid State Drive. The SSD is where your laptop's permanent memory is stored.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [Suction Handle](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Back Panel





- Remove the ten 5mm screws using a T5 Torx screwdriver.

Step 2




- Lift the back panel upward using the suction tool.

Step 3 — SSD

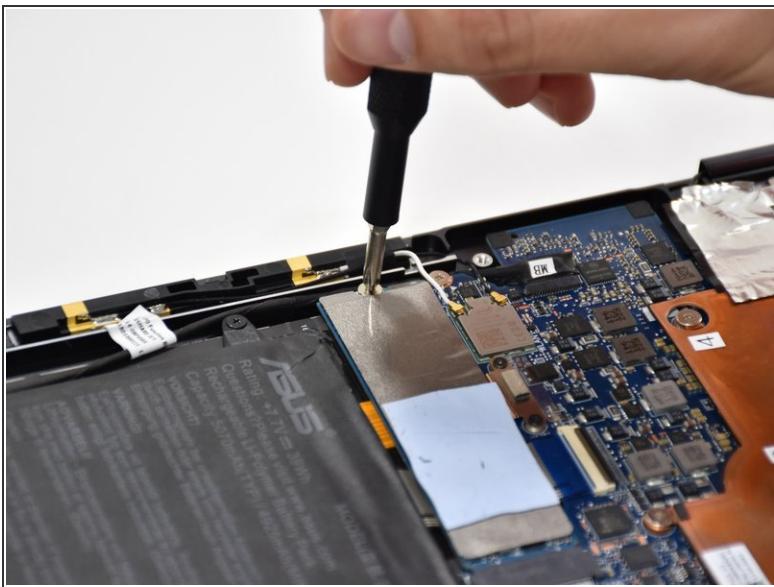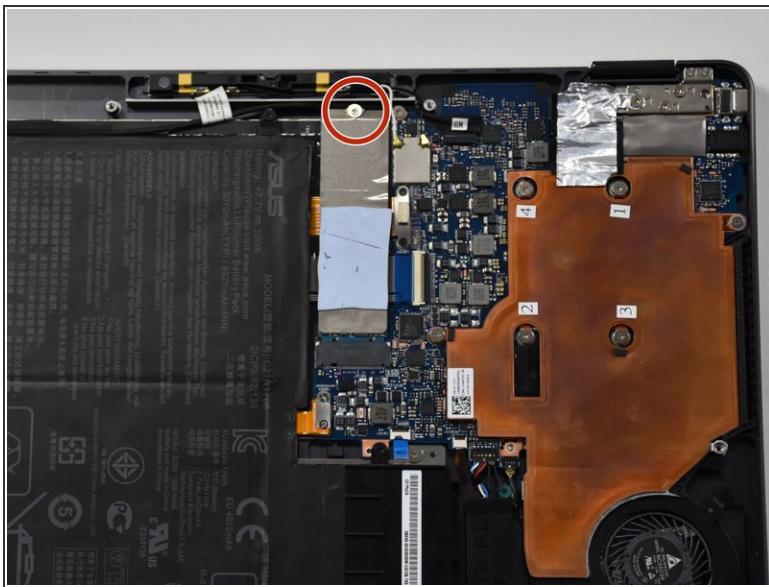

- Remove one 2mm screw on top of the SSD using a Phillips #1 screwdriver.

Step 4

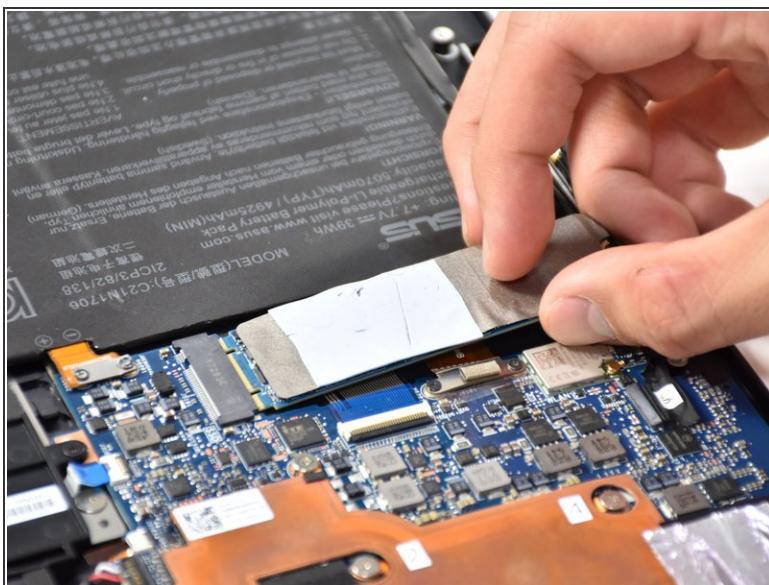

- Carefully slide and lift the SSD to remove it.

To reassemble your device, follow these instructions in reverse order.