



# Asus Q500A RAM Replacement

This guide will demonstrate how to replace the RAM in the Asus Q500A laptop.

Written By: cameron



## INTRODUCTION

This guide will demonstrate how to replace the RAM in the Asus Q500A laptop.

### TOOLS:


- Flathead 3/32" or 2.5 mm Screwdriver (1)

## Step 1 — RAM



- Flip device onto backside.
- Remove back-plate by unscrewing the two screws on either side of the back-plate.

## Step 2

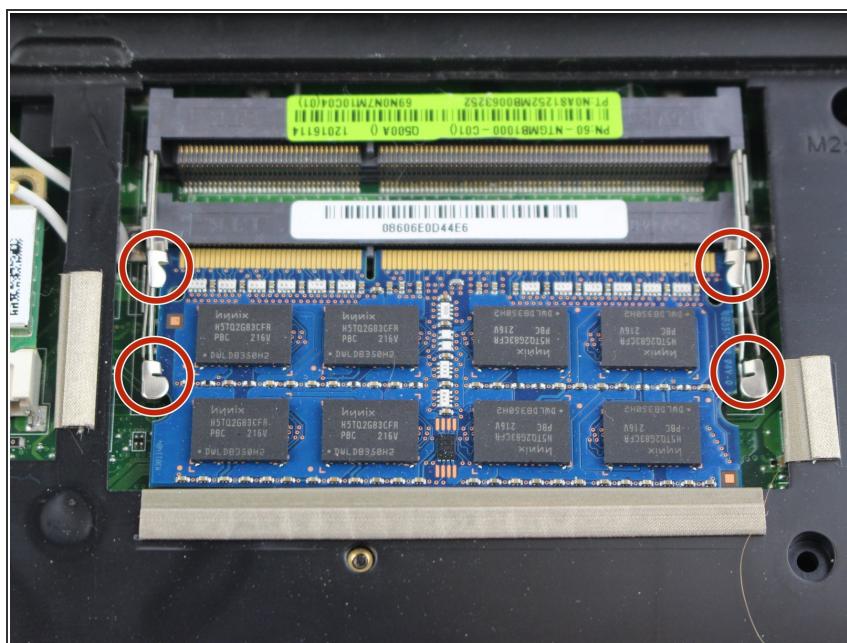


- Depending on the model of the device there will either be one or two sticks of ram.
- There are two metal brackets holding each ram stick in.
- Next we need to unlock the ram. To do this we need to move the metal brackets.

## Step 3



- Now simply remove the ram.
- *i* A set of pliers is recommended if this is difficult.

## Step 4

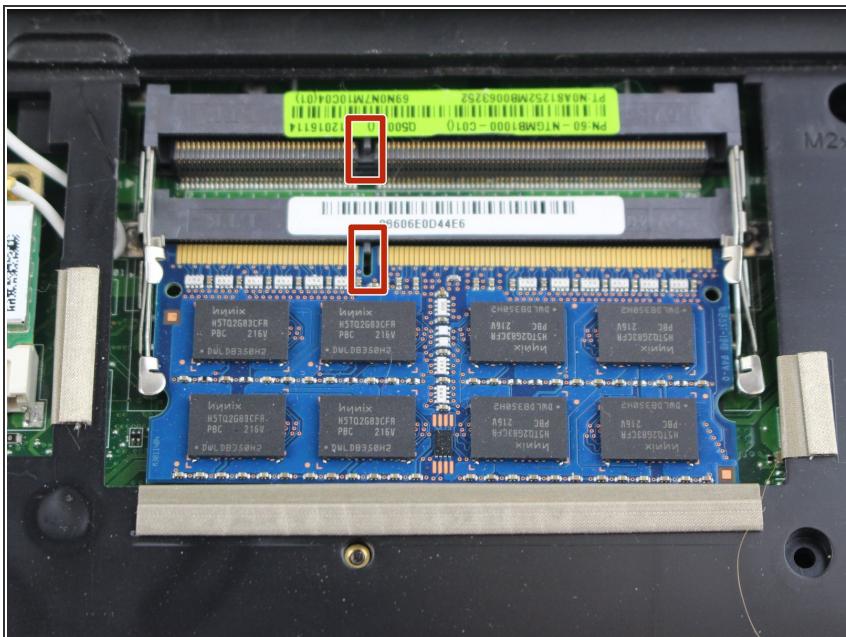

- To insert the ram line up the hole on the ram stick and the slot. Then push it into the slot.
- Next you will have to push the ram down, it will make a snap sound.
-  Be careful not to do this too hard, as it can break the ram.
- However it will require some force to actually lock in.
-  Make sure the ram is secure in its slot before moving on to the next piece of ram or replacing the back-plate.

To reassemble your device, follow these instructions in reverse order.