



Asus Q504UA-BHI5T13 Display Assembly Replacement

This guide will show you how to replace the display assembly on the ASUS Q504UA-BHI5T13.

Written By: Jacob Fritsch



INTRODUCTION

This repair would be needed if the laptop is no longer displaying a clear image. When removing the Display Assembly be careful not to drop it on the motherboard or other internal components.

TOOLS:

- [Metal Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Back Panel



- ⓘ Ensure that the laptop is off so you do not shock yourself.

Step 2



- Use the T5 Torx screwdriver to remove the ten 1mm screws located around the back cover.

Step 3



- Remove the two rubber pads nearest to you using the metal spudger.

Step 4



- Use the Phillips #0 screwdriver to remove the two 4mm screws that are under the rubber pads.


Step 5



- Insert any of the plastic opening tools into the seam to separate the back cover (it is recommended to start at the corner of the hinges). If you did it right, then the cover should pop off.


 Be careful as you may damage the tabs.

Step 6 — Display Assembly

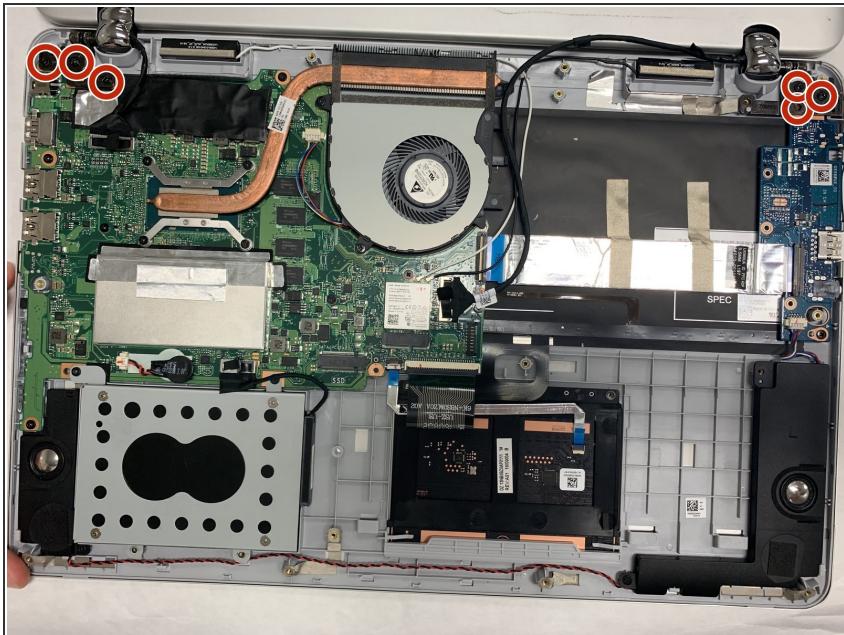

- Use the Phillips #0 screwdriver to remove the six 5.00 mm screws connected to the hinges of the display assembly.

Step 7

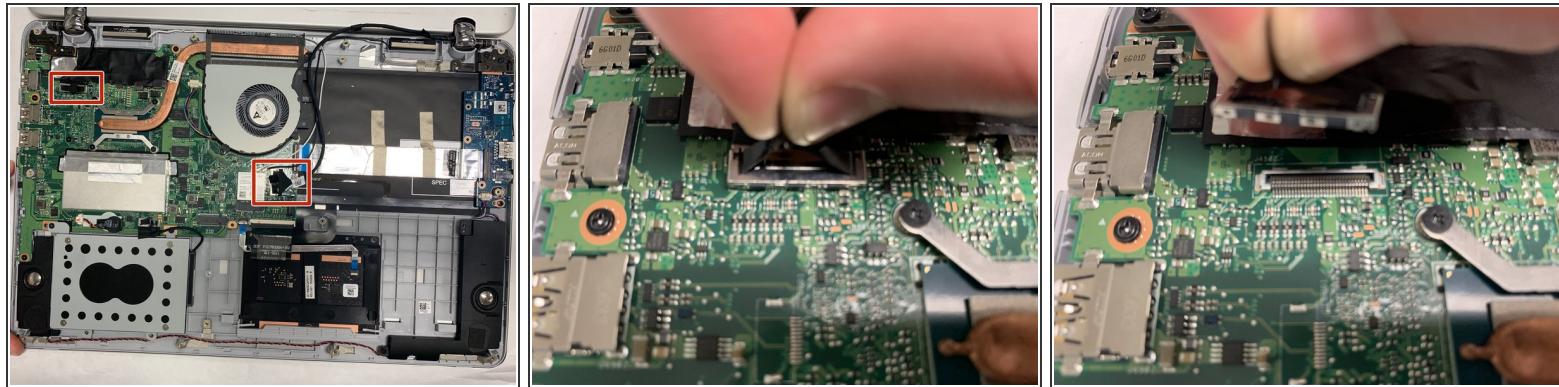

- Remove the two connectors with your hands, as shown.

Step 8



- Hold the display assembly with two hands and pull upwards to remove.

To reassemble your device, follow these instructions in reverse order.