


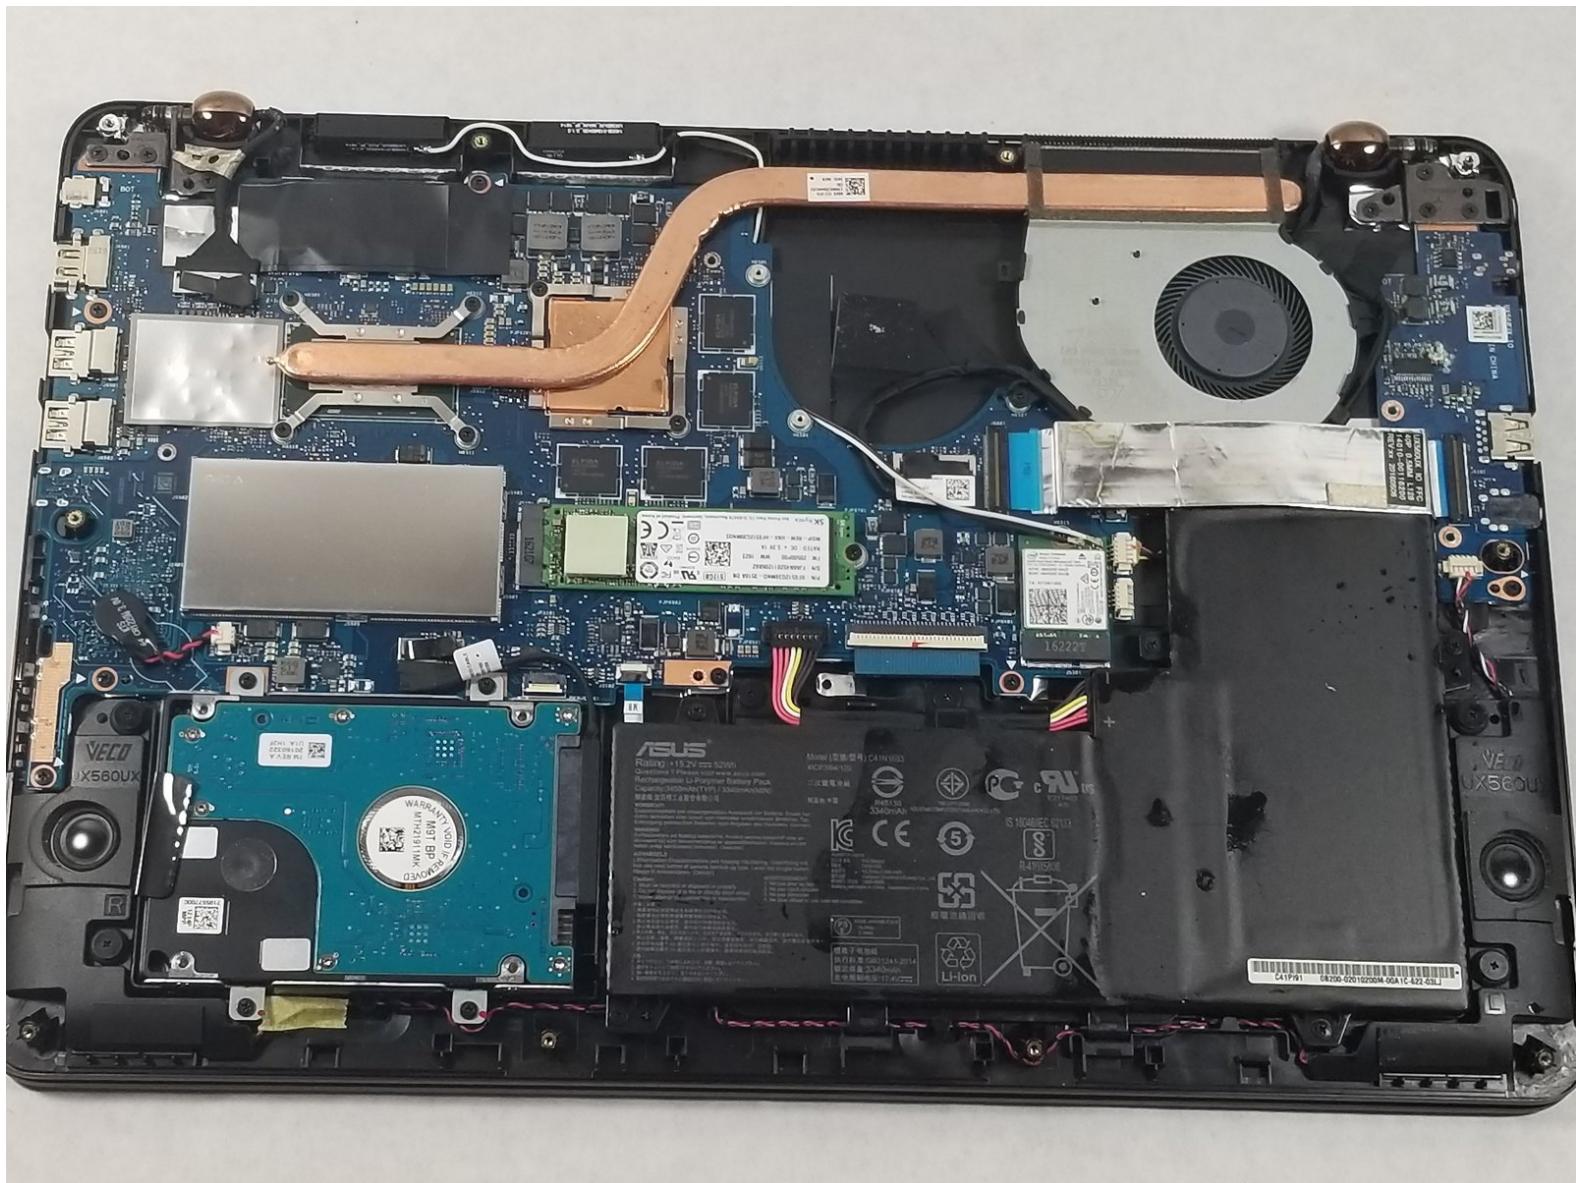

# Asus Q534U Battery Replacement

Use this guide to replace the battery of the Asus Q534U.

Written By: mmedina



This document was generated on 2020-02-25 07:16:30 AM (MST).

## INTRODUCTION

This guide will go over the process of replacing a worn-down or faulty battery in the Asus Q534U laptop computer. Laptop batteries degrade with use, so if your laptop fails to hold a sufficient charge and has a high charge cycle count, you may be able to restore your computer by replacing the battery.

## TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



## Step 1 — Back Case Removal



**⚠** Make sure the device is turned off and unplugged from the charger.

- Using a T5 screwdriver, remove all 10 screws located on the underside of the laptop.
- Pull off the back cover of the laptop.
- *(i)* A pry tool may be needed to pull off the back cover.

## Step 2

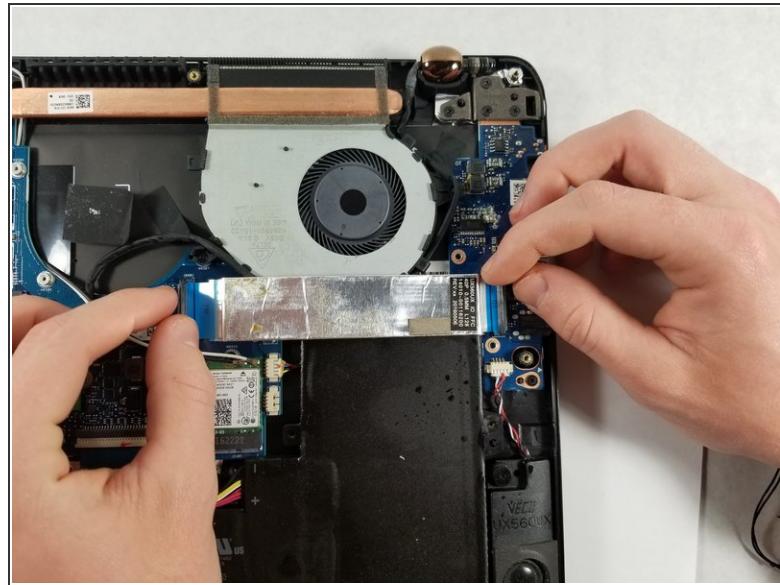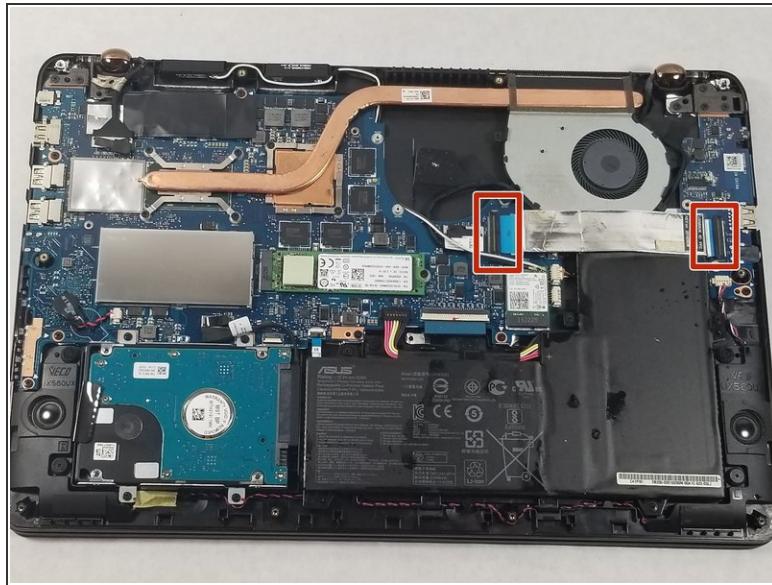



- Lift up the black tab next to the silver ribbon cable.
- Pull lightly on the blue tabs until the silver cable is free.

## Step 3



- Using a Phillips #00 screwdriver, remove the 5 marked screws.

## Step 4

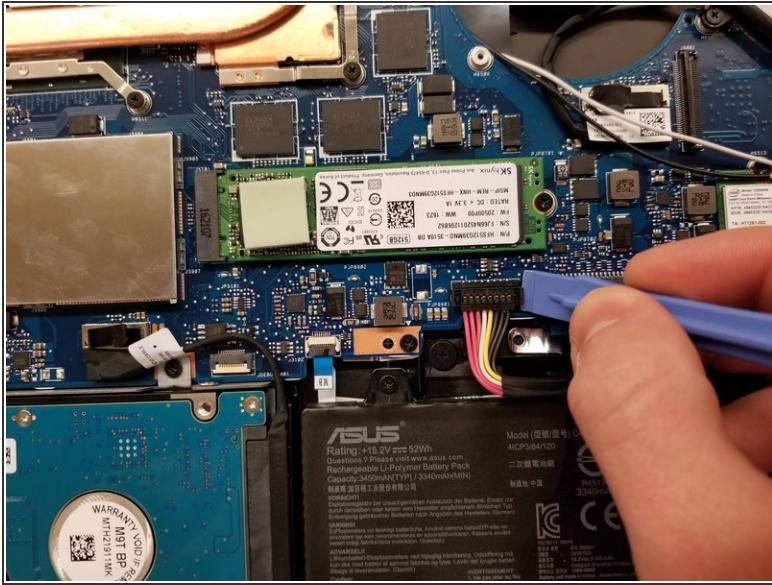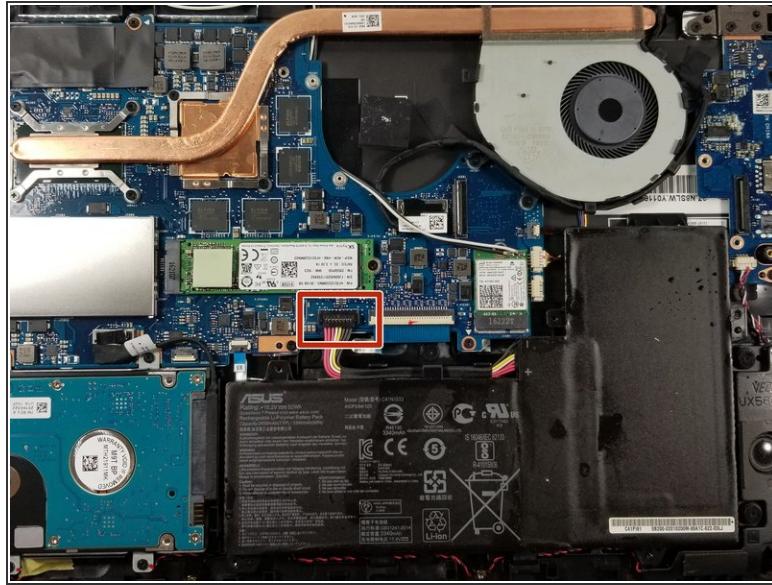

- Locate the battery connector.
- Wedge a pry tool under the battery connector.
- Gently pull on the connector until it disconnects from the base of the object.
- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.