




Asus Q534U Hard Disk Replacement

This guide takes you through the removal and replacement of the hard disk.

Written By: Eric Okoko

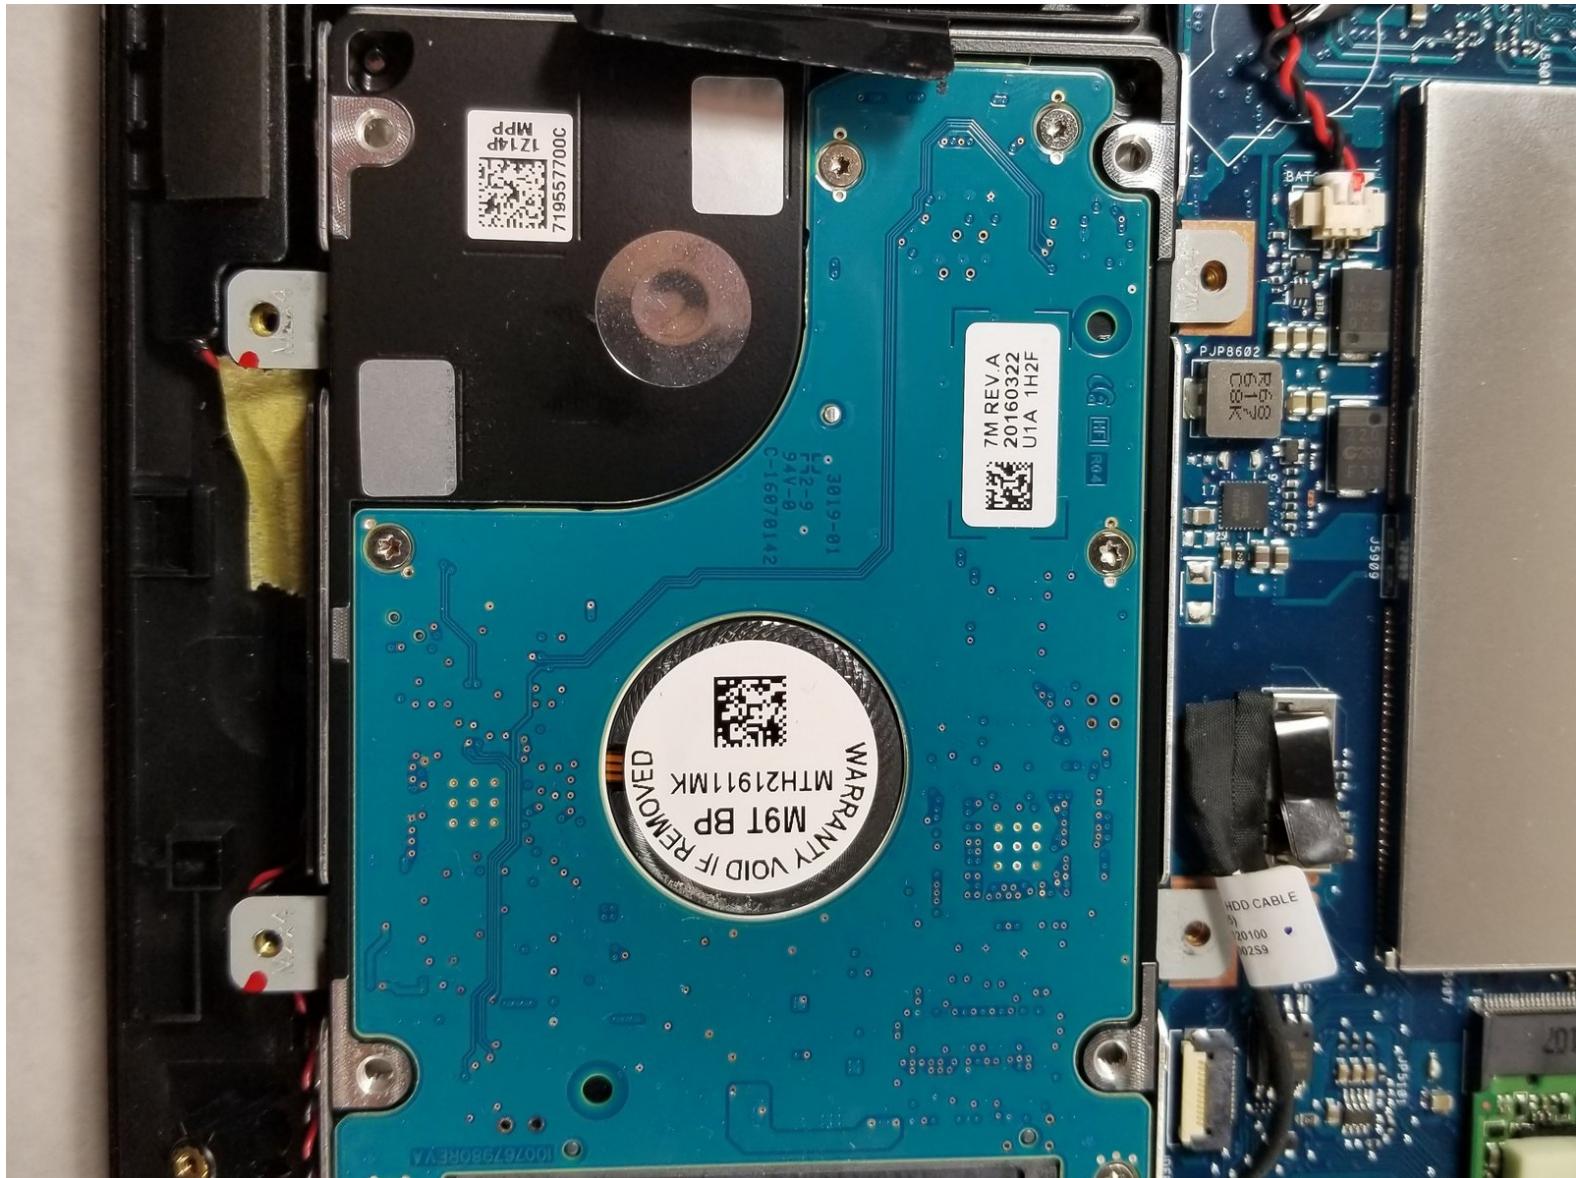

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)



Step 1 — Back Case Removal



⚠ Make sure the device is turned off and unplugged from the charger.


- Using a T5 screwdriver, remove all 10 screws located on the underside of the laptop.
- Pull off the back cover of the laptop.
- *(i)* A pry tool may be needed to pull off the back cover.

Step 2

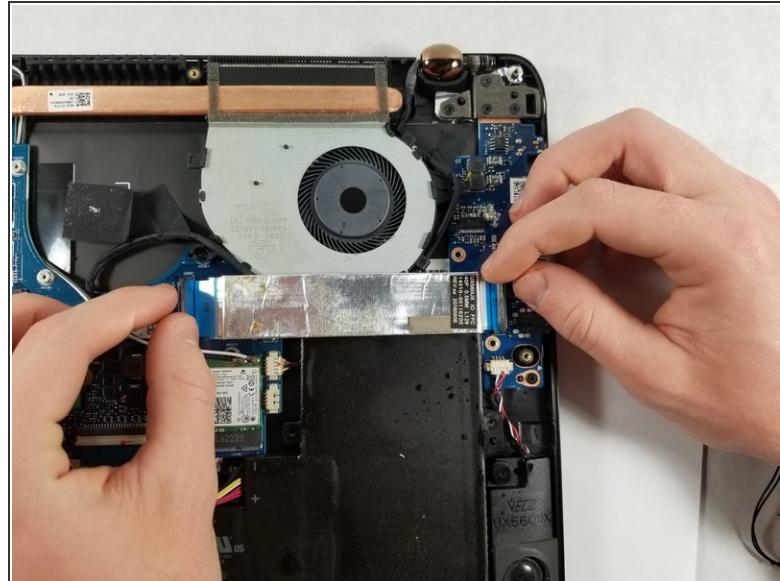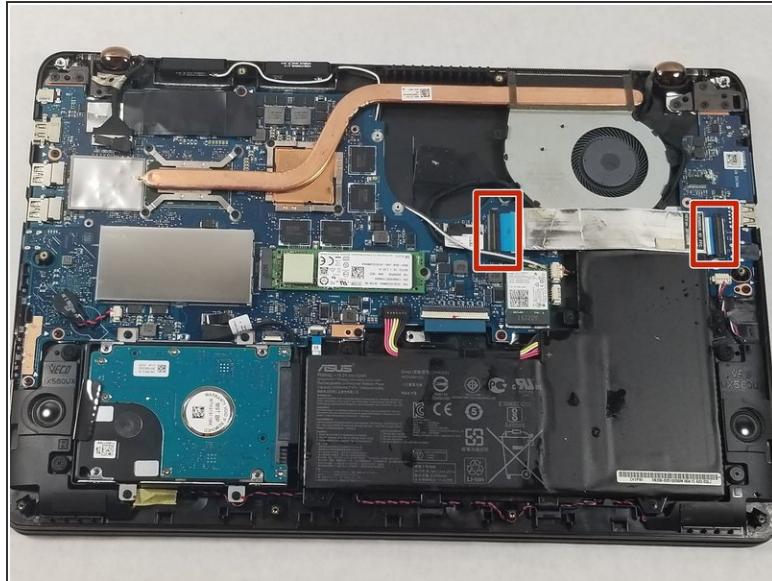



- Lift up the black tab next to the silver ribbon cable.
- Pull lightly on the blue tabs until the silver cable is free.

Step 3

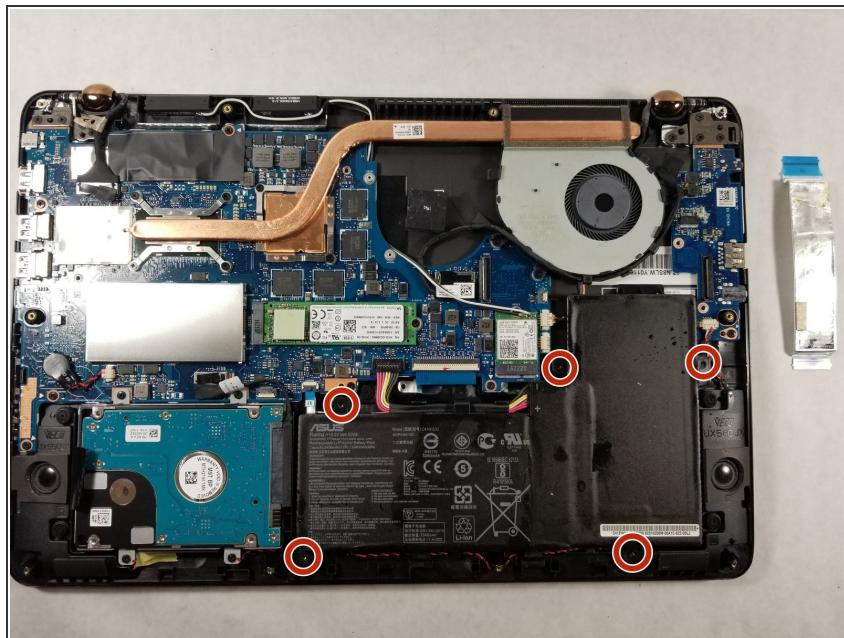



- Using a Phillips #00 screwdriver, remove the 5 marked screws.

Step 4

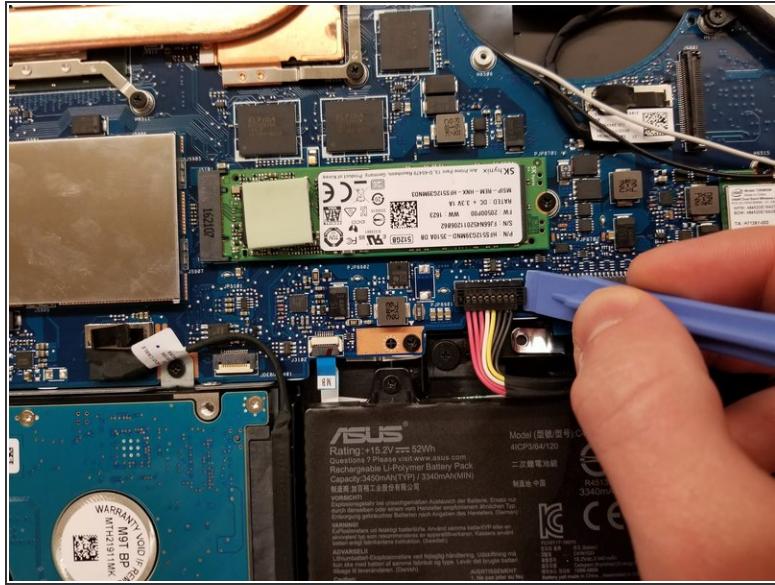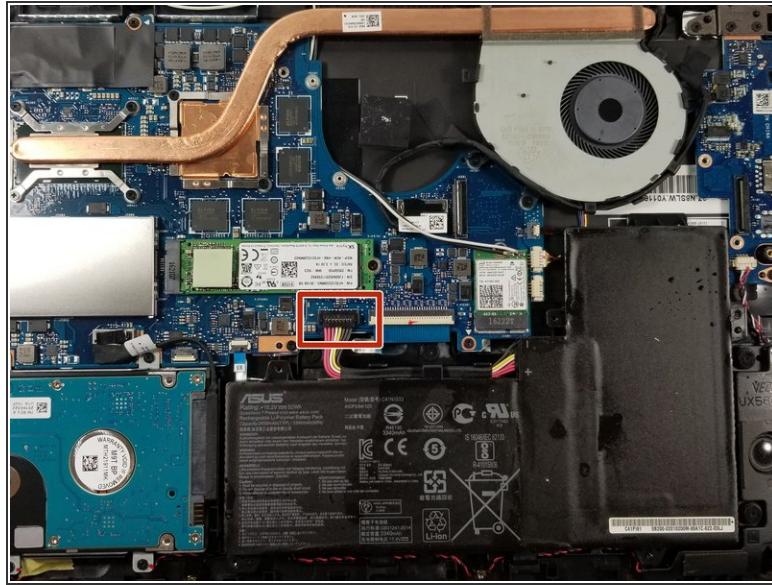


- Locate the battery connector.
- Wedge a pry tool under the battery connector.
- Gently pull on the connector until it disconnects from the base of the object.
- Pull out the battery.

Step 5 — Hard Drive

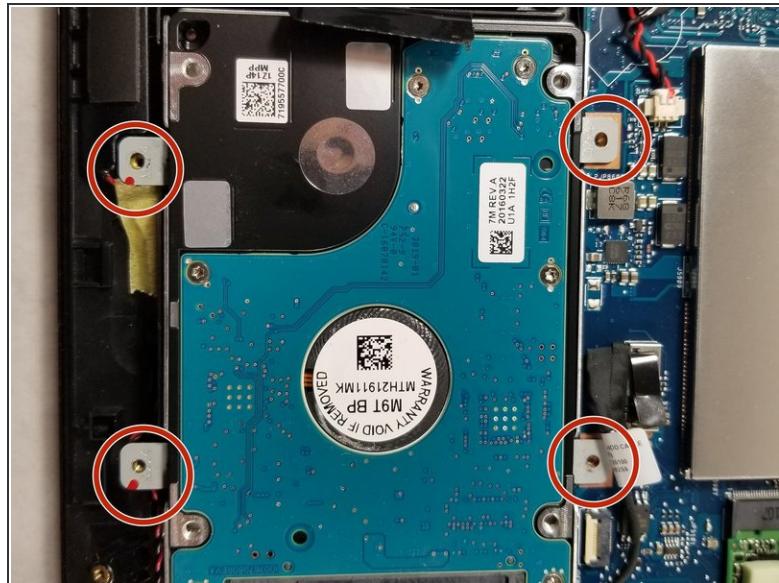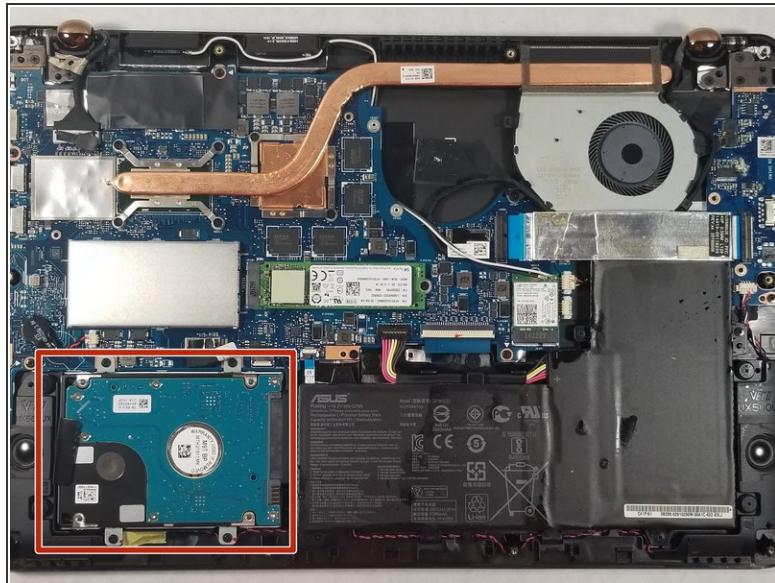


- Remove four screws with the Phillips #00 screwdriver.

Step 6

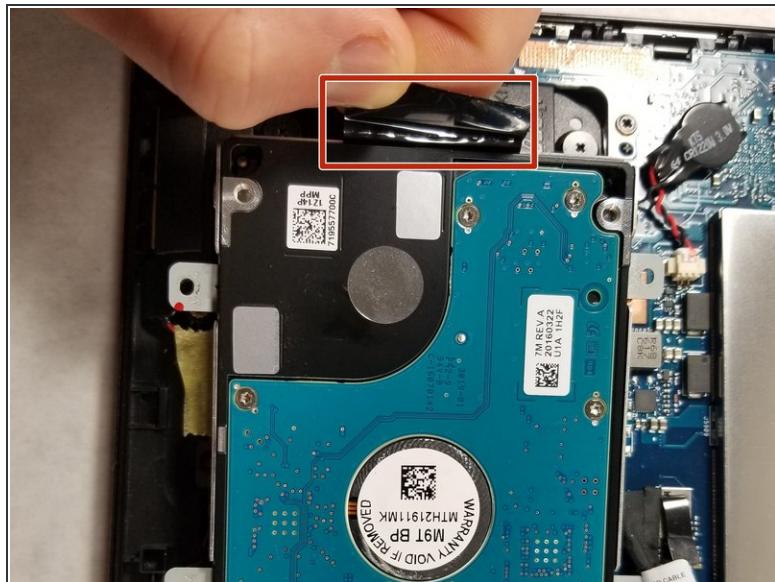

- Gently lift the hard disk out using the black tab.

Step 7

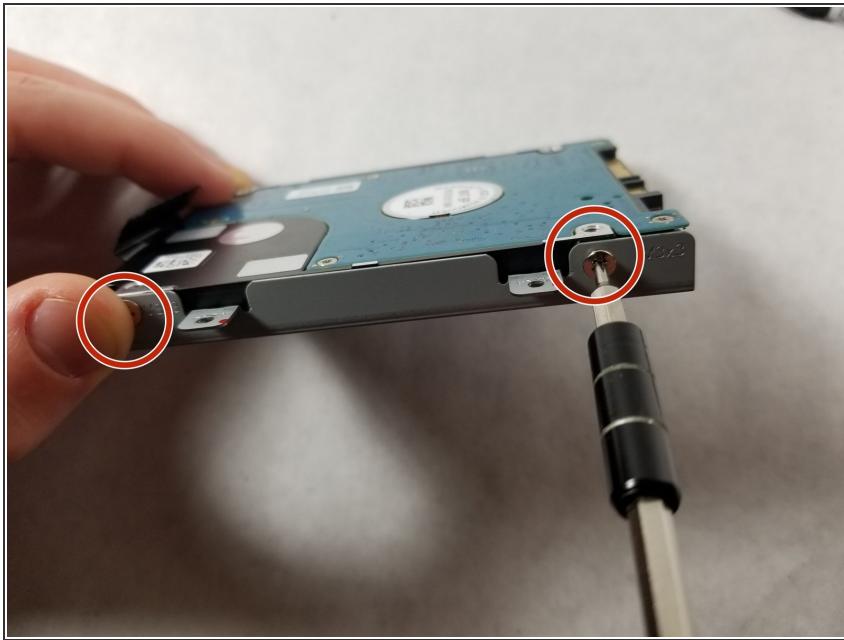

- Using a Phillips #00 screwdriver remove the four screws of the metal casing
- Remove the hard disk from the metal casing

To reassemble your device, follow these instructions in reverse order.