




Asus Q534U Motherboard Replacement

This guide will show the step needed to successfully remove the motherboard on a ASUS Q534U laptop.

Written By: Jacob Pauker

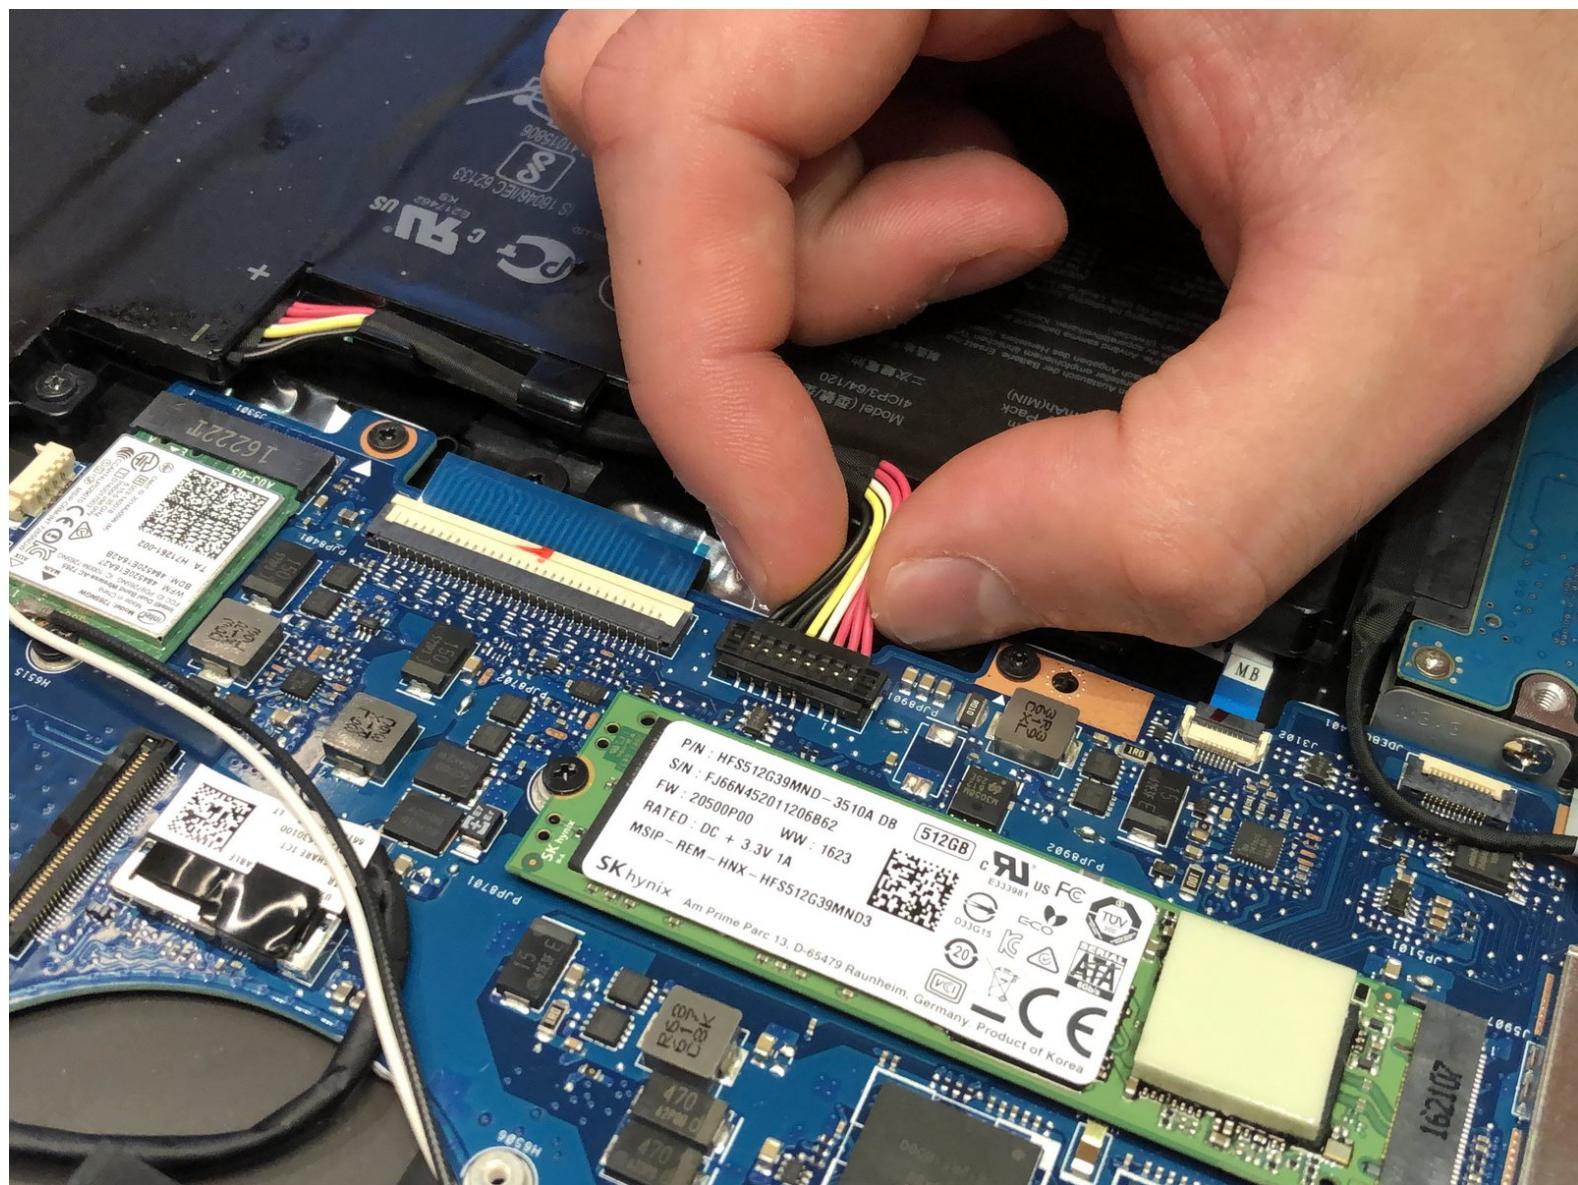


INTRODUCTION

This guide will show the step needed to successfully remove the motherboard on a ASUS Q534U laptop.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Back Case

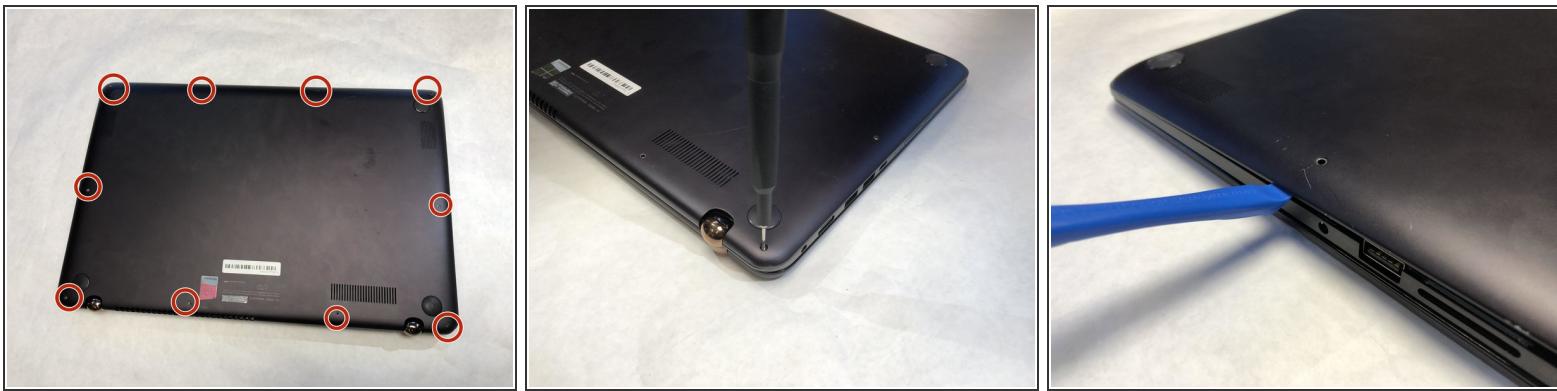



- Remove ten screws with the T5 driver.
- Use the opening tool to carefully pry off the back case.

Step 2 — CPU Fan/Heat Sink

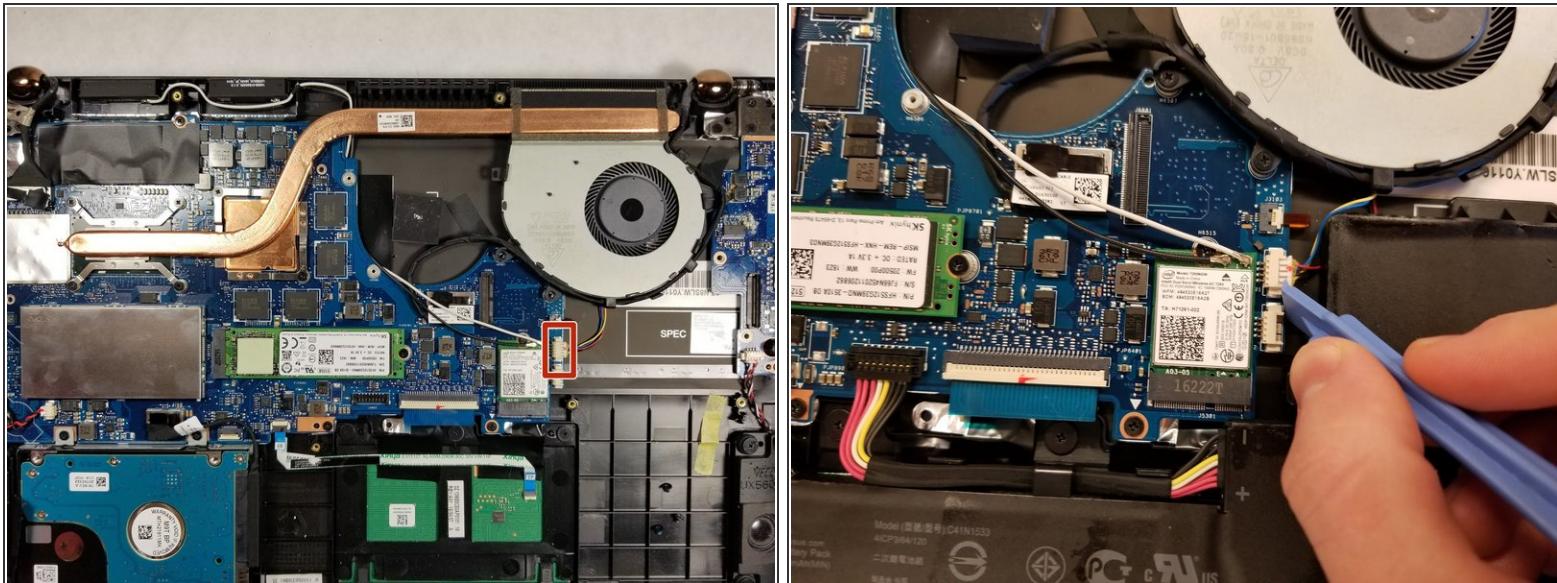

- Using the iFixit opening tool, gently pry the CPU fan connector out of the socket.

Step 3

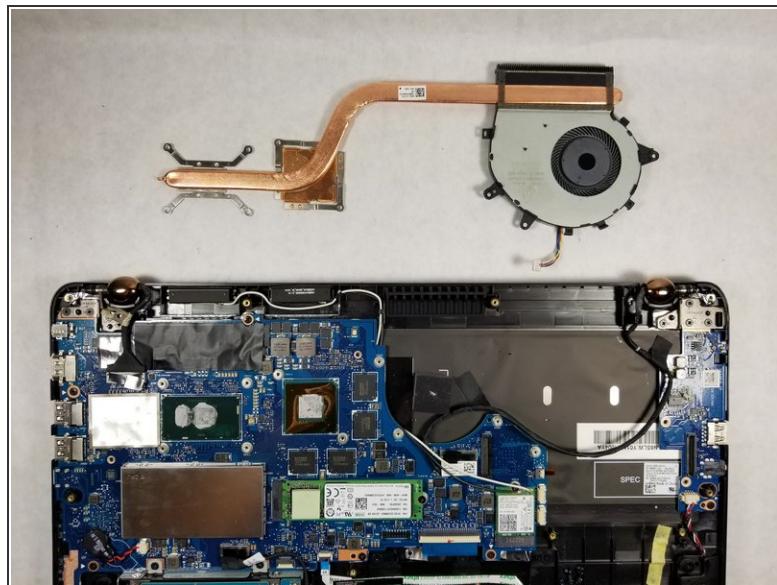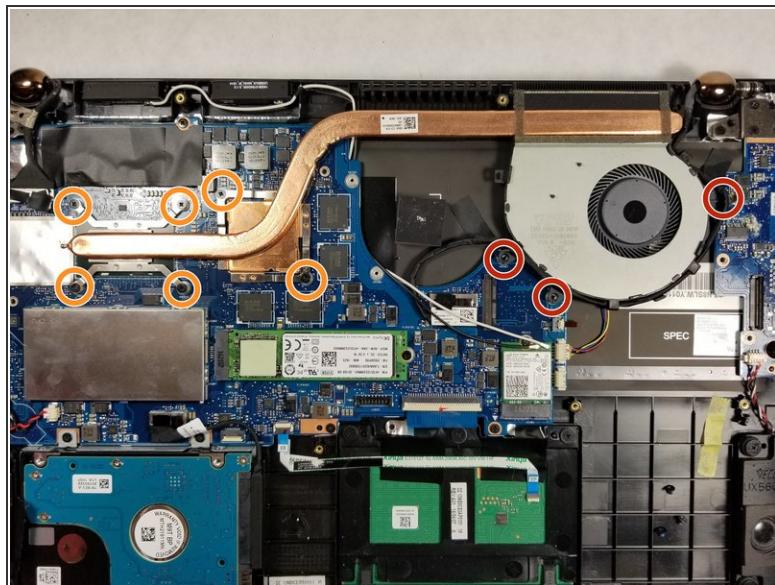



- Move the black cable located around the CPU fan out of the holder.
- Remove the following 9 screws:
 - Three Phillips screws
 - Six Phillips screws

(i) Make sure not to mix up both types of screws.

- Gently pull vertically on the CPU fan/ heat sink assembly until it is free.


⚠ Before placing a new CPU fan/heat sink assembly, the CPU and GPU surfaces must be cleaned off and thermal compound must be reapplied.

Step 4 — Hard Drive

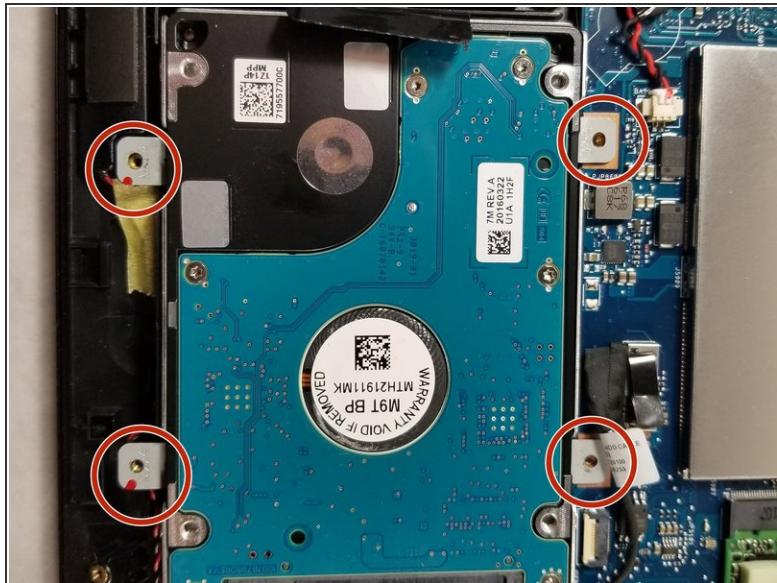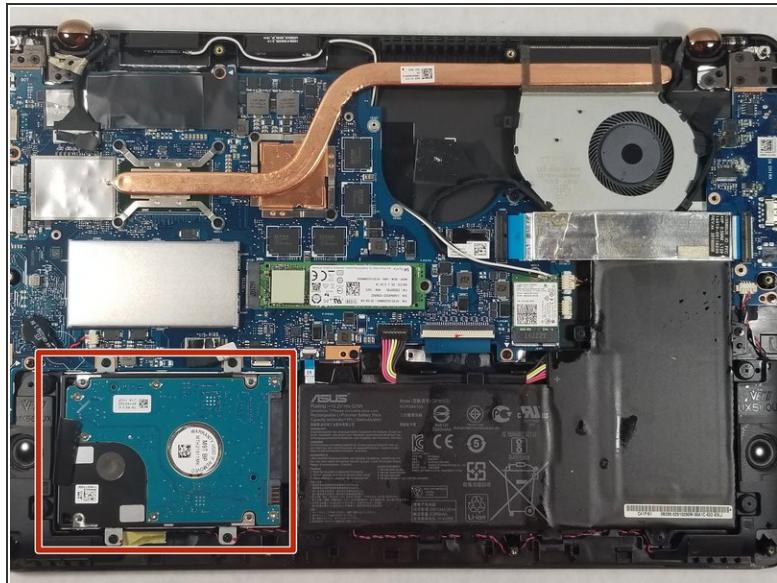


- Remove four screws with the Phillips #00 screwdriver.

Step 5

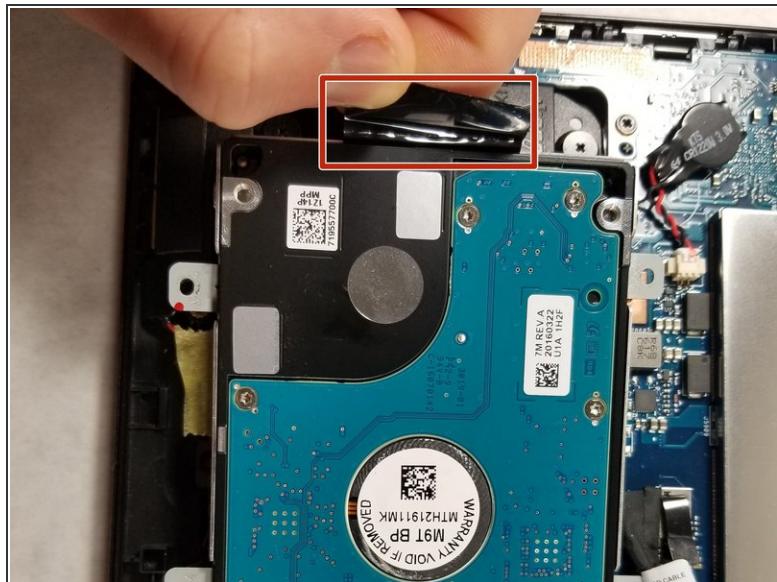

- Gently lift the hard disk out using the black tab.

Step 6

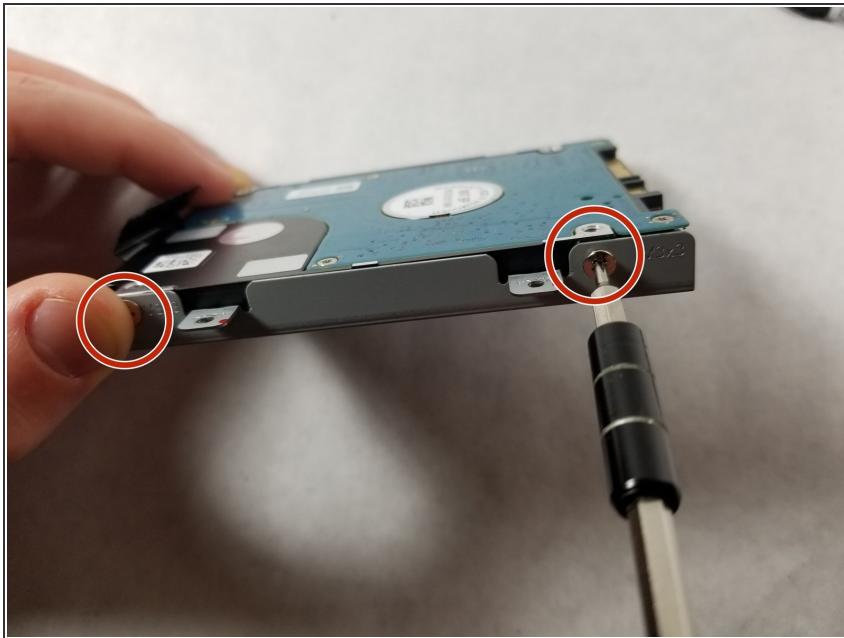


- Using a Phillips #00 screwdriver remove the four screws of the metal casing
- Remove the hard disk from the metal casing

Step 7 — Motherboard



- Disconnect the four marked cables connectors at the sockets.

Step 8

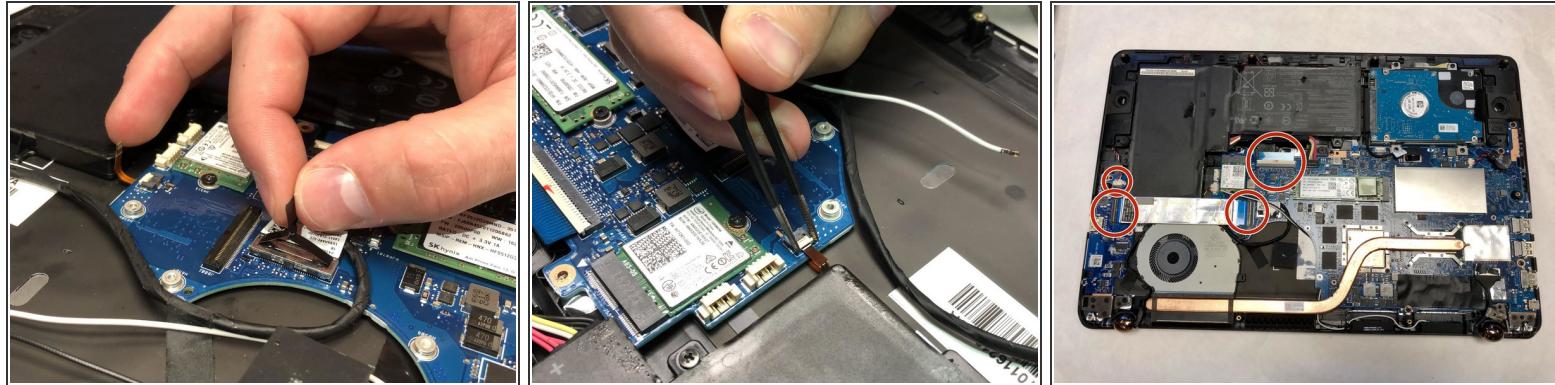

- Lift the connecting ports up prior to removing the connectors.

Step 9



- Remove the screws holding the hinges down on both sides of the device.
- A pry tool might be needed to lift the hinge.

Step 10



- Remove nine, 3.2 mm screws to fully release motherboard.

To reassemble your device, follow these instructions in reverse order.