




Asus Q552UB-BHI7T12 RAM Replacement

The replacement of the Asus Q552UB-BHI712 RAM.



Written By: Alexander Boettcher

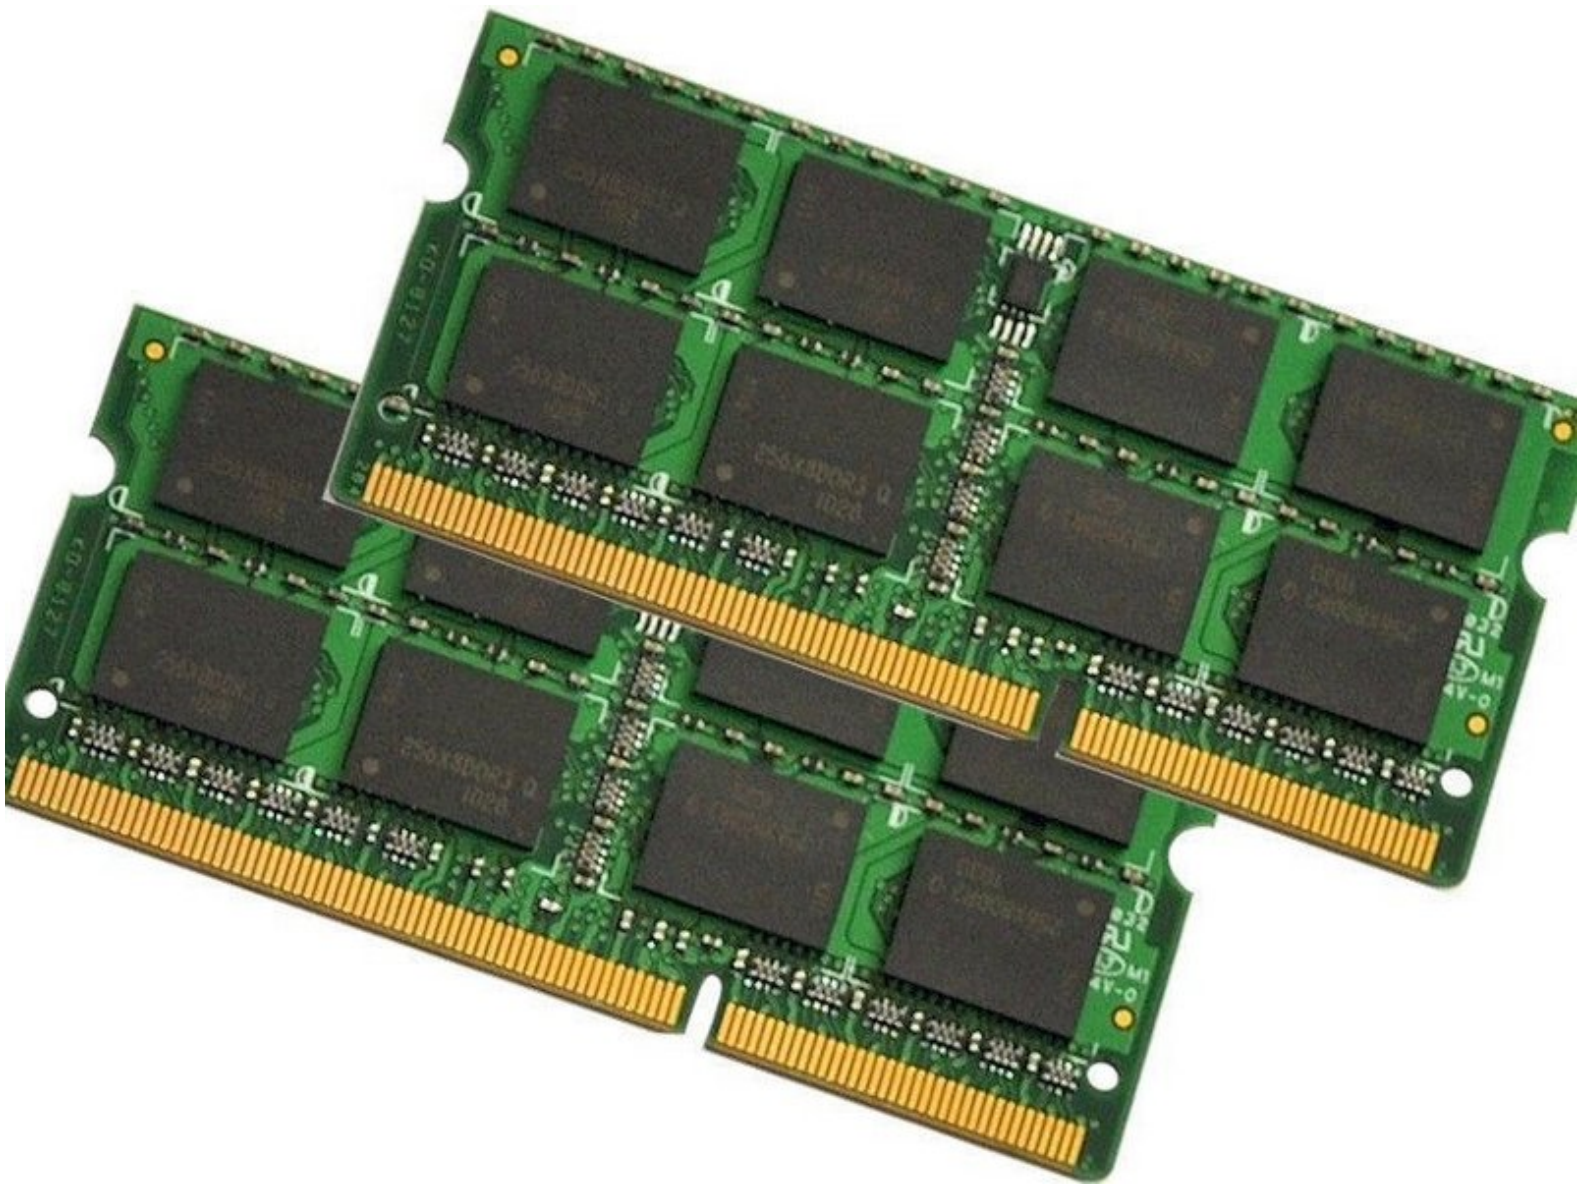

INTRODUCTION


Before you begin the replacement, make sure that the problem occurring is from the RAM and not the CPU or the graphics card.

Step 1 — RAM

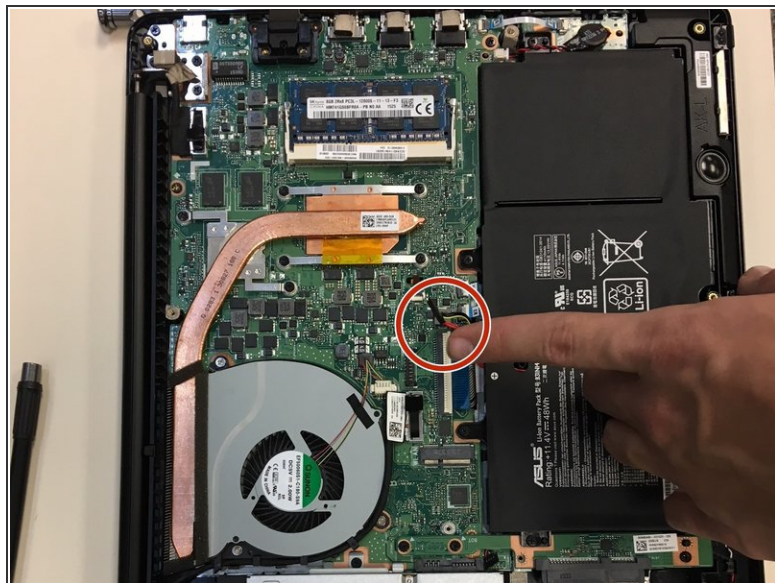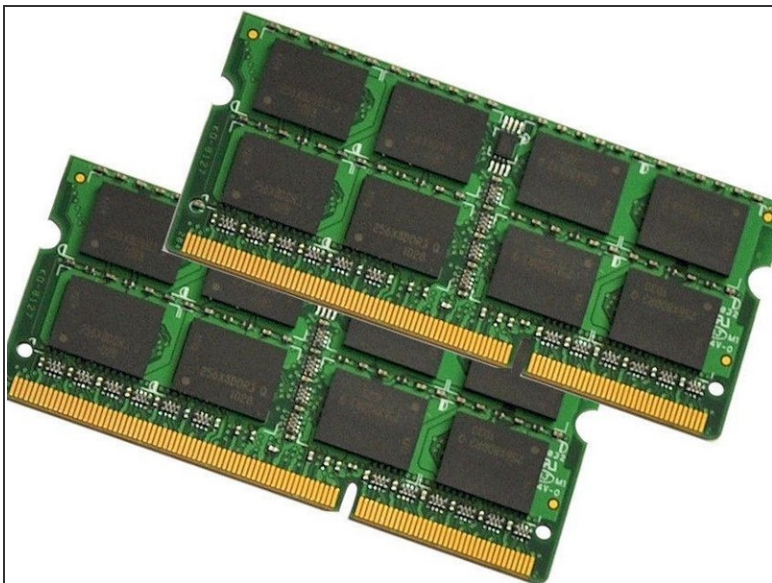


- Gently pull the wire connecting the battery to the motherboard of the computer before removing the RAM.

Step 2

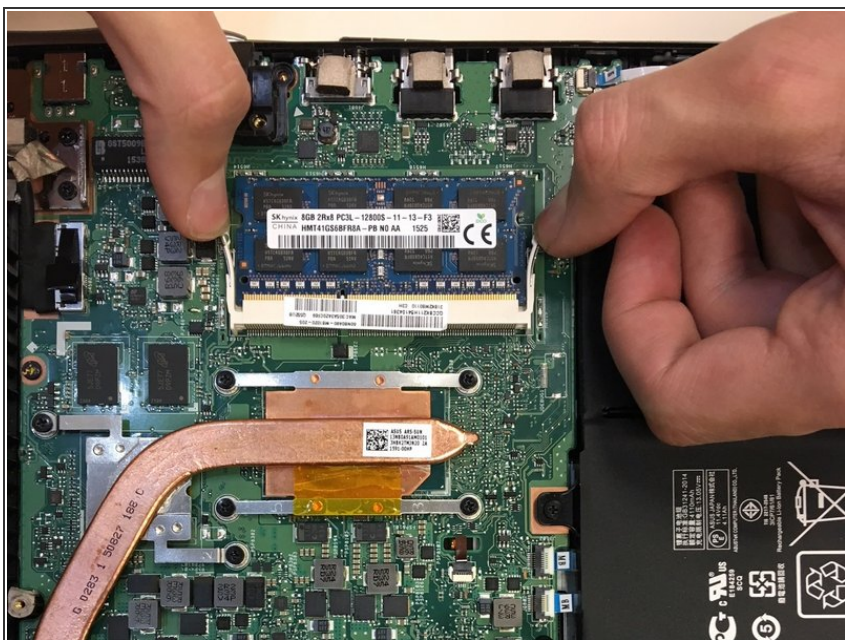

- Pull apart the white tabs holding the RAM in place with your thumbs.

Step 3

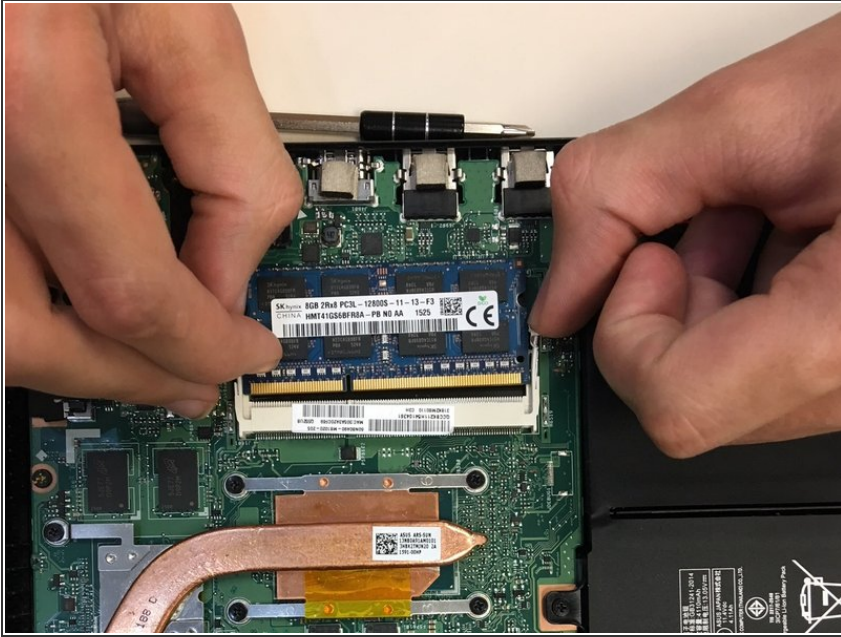

- Carefully slide the ram, with your index fingers, out from the tabs.

To reassemble your device, follow these instructions in reverse order.