



# Asus R510CA-OB01 Hard Drive Replacement

Use this guide to replace your device's hard drive.

Written By: Blanche Pinto



## INTRODUCTION

Use this guide to replace the hard drive of your Asus R510CA-OB01 laptop. In the event that you don't have enough memory space on your laptop, or your current hard drive is damaged, you can use this guide to replace the hard drive in your device.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

## Step 1 — Hard Drive



- Shut down the computer and disconnect all external devices connected to it.
- Turn the computer so that it is upside down. Position the computer with the front towards you.

## Step 2




- Loosen the two 12 mm screws on the bottom panel of your device using a Phillips size 0 bit.

## Step 3




- Use the grips to slide the panel off.
- Remove the panel by lifting it off the device.

## Step 4

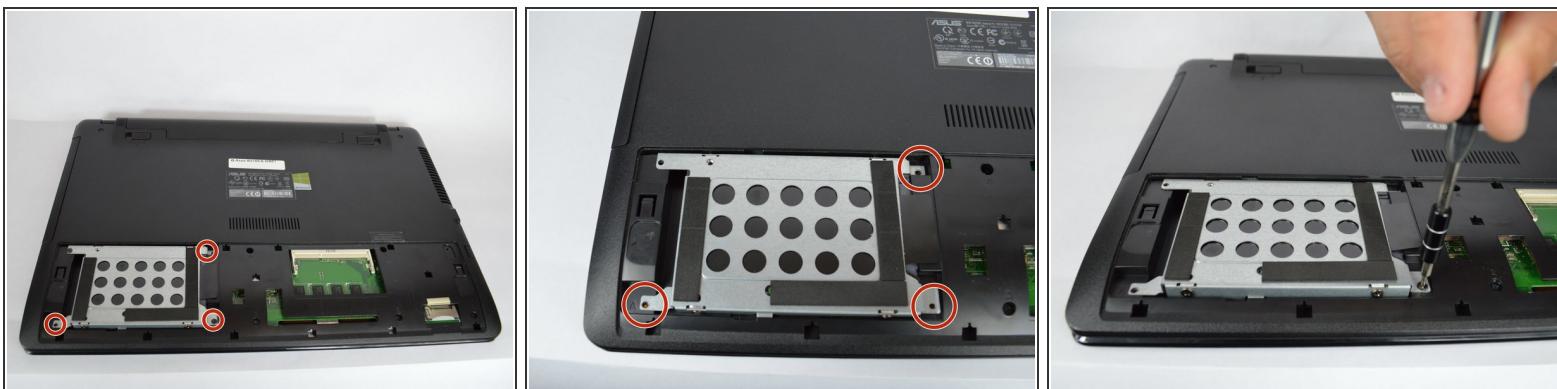

- Loosen the three 5 mm screws holding down the hard drive using a Phillips #00 bit.

## Step 5

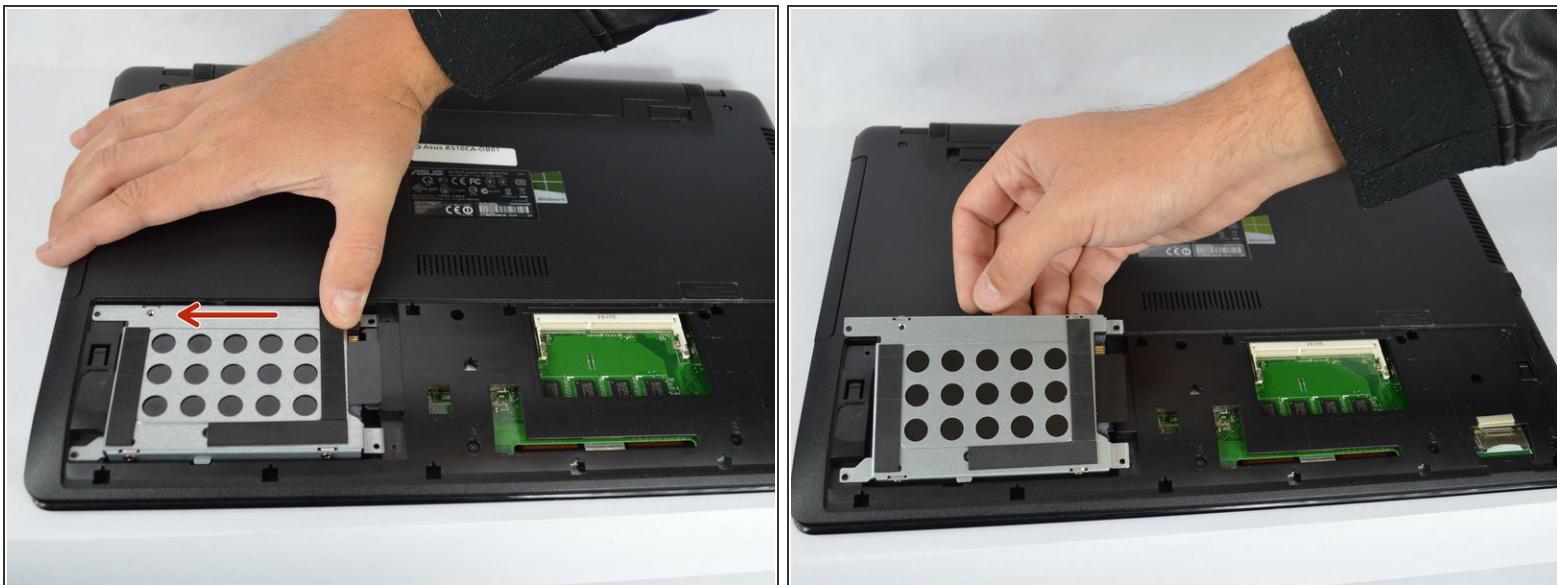

- Slide the casing (hard drive bay) for the hard drive to the left.
- Lift it to remove it from the device.

To reassemble your device, follow these instructions in reverse order.