


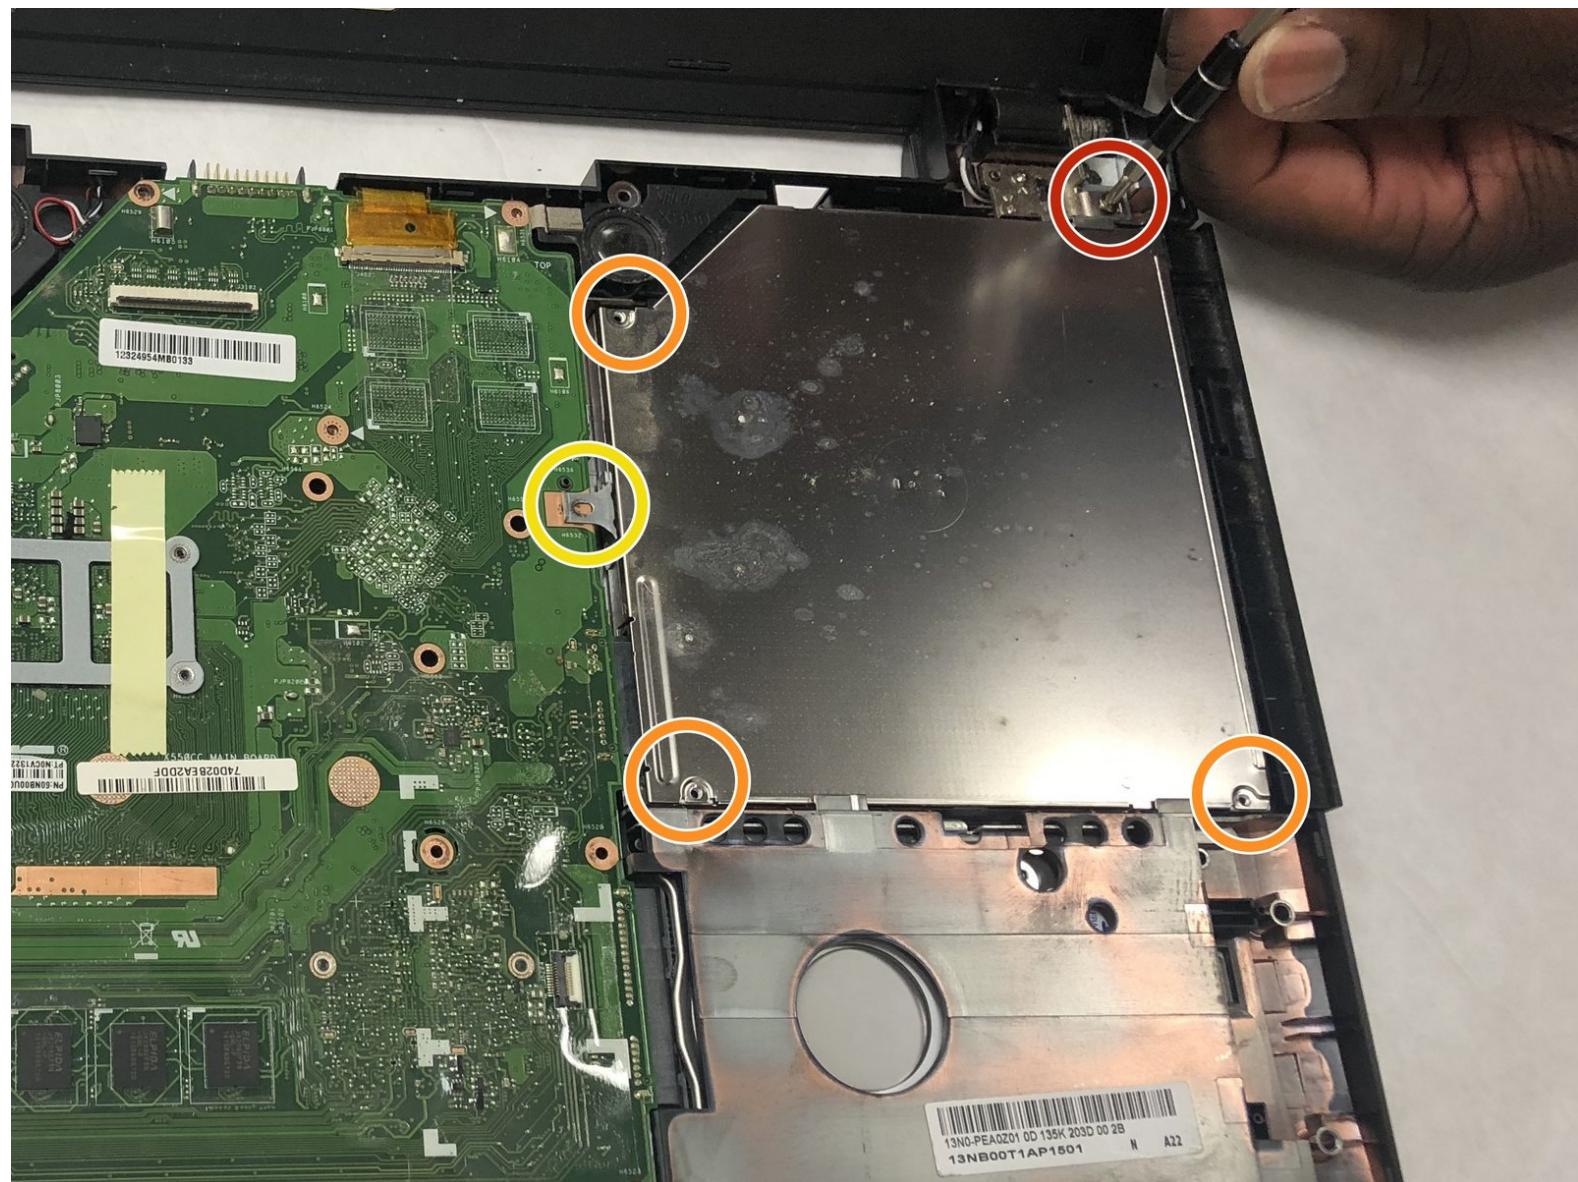

Asus R510CA-OB01 Optical Drive Replacement

Replacement guide for Asus R510CA-OB01 optical drive.

Written By: Mame



INTRODUCTION

If your DVD drive (optical drive) is known to not be working, you can use this guide to replace it.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Keyboard and Mousepad



- Shut down the computer and disconnect all external devices connected to it.
- Turn the computer upside down. Position the computer with the front towards you.

Step 2



- After detaching the battery, remove the two 5mm screws holding down the casing using a Phillips #00 screwdriver.

Step 3




- Loosen the four 12mm screws on the bottom and top panel of your device using a Phillips #0 screwdriver.

Step 4



- Use the grips to slide the panel off.
- Remove the panel by lifting it off the device.

Step 5

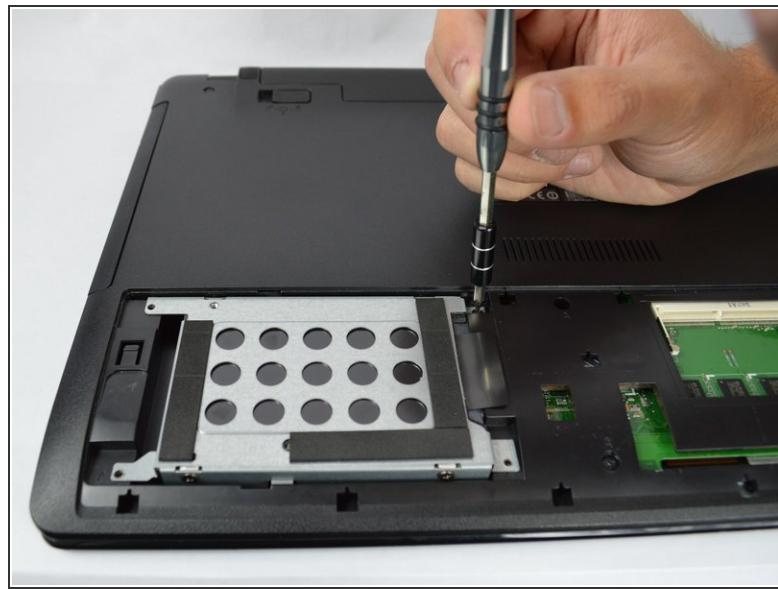


- Remove the three 5mm screws holding down the hard drive and the five 5mm screws holding down the casing using a Phillips #00 bit.

Step 6




- Turn the laptop the right way up and face it towards you.
- Insert the flat edge of the flat plastic opening tool into the crease of the keyboard cover.
- While the opening tool is in the crease, carefully pry open the casing by sliding the plastic opening tool along the edge.

Step 7

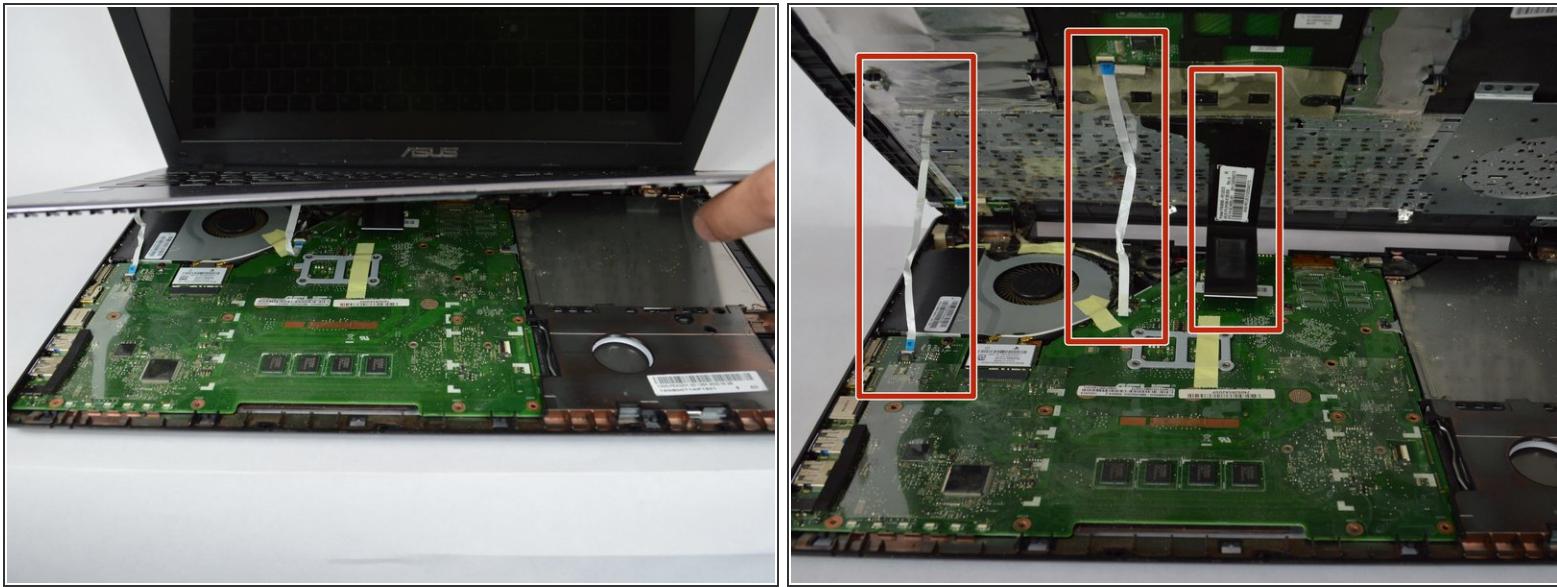

- Make sure that the entire cover has been released front the plastic pins.
- Slowly lift the cover open from the front of the laptop but do not completely remove.
- Note the three locations of the three white and blue data cables connecting the keyboard to the computer's main board.

Step 8

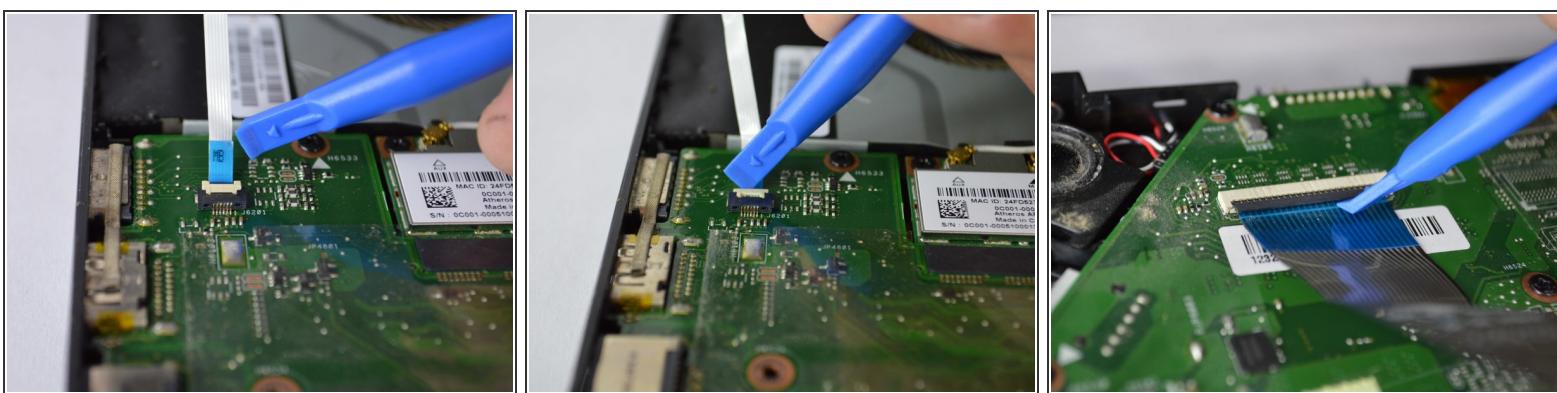


- Remove each data cable from the motherboard by using your finger or the plastic opening tool to lift the white latch.
- The cable will slide out of its place.

Step 9



- With the data cables removed and the keyboard module fully disconnected, the keyboard module should come free from the laptop.

Step 10 — Optical Drive

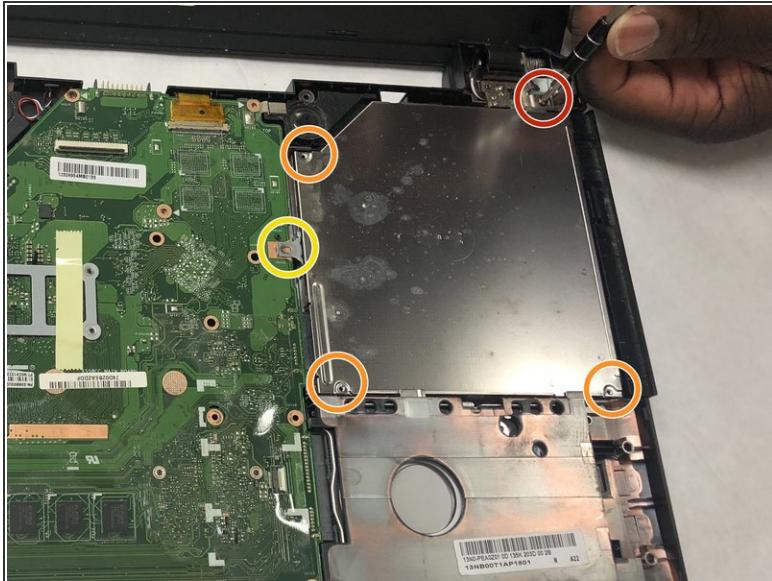

- Remove the 4.5mm silver screw in the top right corner using a Phillips #0 bit.
- Remove the three 2mm silver screws using a Phillips #000 bit.
- Remove the 5mm screw using a Phillips #1 bit that is holding the optical drive in place.
- With your hands, gently slide the optical drive out of the laptop.

To reassemble your device, follow these instructions in reverse order.