




Asus ROG G53SW-XT1 Hard Drive Replacement

This guide will demonstrate how to remove and replace the hard drive on your Asus ROG G53SW-XT1.

Written By: Alexander Lovrien

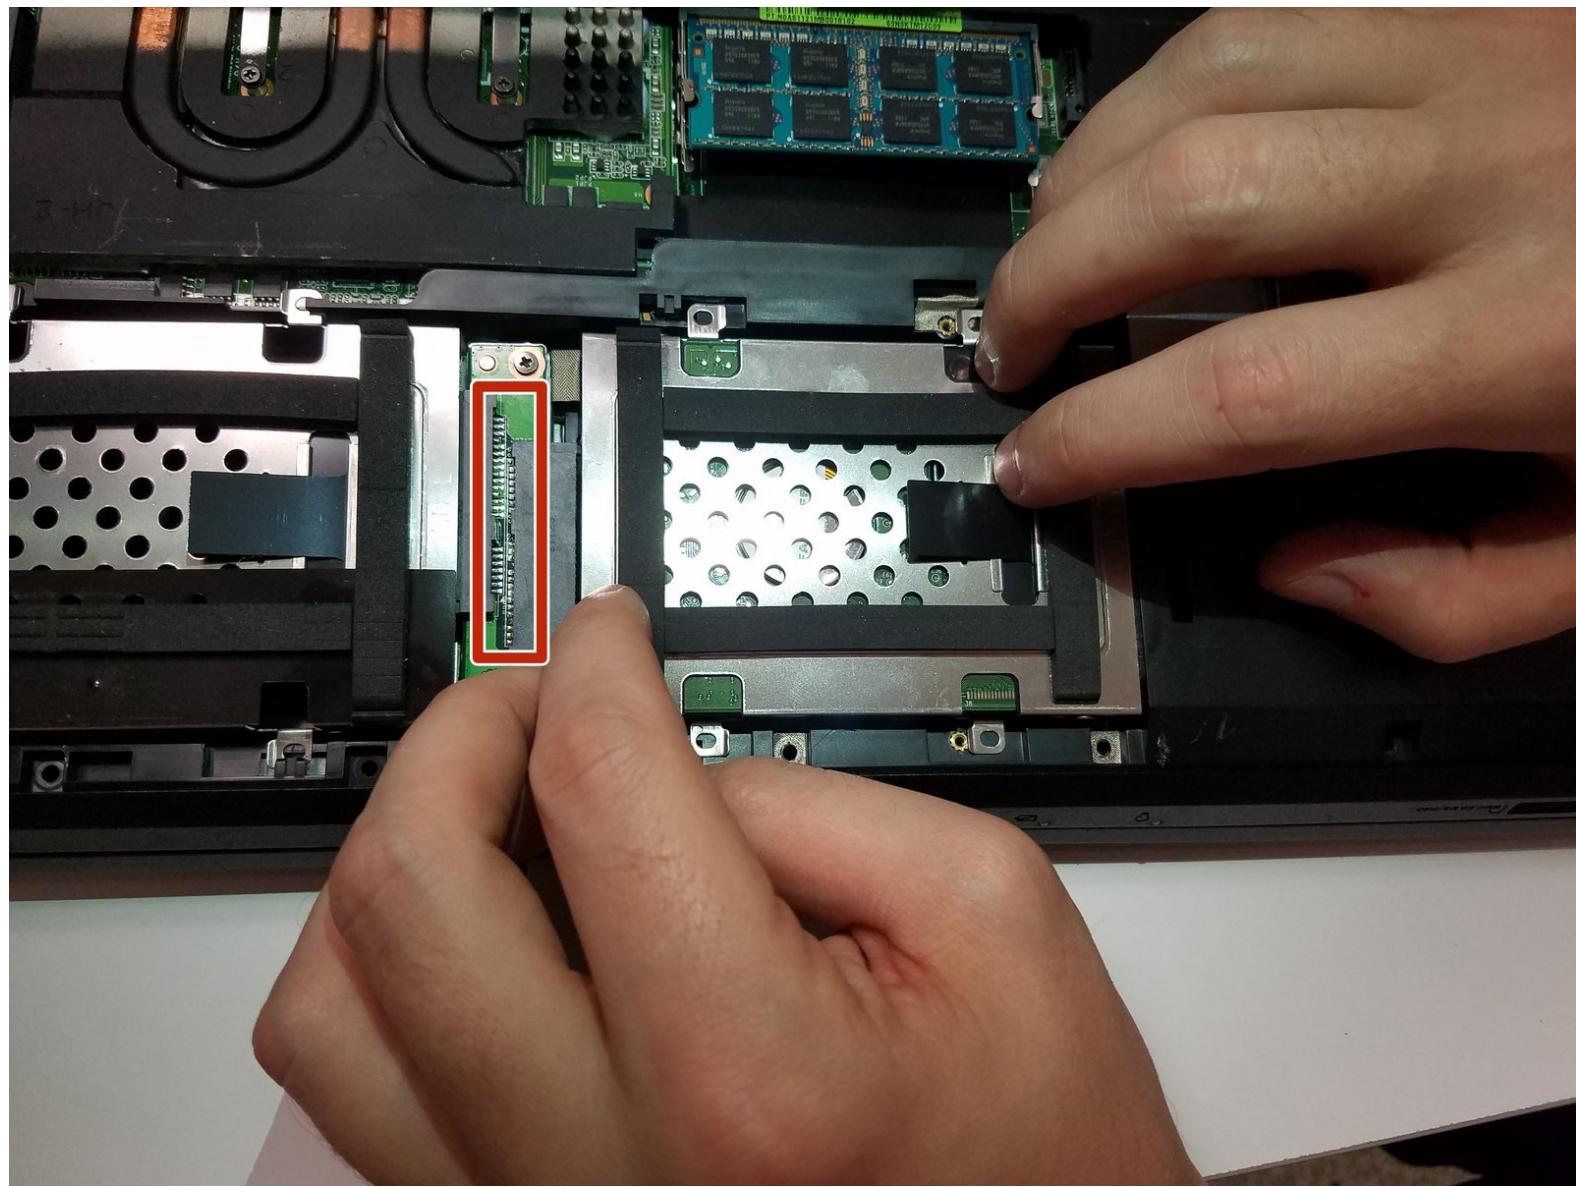

This document was generated on 2019-09-18 10:01:34 AM (MST).

INTRODUCTION

This guide will demonstrate how to remove and replace the hard drive on your Asus ROG G53SW-XT1.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)

Step 1 — Battery




- Unplug the power cable and flip the computer over.

Step 2





- Unlock the battery by pushing the switch to the right.

Step 3

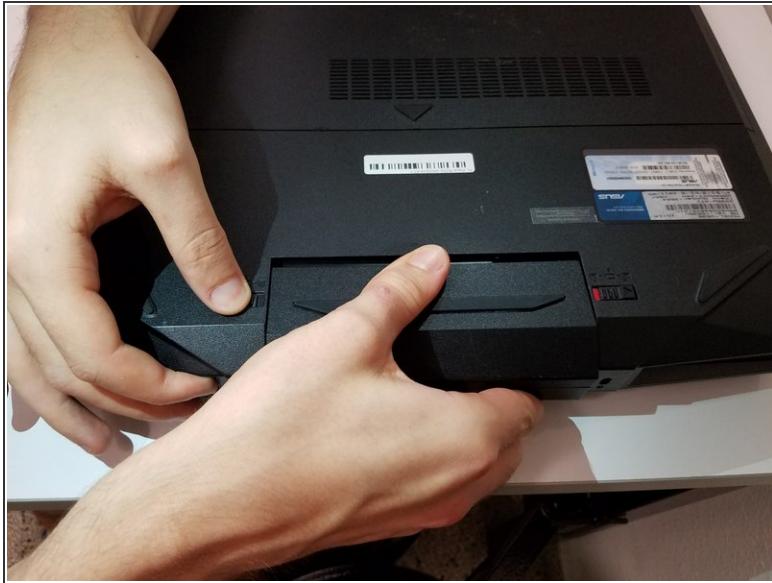

- Push and hold the left switch, then pull the battery out.

Step 4 — Keyboard

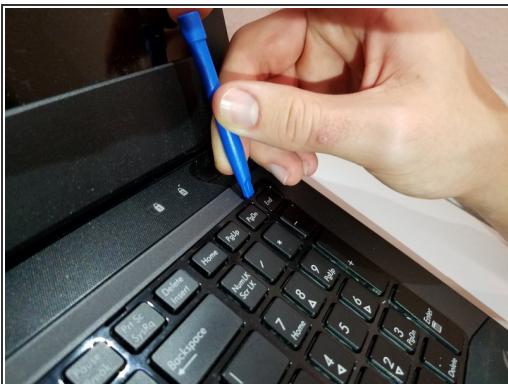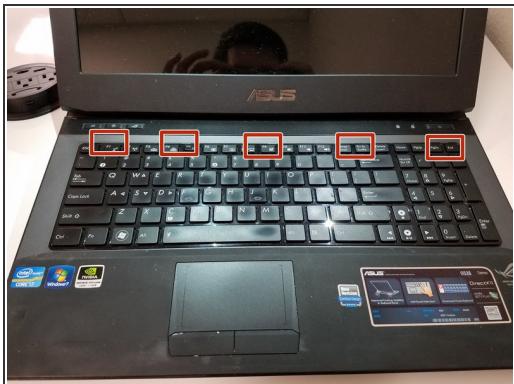

- Insert a spudger, or plastic opening tool, into these five slots and pry upwards to pop up the keyboard.

Step 5




- Disconnect the keyboard ribbon cables from the motherboard.

Step 6 — Back Panel




- Insert your screwdriver into the locking mechanism and slide it to the left. This will unlock the hand rest and allow you to pull it free.

Step 7

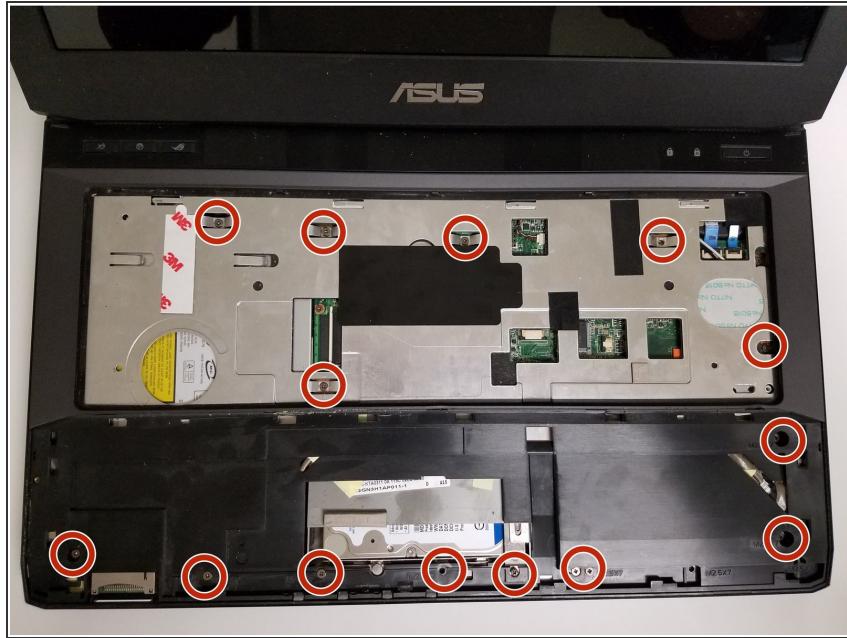


- Remove the fourteen Phillips #0 screws.

Step 8

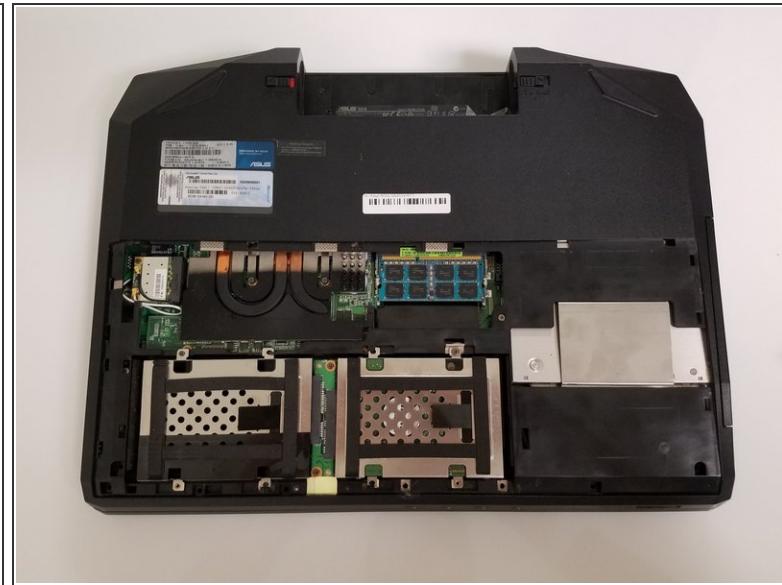

- Flip the laptop over and pull off the bottom cover.

Step 9 — Hard Drive

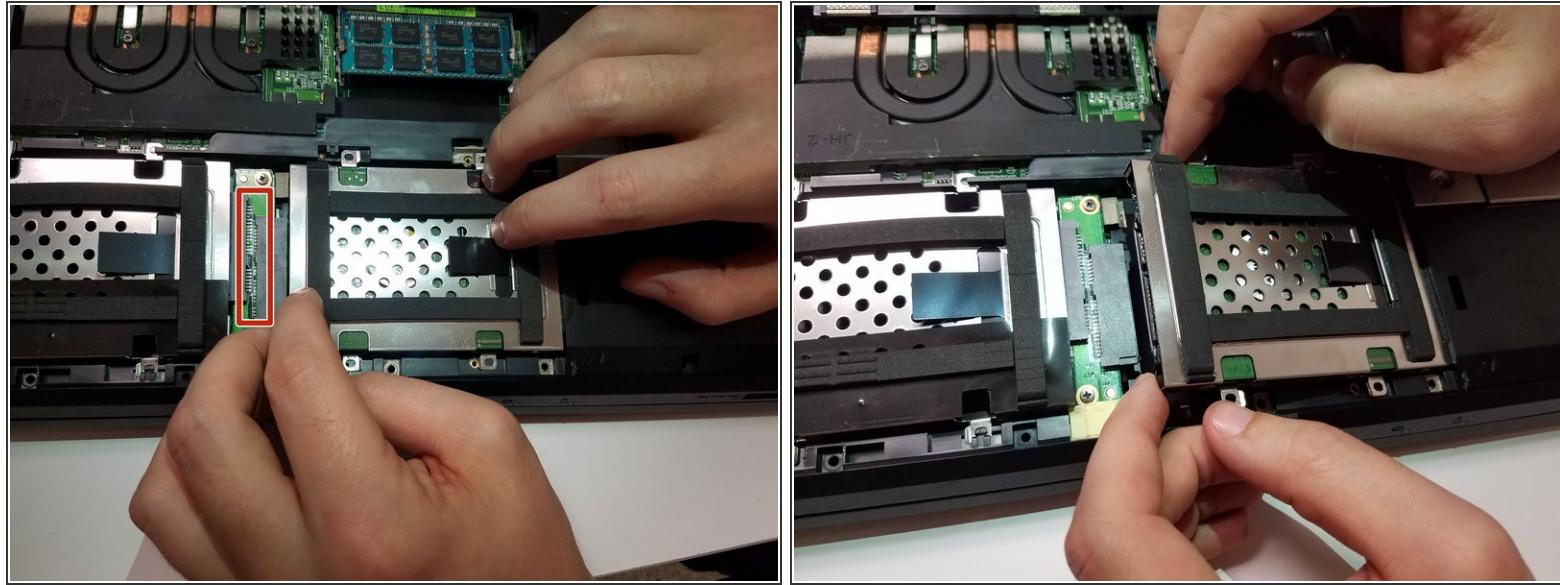

- Place your fingers along the left edge of the hard drive cover, and slide it to the right, then lift up.

Step 10



- Remove the Hard Drive and case from the laptop.
- Remove the four Phillips #0 screws from the hard drive case.

Step 11



- Slide the hard drive out of the casing.

To reassemble your device, follow these instructions in reverse order.