




# Asus ROG G53SW-XT1 RAM Replacement

This is a guide on how to access, uninstall, and install a RAM card.

Written By: sia

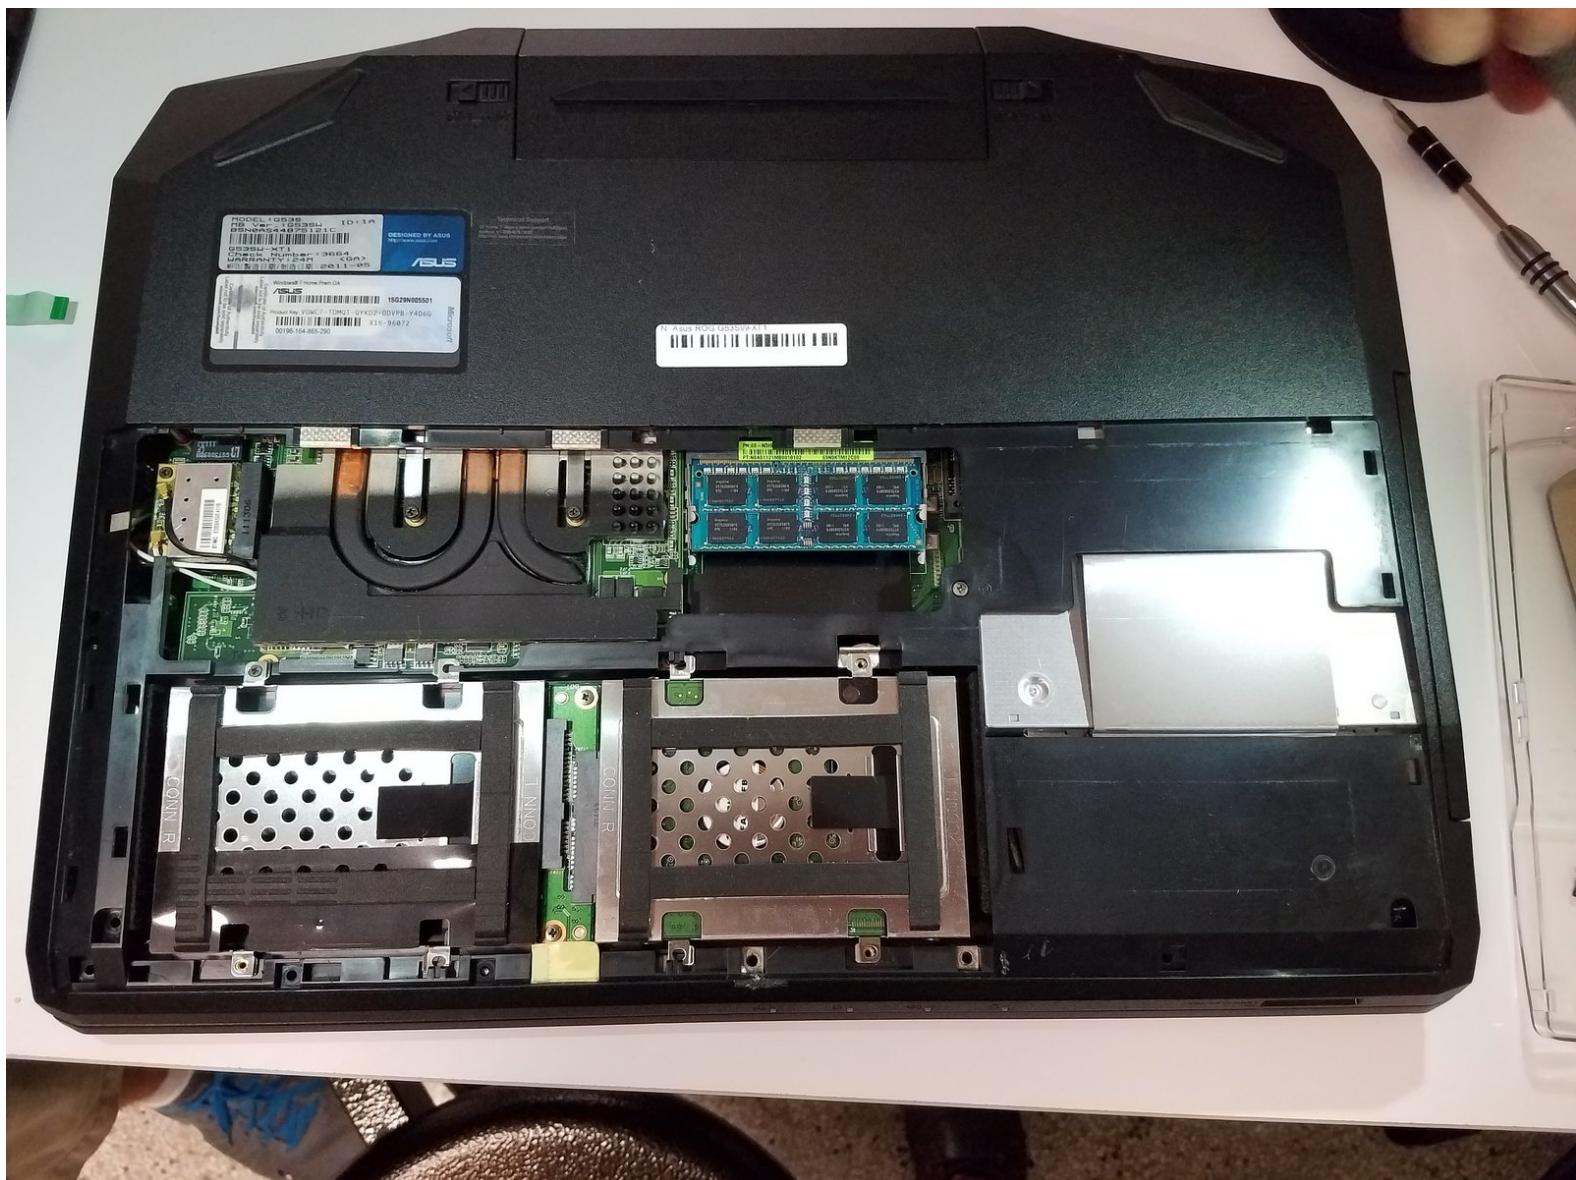

 **TOOLS:**

- **Spudger** (1)
- **Flathead 3/32" or 2.5 mm Screwdriver** (1)

## Step 1 — Battery




- Unplug the power cable and flip the computer over.

## Step 2




- Unlock the battery by pushing the switch to the right.

## Step 3

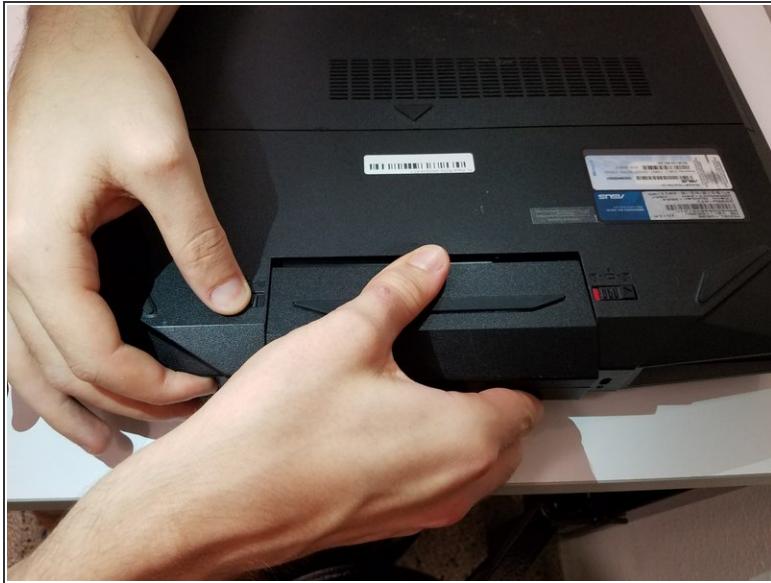


- Push and hold the left switch, then pull the battery out.

## Step 4 — Back Panel

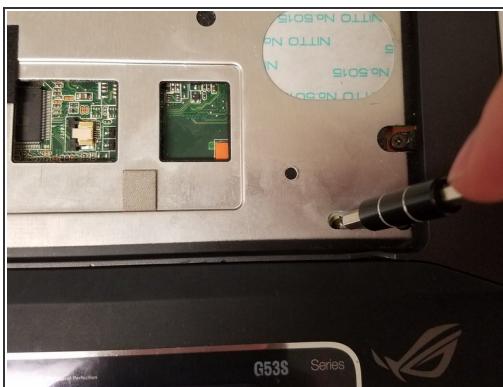


- Insert your screwdriver into the locking mechanism and slide it to the left. This will unlock the hand rest and allow you to pull it free.

## Step 5

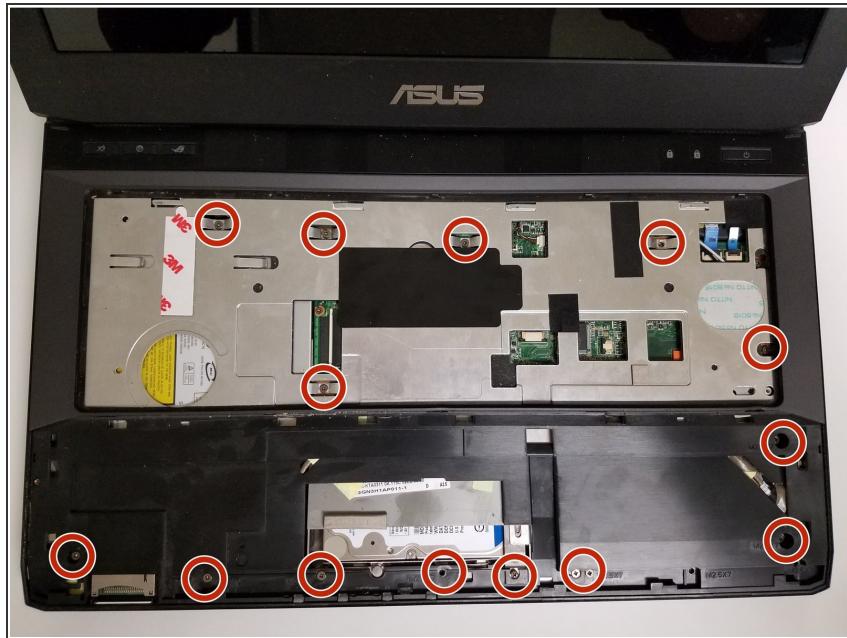


- Remove the fourteen Phillips #0 screws.

## Step 6

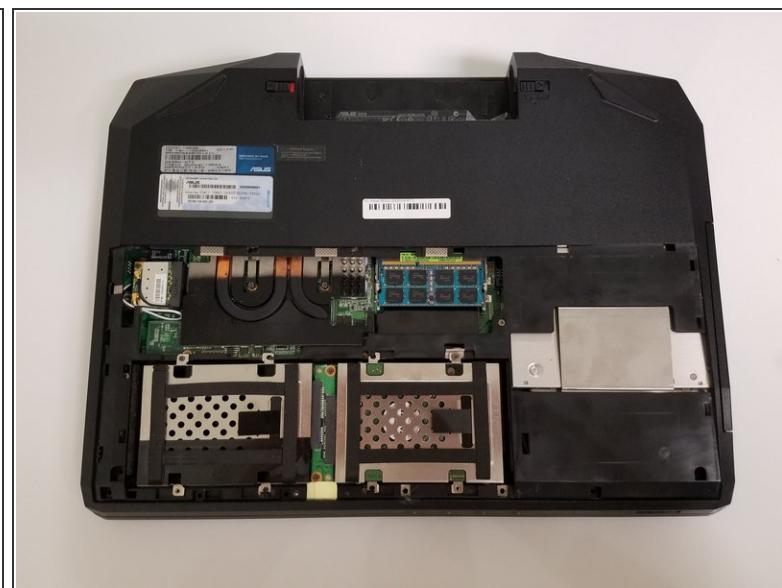

- Flip the laptop over and pull off the bottom cover.

## Step 7 — RAM

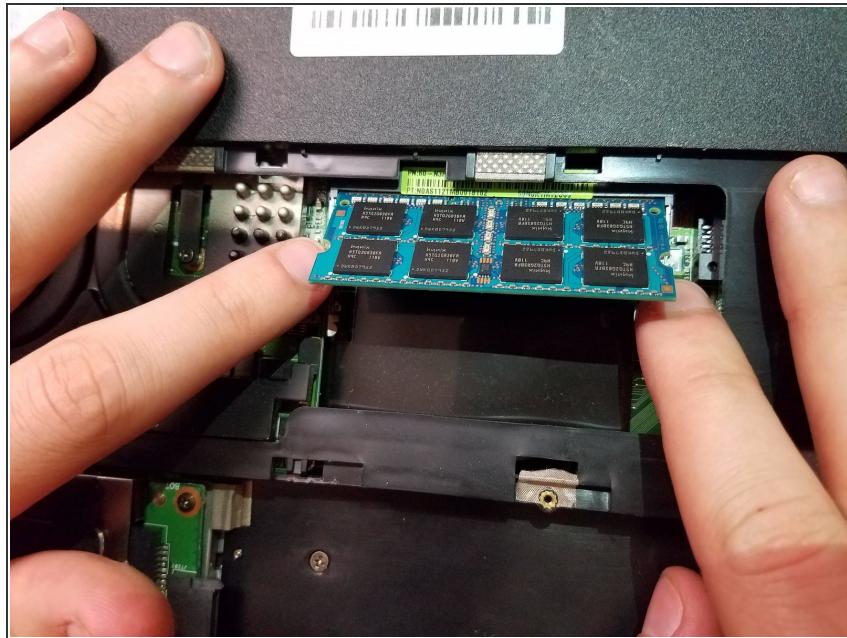

- Push the metal tabs at the side of the RAM away from one another.
- *(i)* The RAM should pop up.
- Pull the RAM out.

To reassemble your device, follow these instructions in reverse order.