



# Asus ROG G74SX-DH73-3D Disc/Optical Drive Replacement

How to replace a Asus ROG G74SX-DH73-3D optical drive.


Written By: Jackson Reynolds



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Disc/Optical Drive

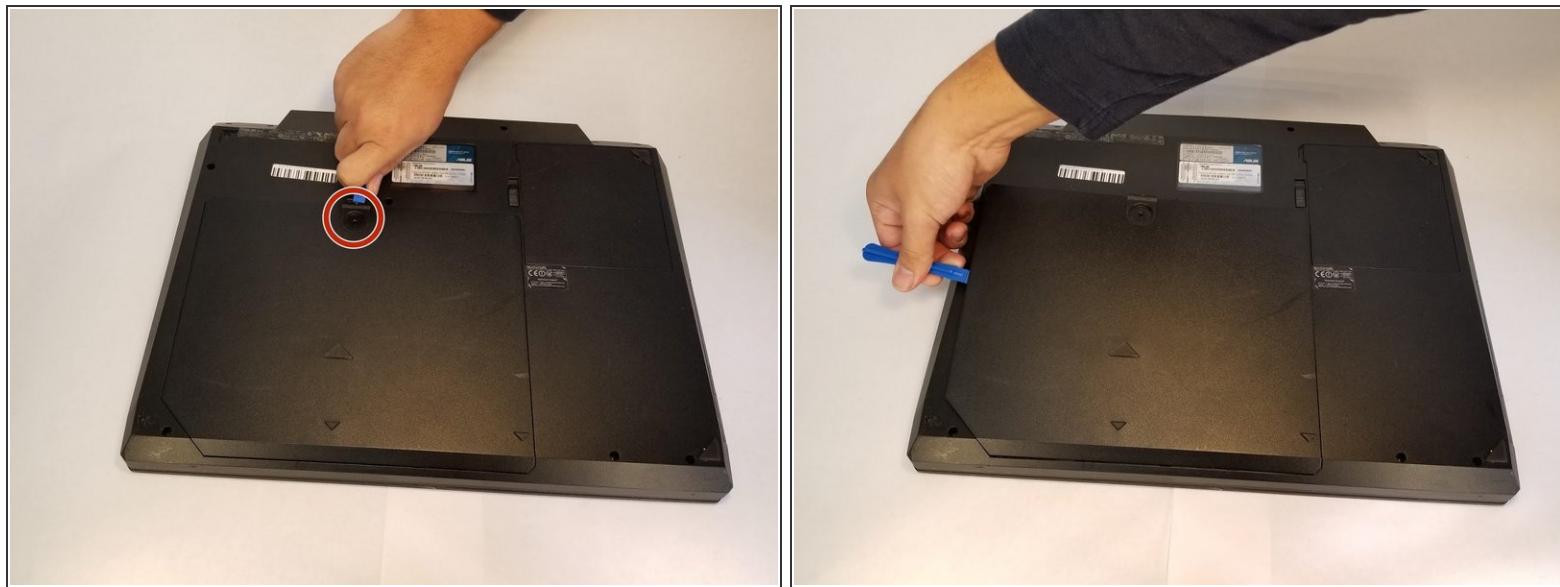


- Place the device upside-down. Unscrew the screw at the top of the cover and remove the cover by using a plastic opening tool.

## Step 2

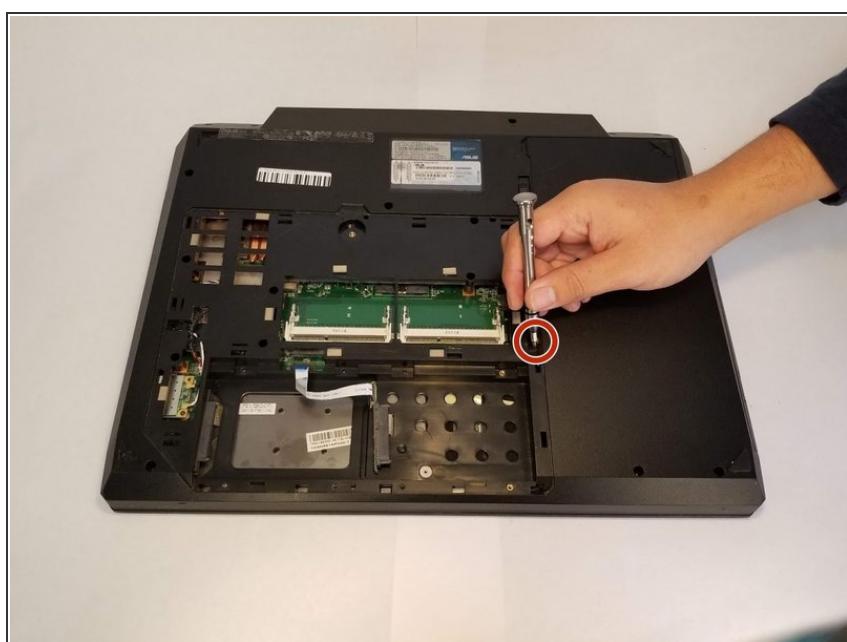

- Remove the screw that is located on the right edge of the removed cover. The screw is in a small opening.

## Step 3

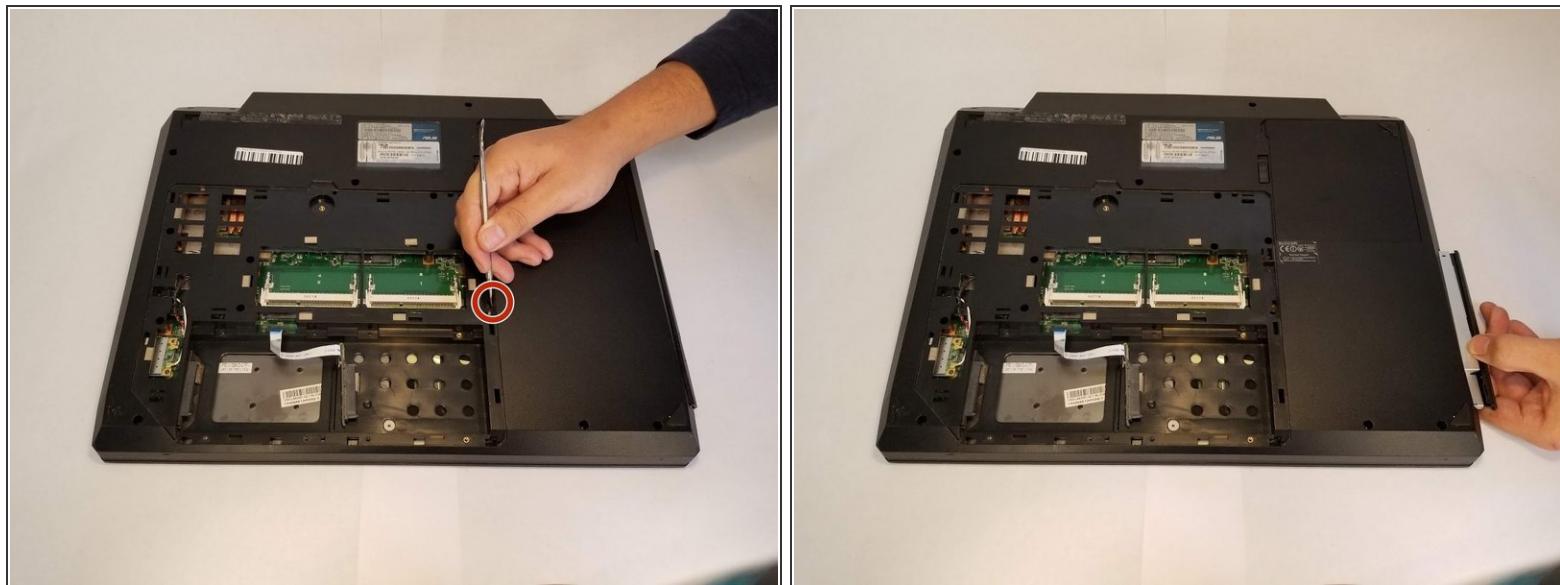

- Inside the opening that the screw was in, use a nylon spudger or any thin tool to push against the inside edge of the disc/optical drive.
- With the disc/optical drive slightly popped out of the socket, pull the rest of it out by hand.

To reassemble your device, follow these instructions in reverse order.