



# Asus ROG G74SX-DH73-3D Track Pad Buttons Replacement

How to replace Asus ROG G74SX-DH73-3D trackpad buttons.

Written By: Josh Reyes





## PARTS:

- [Replacement Battery \(1\)](#)

## Step 1 — Battery



- With your right hand, push the latch completely up to where you can see the battery pop slightly up. Pick and pull at the tab with your left hand.
- (i)* You can now fully remove the battery from the device.

## Step 2 — Track Pad Buttons




- Remove the large flathead screw holding the back cover in place.
- Pull the cover off by prying it open starting from the top center and moving outwards.

## Step 3



- Remove the eight short screws holding in the two metal covers near the bottom.
- Remove the two metal covers.

## Step 4

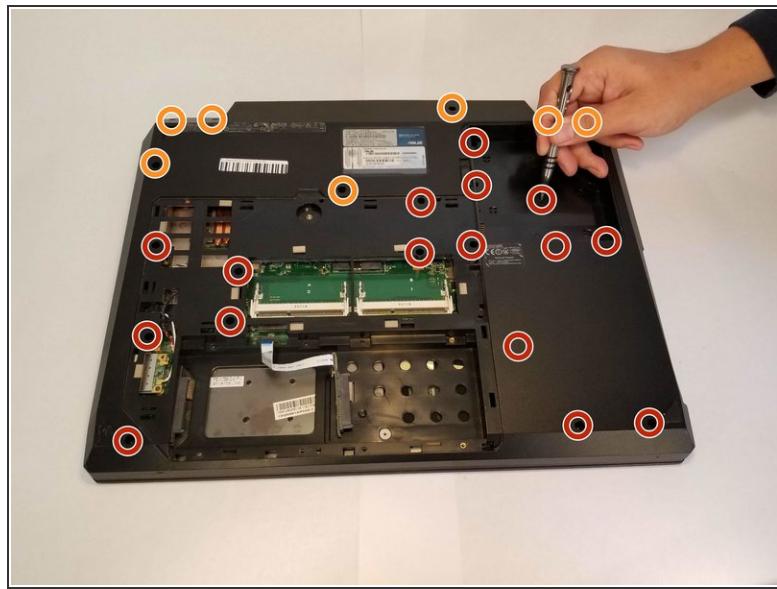

- Remove the battery to access the screws under it.
- Remove these 16 screws with a regular Phillips head screw-driver.
- These Phillips head screws will require a longer bit or an extension.

## Step 5




- Flip the device back over.
- Pull off the plastic cover behind the screen.
- Remove the four Phillips head screws holding the screen in place.

## Step 6



- With the screen removed, pry the piece that has the keyboard and the track pad on it.

## Step 7

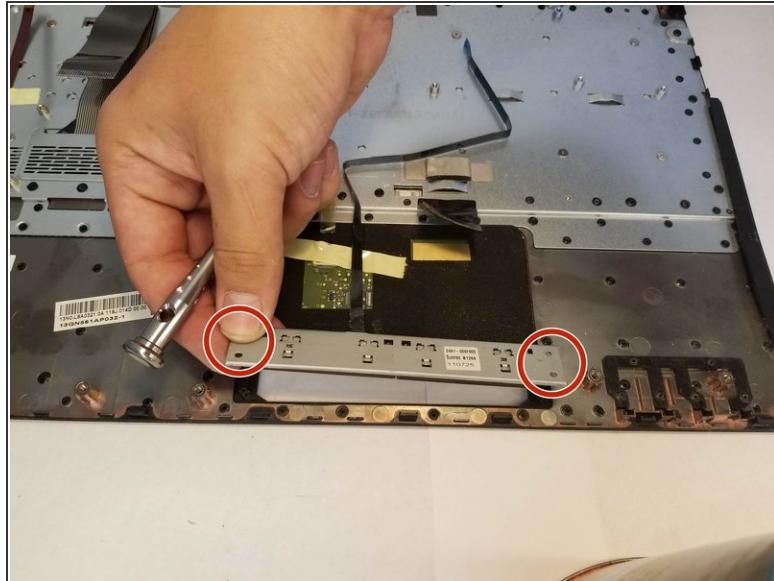

- Remove the two Phillips head screws holding the buttons in place.

To reassemble your device, follow these instructions in reverse order.