



# Asus ROG G751JL-BB17T29 Disc drive Replacement

This guide will show how to release the CD-ROM Player from the body of the computer and replace it.

Written By: Kyle Miller



This document was generated on 2020-04-05 01:06:00 PM (MST).

## INTRODUCTION

This guide will show how to release the CD-ROM Player from the body of the computer and replace it.

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Optical drive




- A rubber flap covers one of the lower case screws, fold it away from the corner to reveal the screw.
- Remove the single 5.2 mm Phillips #1 screw.

## Step 2

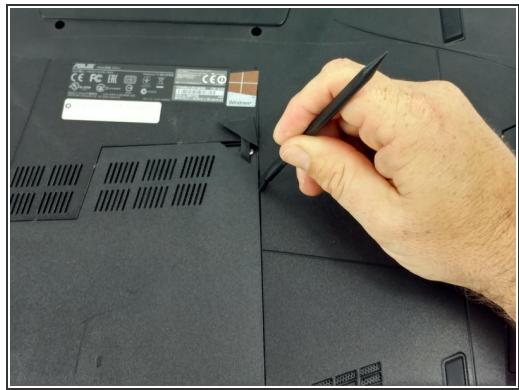

- Using the nylon spudger, remove the back center panel.

## Step 3

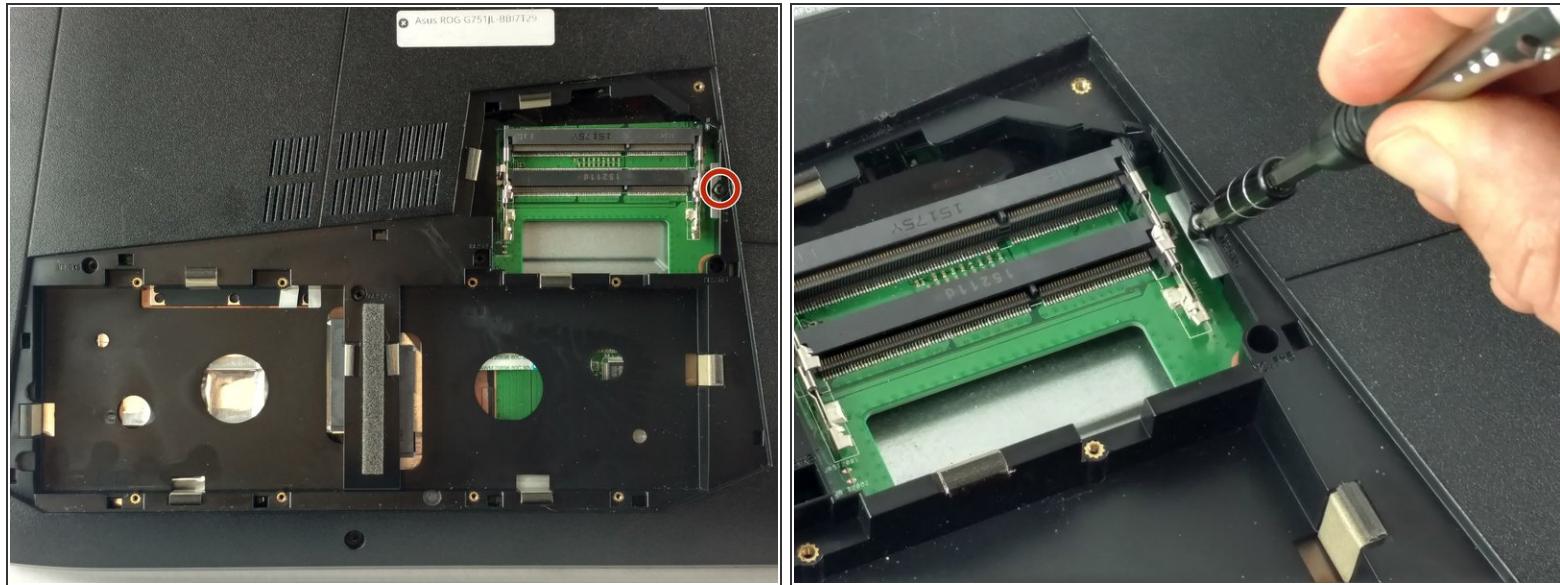

- Remove the 5 mm Phillips screw that is located underneath the back panel.

## Step 4



- Pull out the optical drive located on the side of the laptop.

To reassemble your device, follow these instructions in reverse order.