




Asus ROG G751JL-BSI7T28 Display Assembly Replacement

How to replace an Asus ROG G751JL-BSI7T28 display assembly.

Written By: Kristen Gismondi

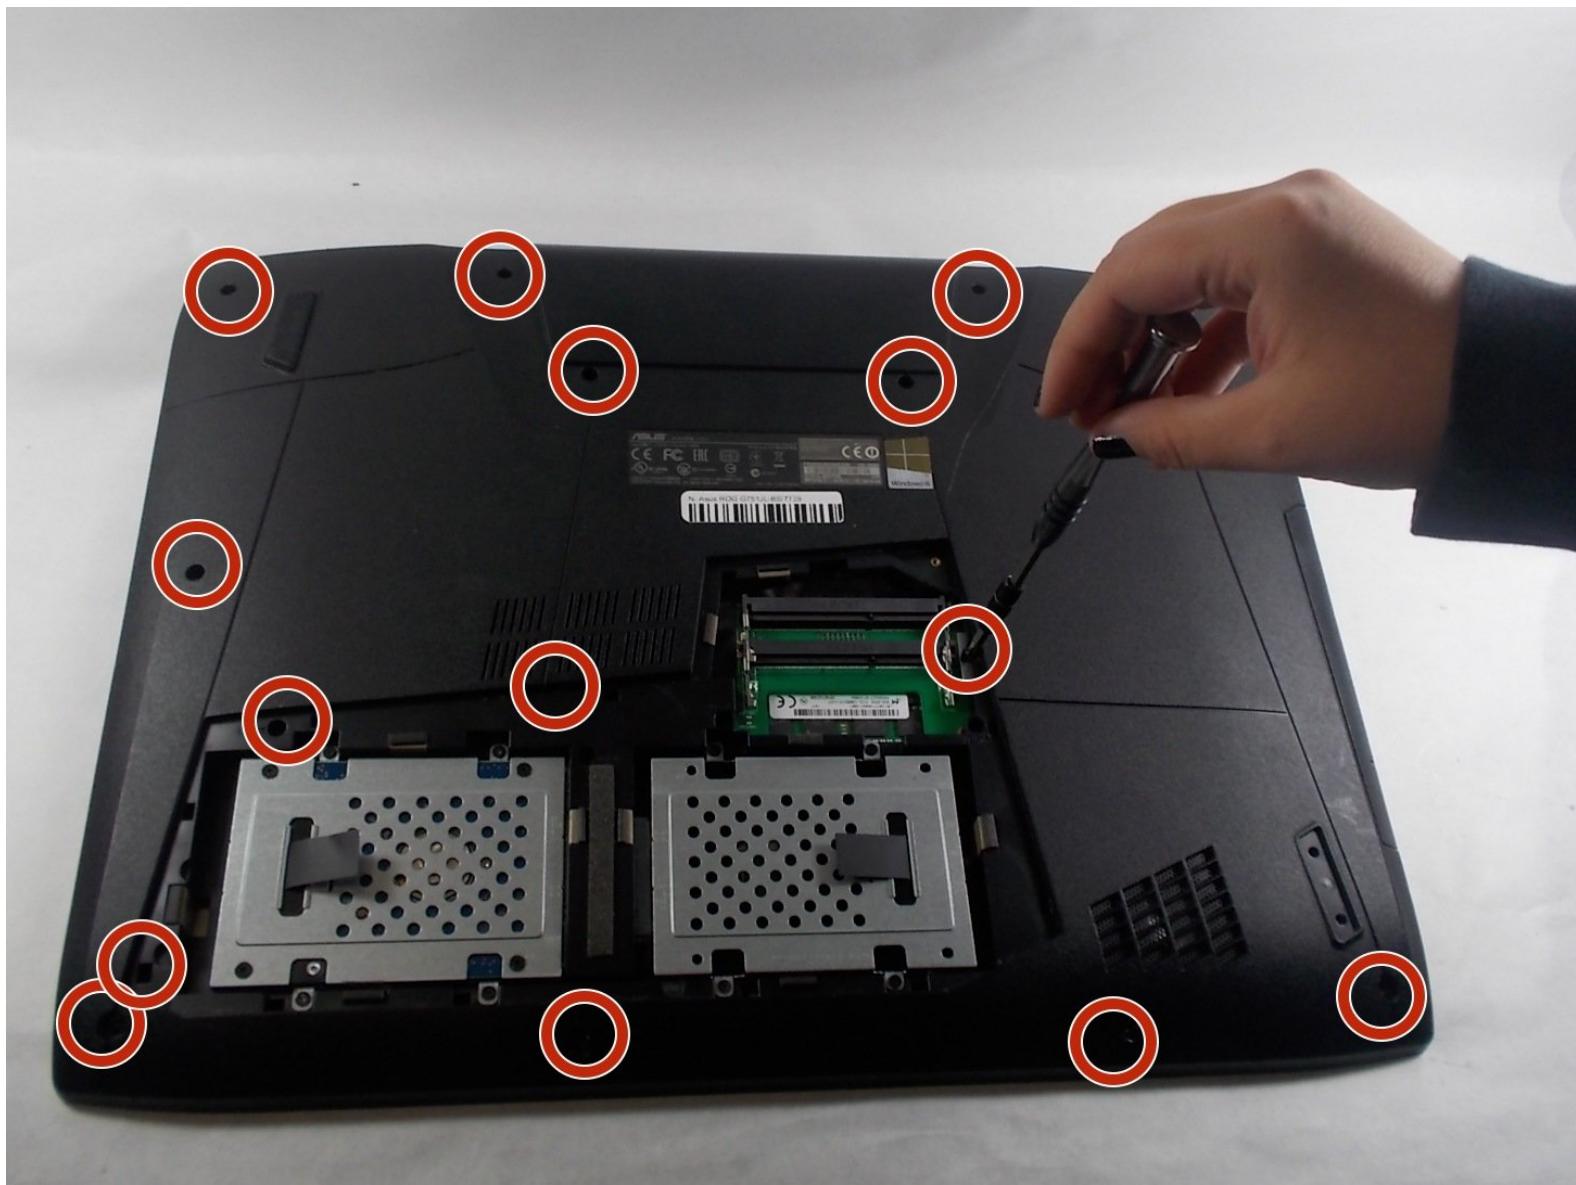

INTRODUCTION

The Asus ROG G751JL-BSI7T28 Display Assembly may need to be replaced if it is damaged, or may need to be removed for repair if it is not operating properly. This guide will show you how to remove the display assembly from the laptop.

Make sure the device is powered off before you begin.

TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Back Panel





- With the laptop closed, turn it upside-down so the bottom is facing up toward you.

Step 2



- Place a spudger into the notch, and pry the small triangular piece away from the laptop.
- Remove the single 3mm Phillips #0 screw.
- Place a spudger beneath the back panel, and pry it away from the laptop.

Step 3 — Display Assembly

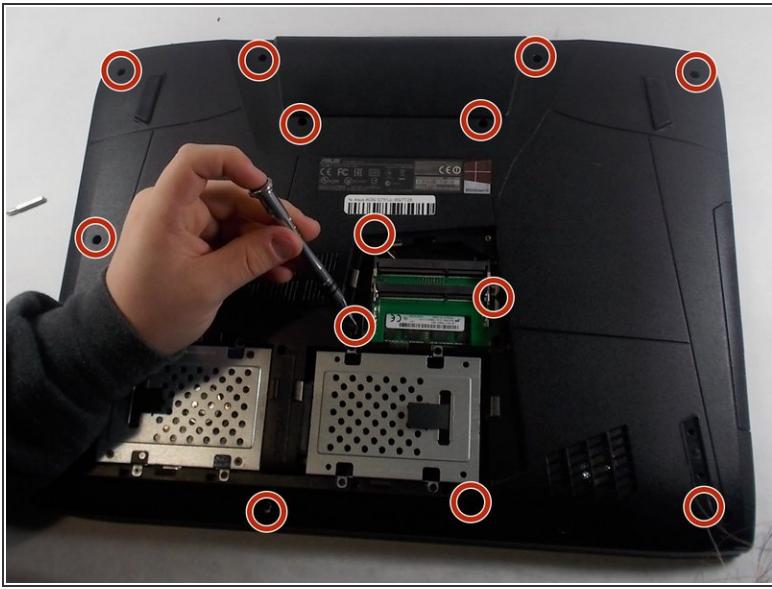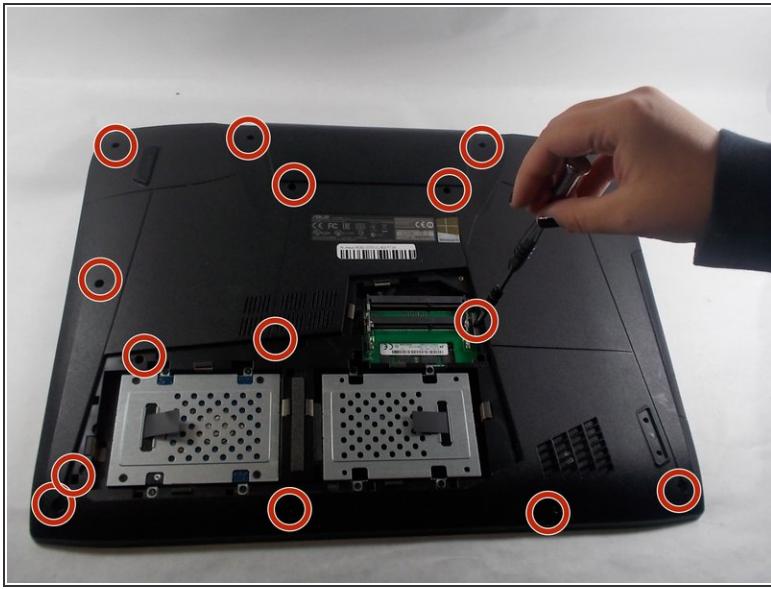


- Remove all 5mm Phillips #0 screws from the back cover.

Step 4



- Use a spudger to pry the disc drive out of the laptop.

Step 5

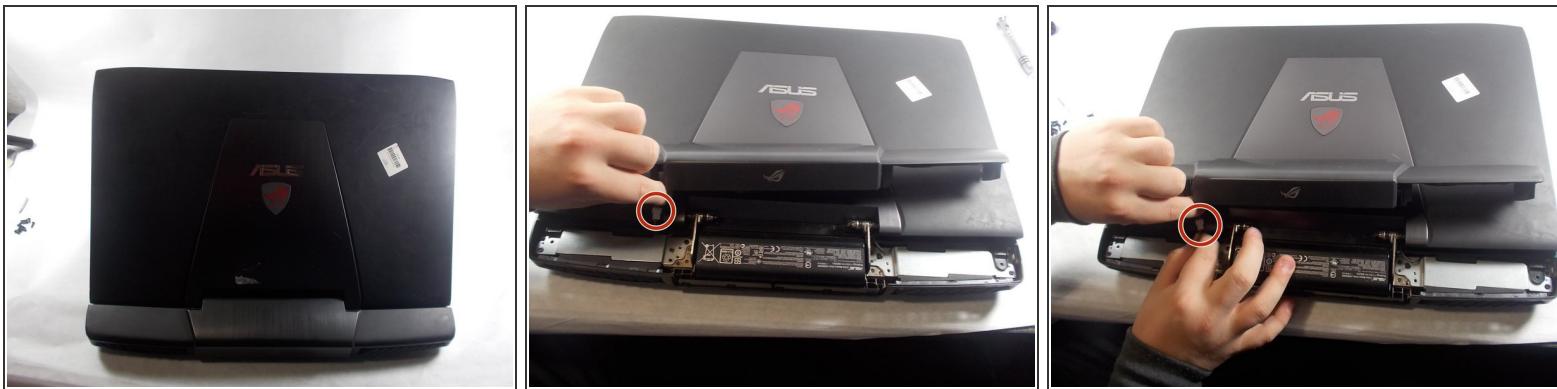



- Open the laptop and turn it so that the ASUS logo is facing you.
- Pull up on the display hinge housing shroud.
- Disconnect the RGB light power cable in the shroud before fully removing it.

Step 6



- Remove the 5mm Phillips #0 screws.
- Lift up the silver brackets on each side of the laptop.

Step 7

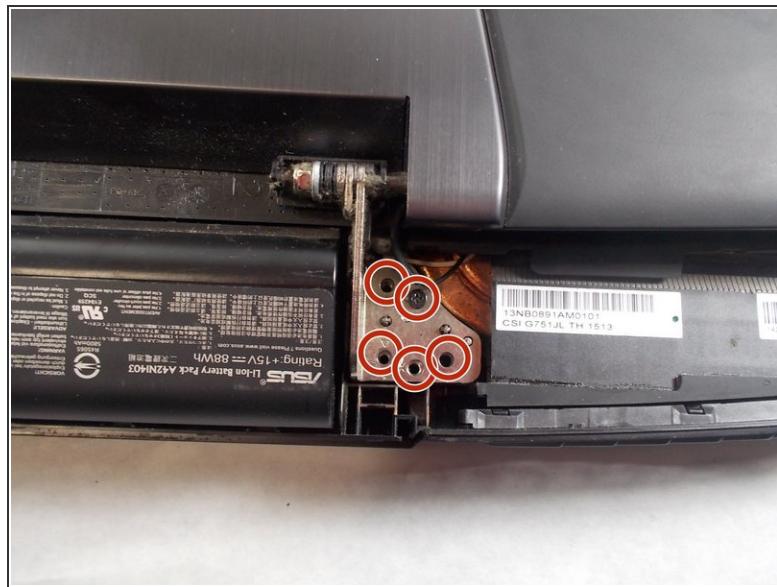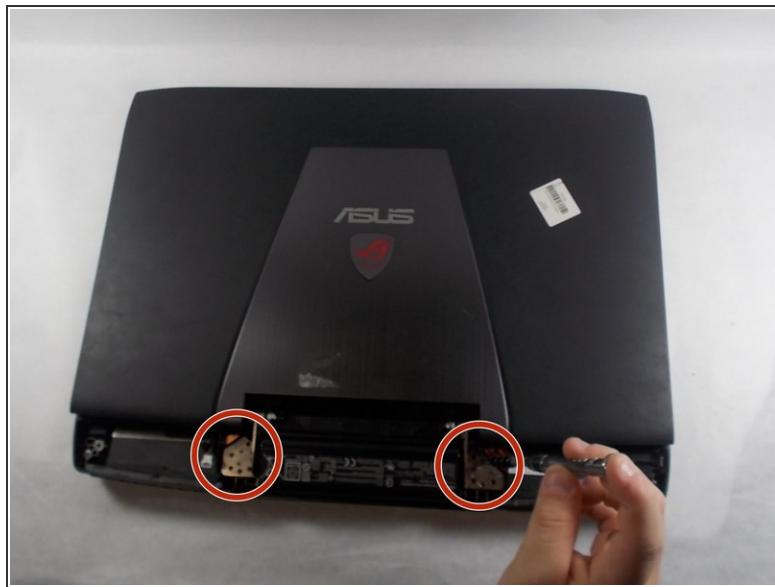

- Remove the 5mm Phillips #0 screws from the hinges.
- Detach the ribbon cable, and remove the display assembly from the laptop.

To reassemble your device, follow these instructions in reverse order.