



Asus ROG G751JL-BSI7T28 Keyboard Replacement

The keyboard for the Asus ROG G751JL-BSI7T28 is an integral part of the laptop. Use this guide if your keyboard is malfunctioning or has stopped working.

Written By: Kristen Gismondi



INTRODUCTION

The keyboard for the Asus ROG G751JL-BSI7T28 is an integral part of the laptop. Use this guide if your keyboard is malfunctioning or has stopped working.

TOOLS:

- [Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Back Panel





- With the laptop closed, turn it upside-down so the bottom is facing up toward you.

Step 2



- Place a spudger into the notch, and pry the small triangular piece away from the laptop.
- Remove the single 3mm Phillips #0 screw.
- Place a spudger beneath the back panel, and pry it away from the laptop.

Step 3 — Display Assembly

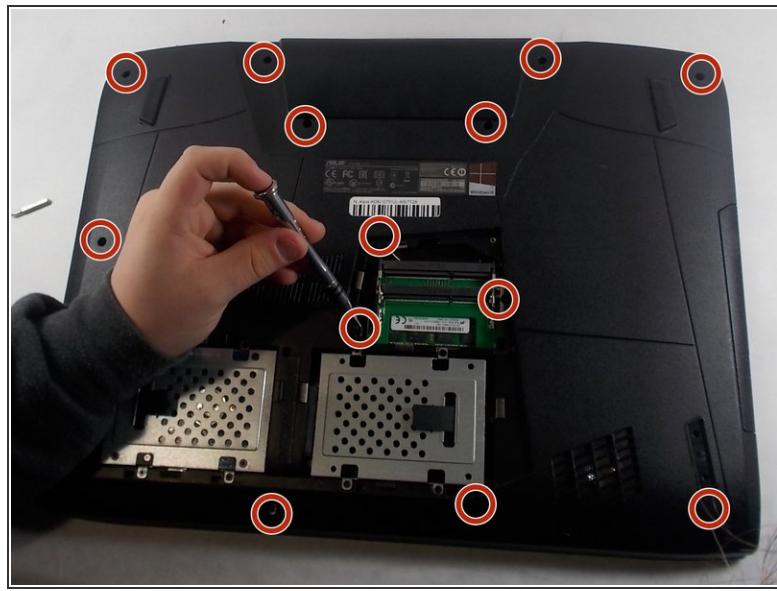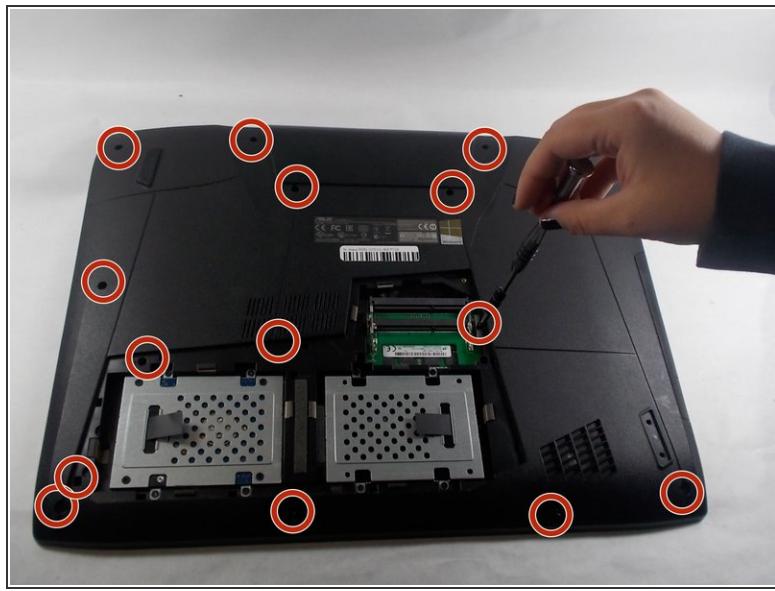


- Remove all 5mm Phillips #0 screws from the back cover.

Step 4



- Use a spudger to pry the disc drive out of the laptop.

Step 5

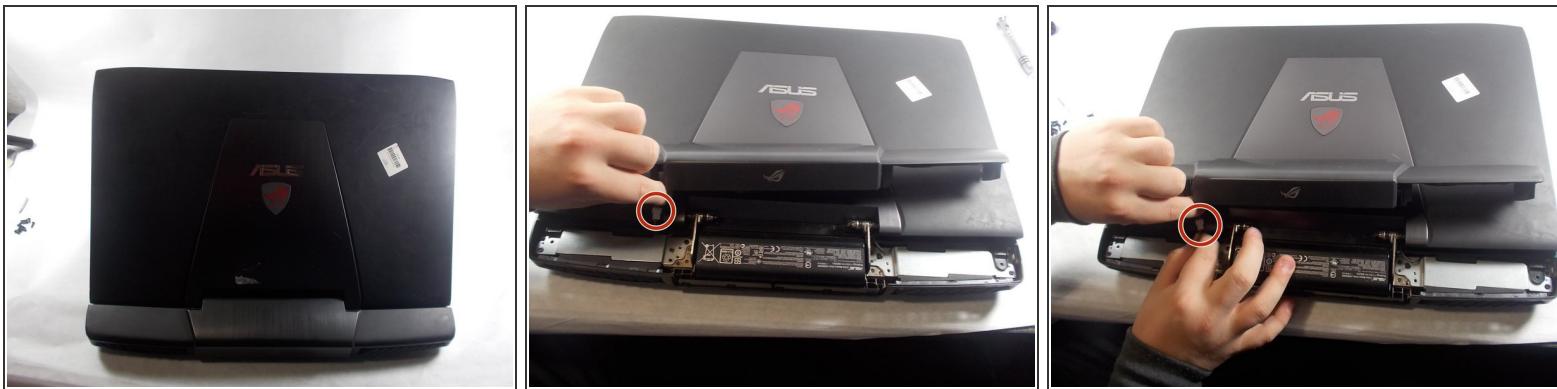



- Open the laptop and turn it so that the ASUS logo is facing you.
- Pull up on the display hinge housing shroud.
- Disconnect the RGB light power cable in the shroud before fully removing it.

Step 6





- Remove the 5mm Phillips #0 screws.
- Lift up the silver brackets on each side of the laptop.

Step 7

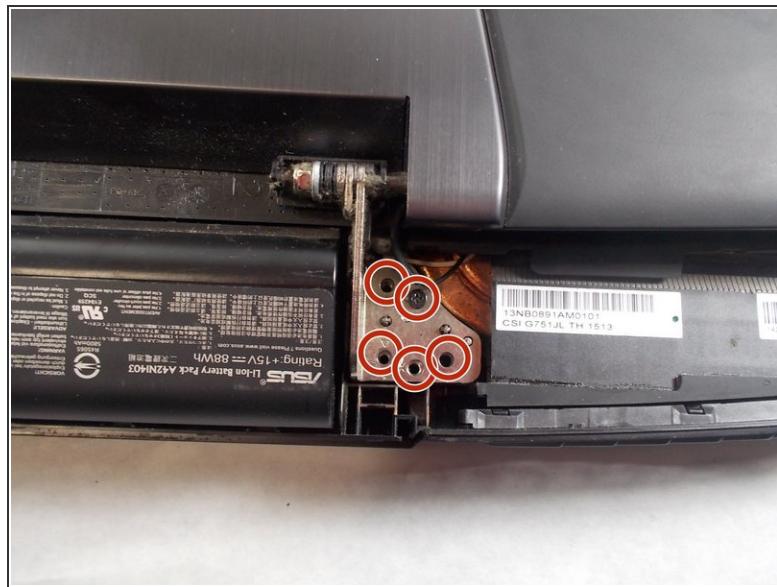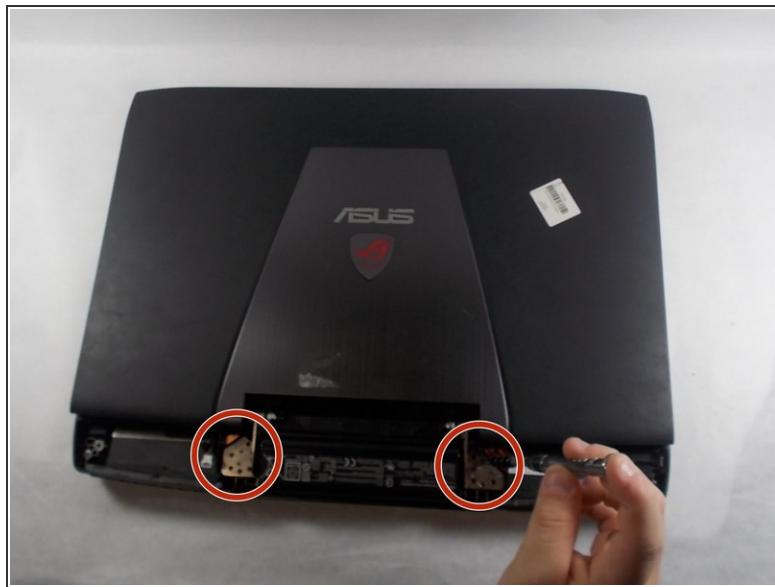

- Remove the 5mm Phillips #0 screws from the hinges.
- Detach the ribbon cable, and remove the display assembly from the laptop.

Step 8 — Keyboard

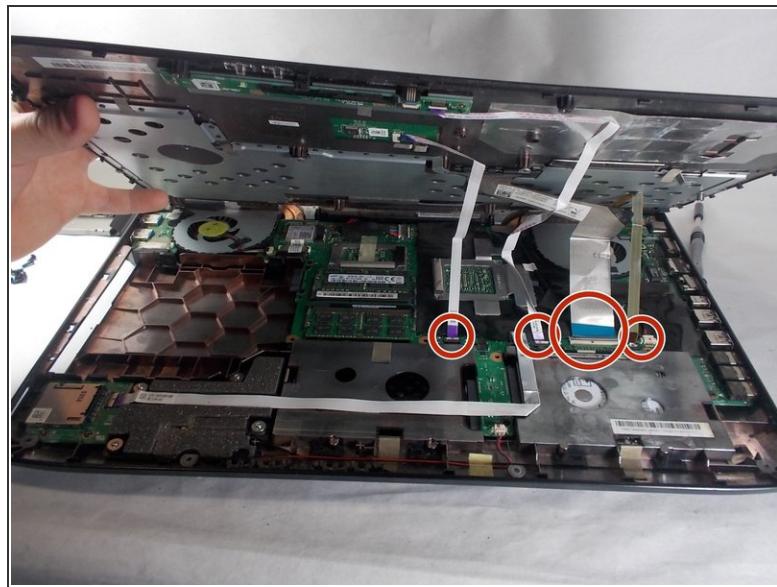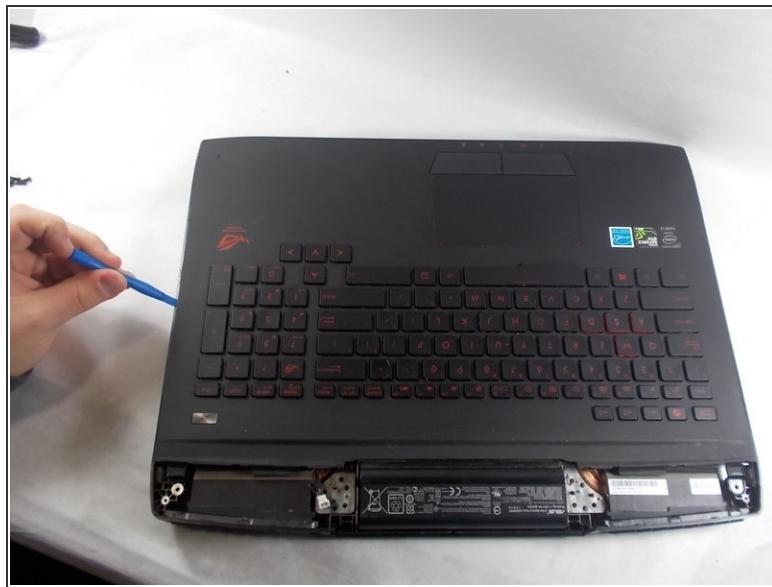

- Lift the keyboard up.
- Use an opening tool to detach the ribbon cables connecting the keyboard to the rest of the laptop.
- Remove the keyboard from the laptop.

To reassemble your device, follow these instructions in reverse order.