




# Asus ROG G751JL-DS71 RAM Replacement

Replacing the RAM of Asus laptop.

Written By: Gwennie Kidd

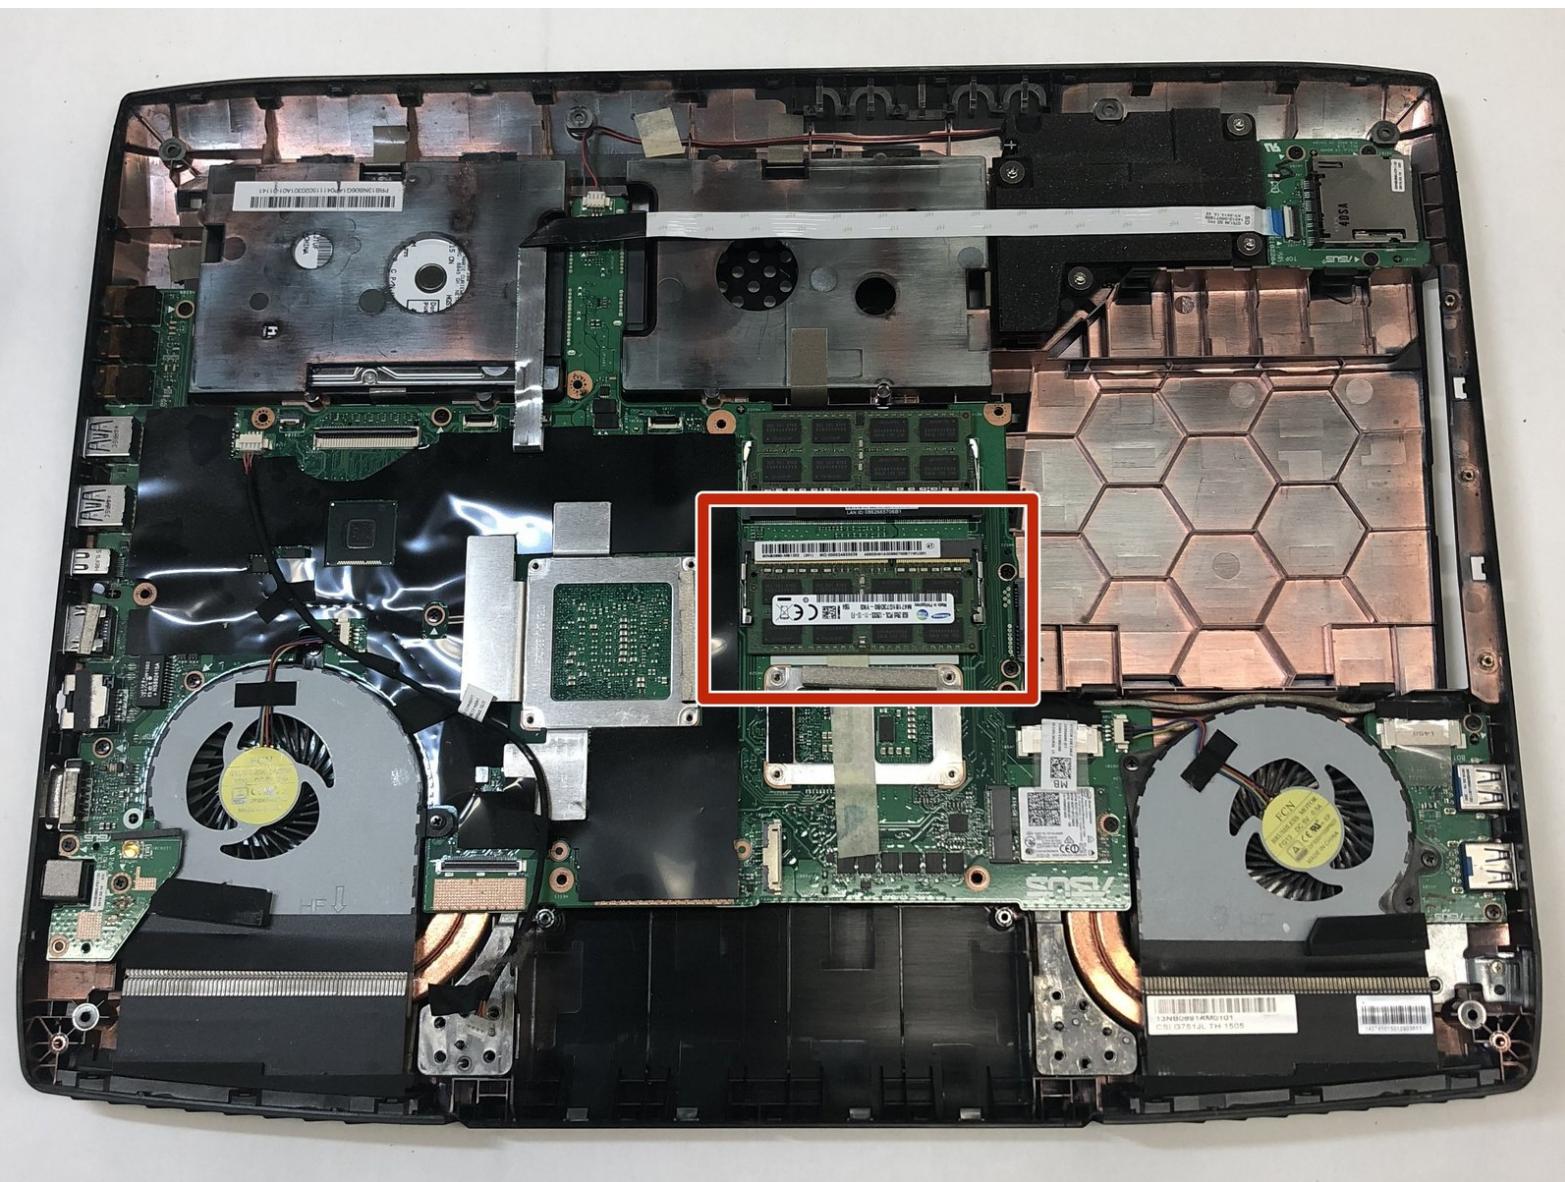

## INTRODUCTION

This guide will explain the step-by-step process for replacing your RAM. Replacing the RAM could be necessary if your laptop is not turning on.

### TOOLS:

- Spudger (1)
- Phillips #1 Screwdriver (1)
- Tweezers (1)
- iFixit Opening Tools (1)

## Step 1 — CD-ROM Player



- Lift the rubber cover found on the bottom of the laptop.
- Remove the 5.2 mm screw with a Phillips 1 Screwdriver.

## Step 2



- Use the nylon spudger to remove the back center panel.

## Step 3



- Use a Phillips 1 Screwdriver to remove the 5 mm screw that is located underneath the back panel.

## Step 4



- Pull out the optical drive found on the side of the laptop.

## Step 5 — Top Rear Panel



- Use a pair of tweezers to remove the top four rubber stoppers found on the bottom of the laptop.

## Step 6




- Use a Phillips 1 Screwdriver to remove the top four 8.5 mm screws.

## Step 7




- Use a nylon spudger to carefully pry the top back panel off.
- ⚠ While removing the top back panel, be careful not to break the four pin connector located underneath.
- Disconnect the four-pin connector and remove the top back panel from the computer.

## Step 8 — Keyboard

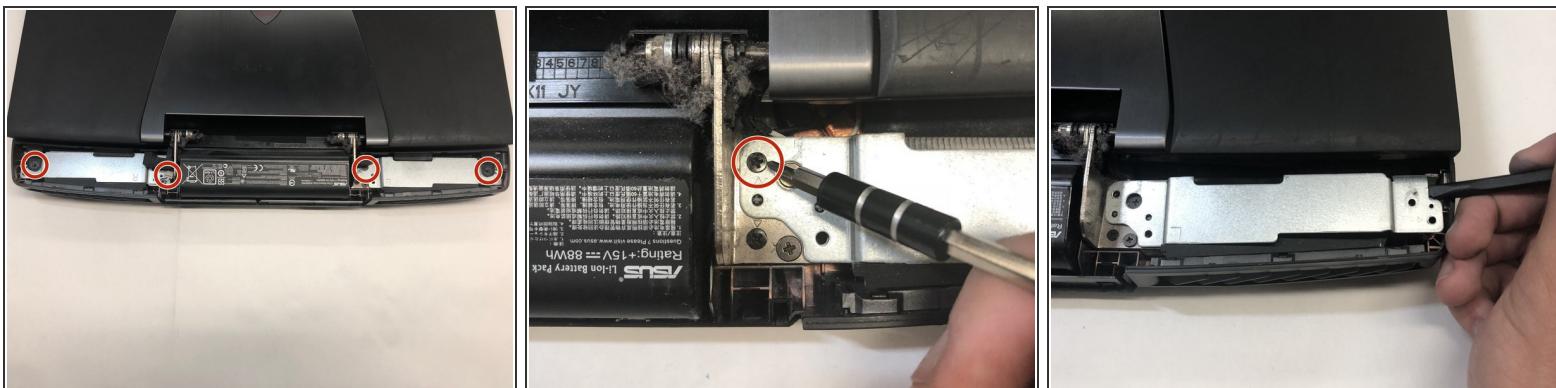

- Use a Phillips 1 Screwdriver to remove the four 6.8 mm screws underneath the back panel.
- Lift away the metal housings from each side of the laptop.

## Step 9

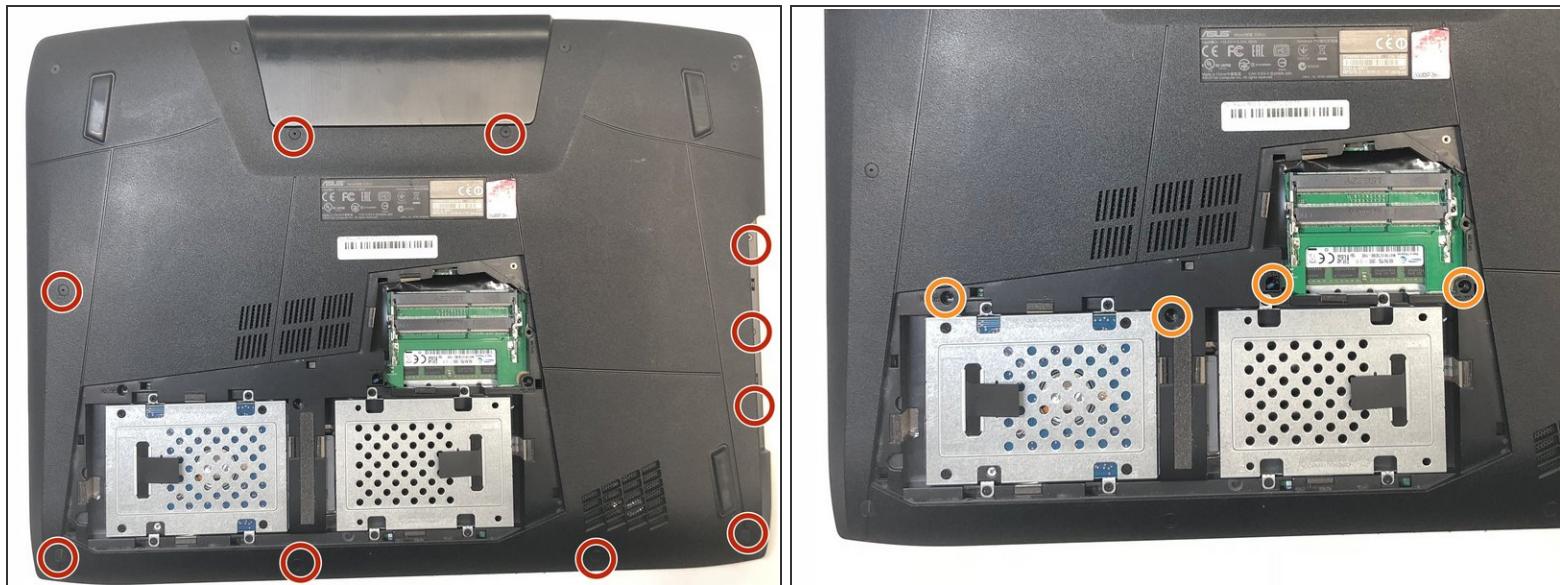

- Use a Phillips 1 Screwdriver to remove the ten 5.2 mm screws holding the main panel in place.
- Use a Phillips 1 Screwdriver to remove the four 5.2 mm screws underneath the center panel.



## Step 10



- Use a plastic opening tool to pry the keyboard from the base of the laptop.



**⚠** Lift the keyboard carefully so as to not tear or break the four ribbon connectors underneath the keyboard.

## Step 11

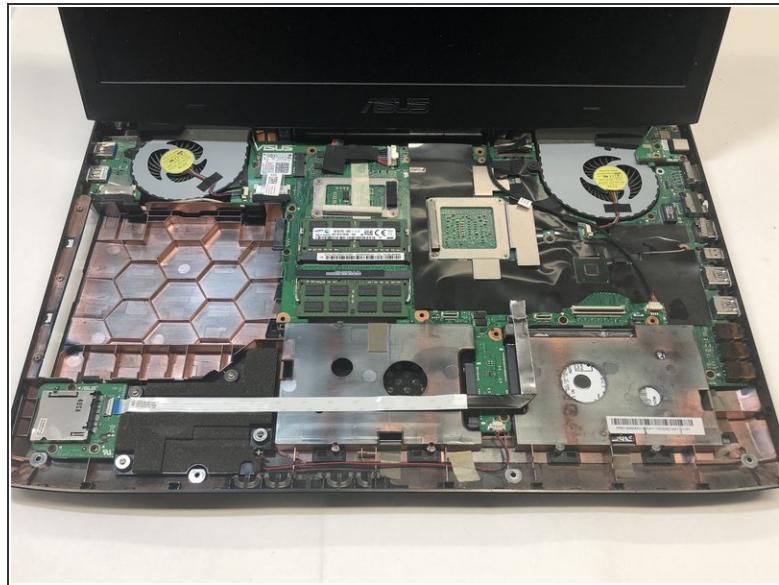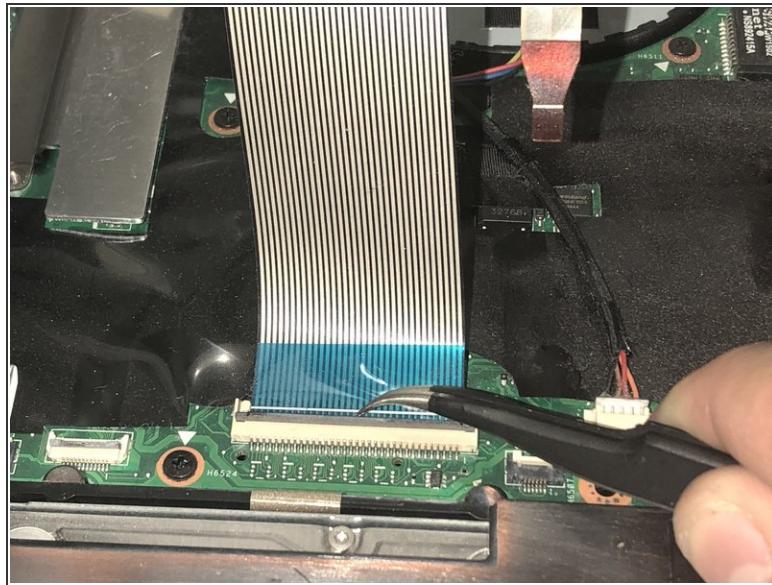

- Use a pair of tweezers to undo each of the four ribbon connectors.
- The keyboard is now completely disconnected from the laptop and you can remove it.

## Step 12 — RAM

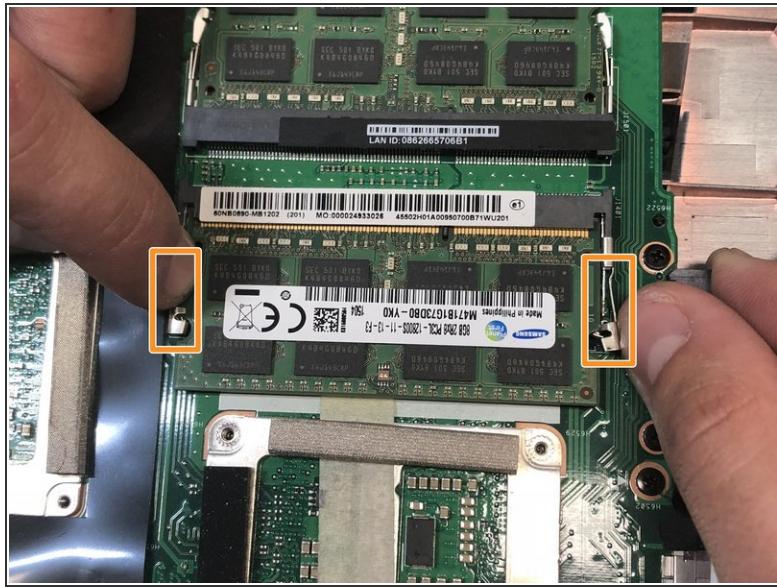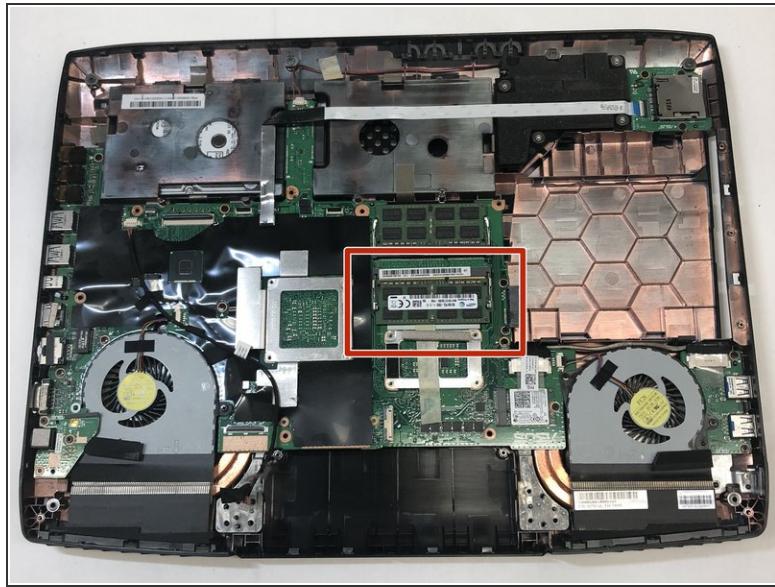

- First locate the RAM.
- Then pull the tabs located on the left and right of the RAM outwards to release the RAM.
- You can now remove the RAM and replace it.

To reassemble your device, follow these instructions in reverse order.