



Asus ROG G751JT-DH72 HDD/SSD Replacement

This guide will help you replace or upgrade the storage in your Asus ROG G751JT-DH72

Written By: Anum Haidari



INTRODUCTION

Use this guide to replace the hard drive in your device.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — HDD/SSD



- Lift up the rubber tab located in the upper-right corner of the backing plate.

Step 2




- Use a Phillips #1 screwdriver to remove the 5.2 mm screw behind the rubber tap.

Step 3



- Carefully pull the backing plate off. If you have a pry tool, you can pry on the edges carefully.

Step 4

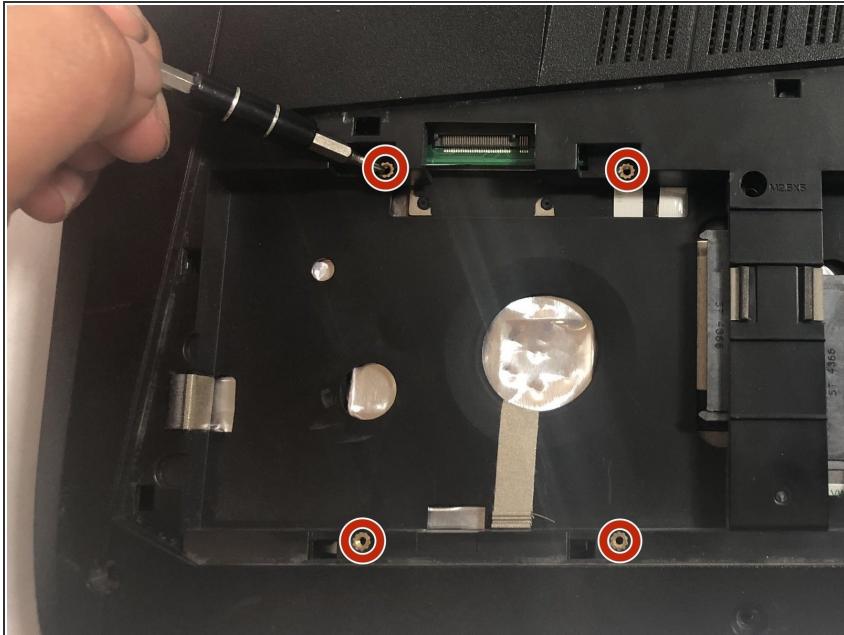

- Use a Phillips head screwdriver to remove the four 2.4 mm screws from the hard drive mount.
- Remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.