




# Asus ROG G752V Motherboard Replacement

This guide will help you remove and replace your motherboard.

Written By: Jeong

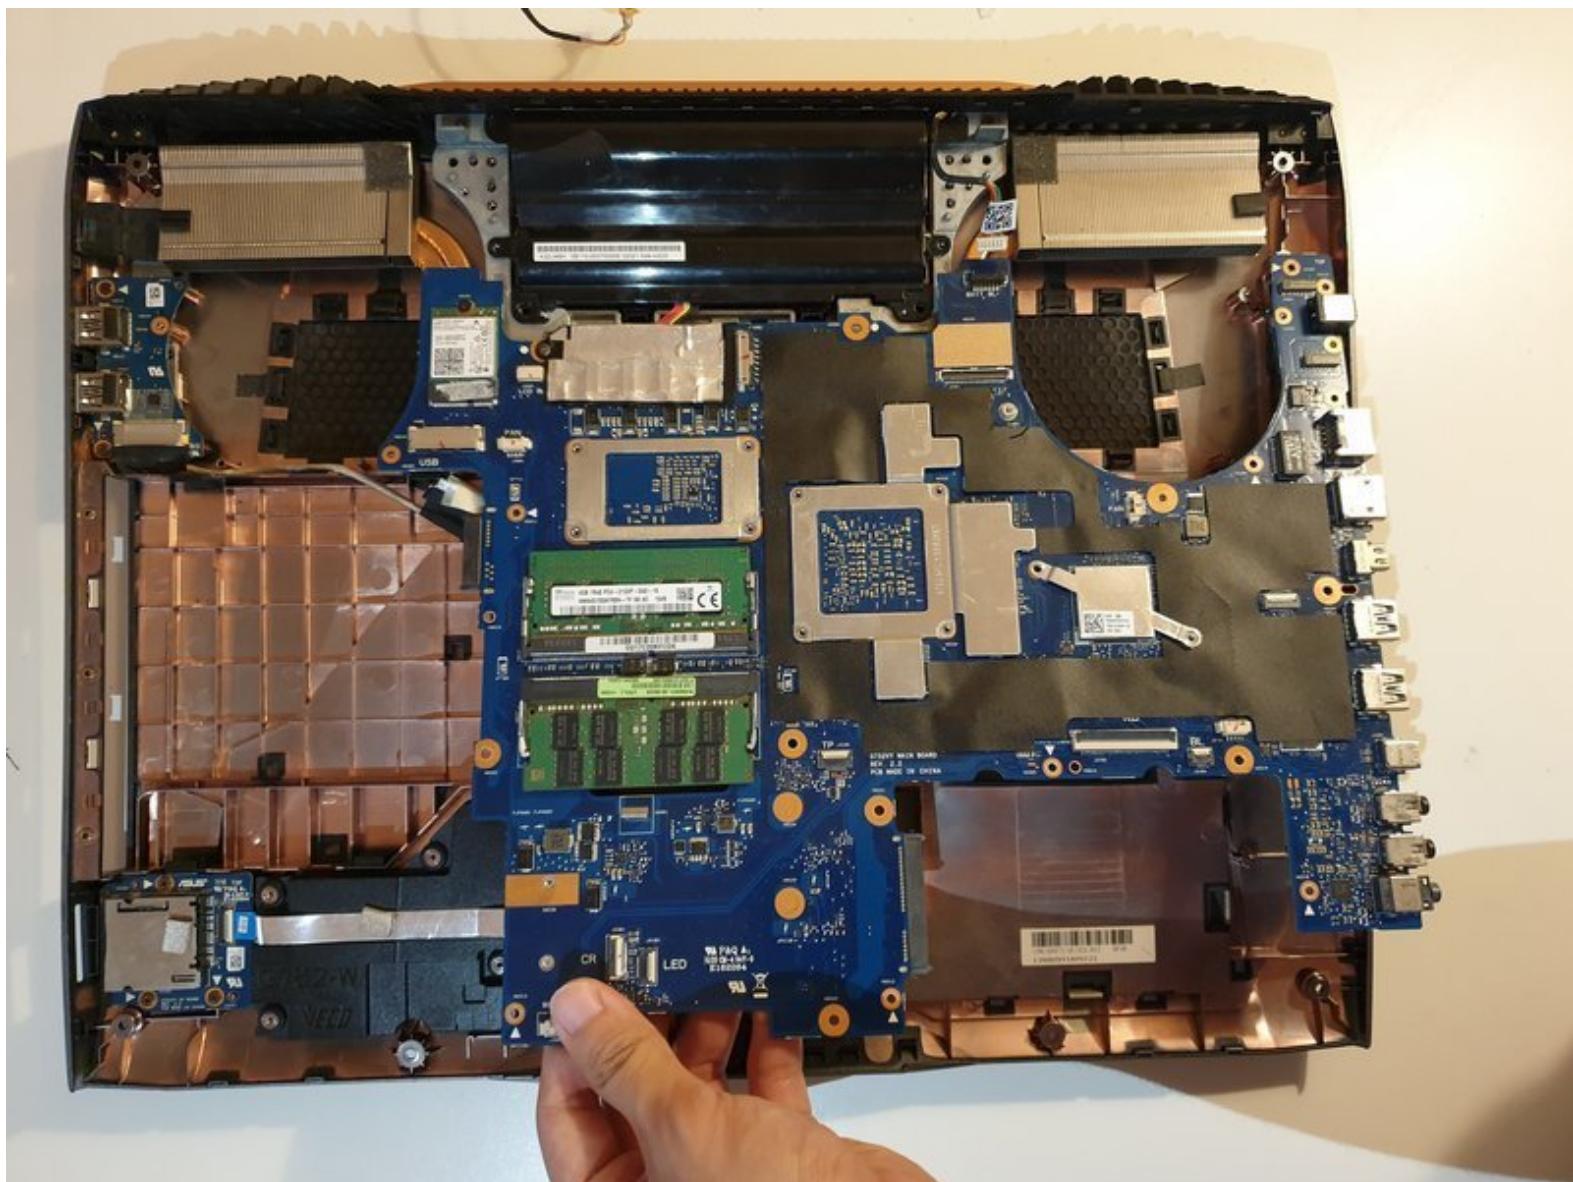

## INTRODUCTION

If you have looked at our [troubleshooting page](#) and determine that your motherboard is faulty, follow this guide to replace your old motherboard with a new one.



### TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- Tweezers (1)
- ESD Safe Tweezers Blunt Nose (1)

### PARTS:

- ASUS ROG G752V Motherboard (1)


## Step 1 — Battery

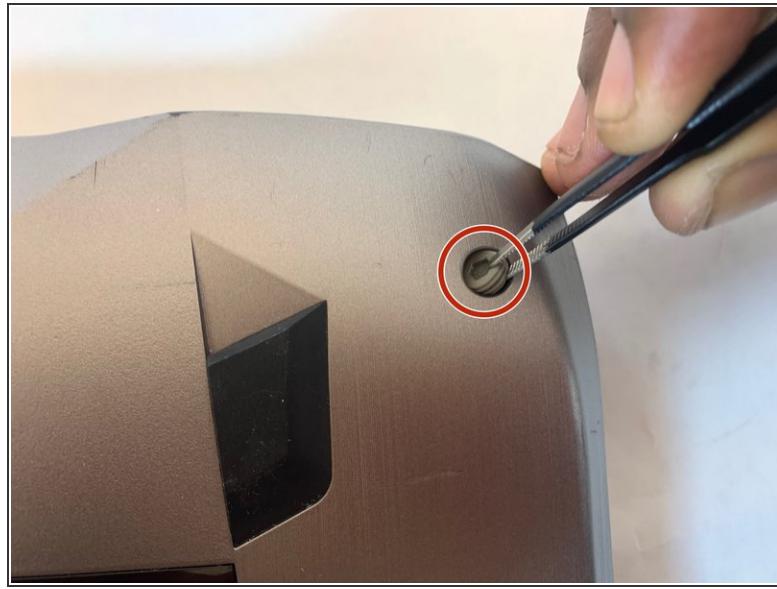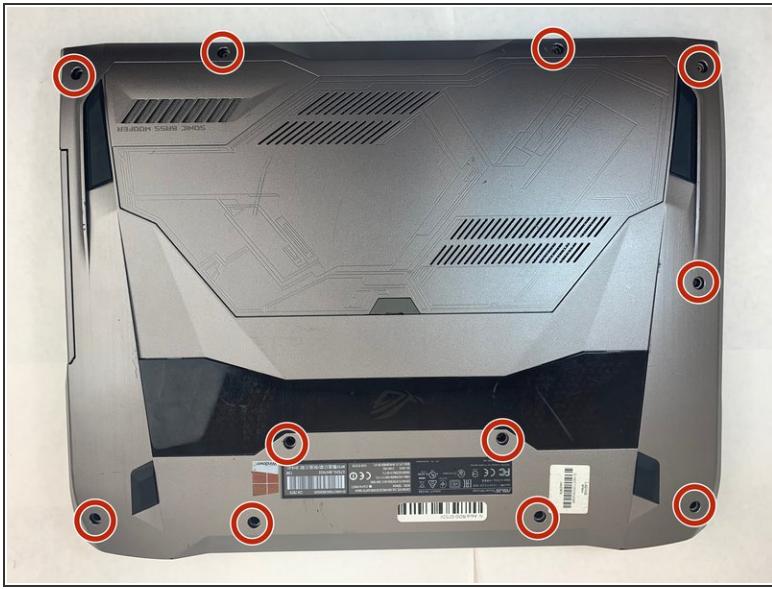

 Make sure you disconnect the charger before starting this guide.

- Pick out all 11 rubber plugs off of the back cover with a pair of tweezers.

## Step 2

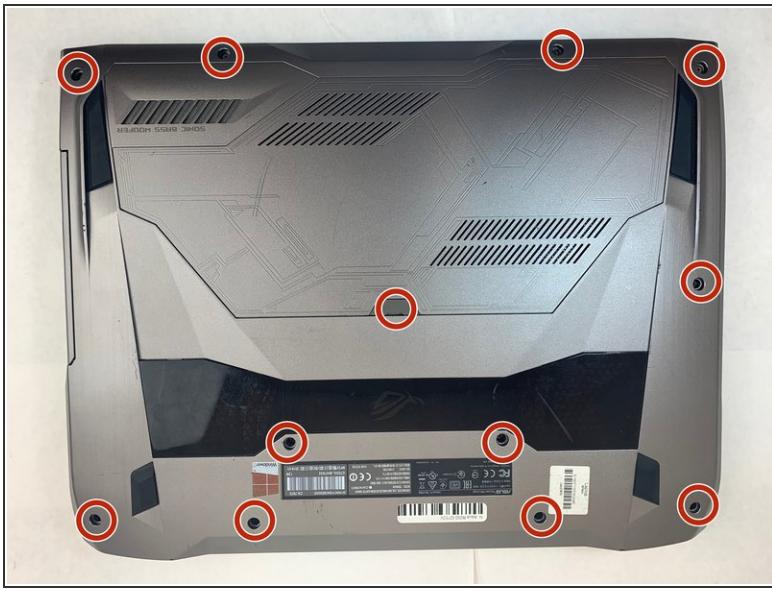


- Using the Phillips #0 screwdriver, unscrew all twelve 5.2 mm screws on the back of the laptop.
- There is one 5.2 mm screw under the rubber plug in the middle.

## Step 3




- Pull up the rubber seal and the service cover will come off.

## Step 4

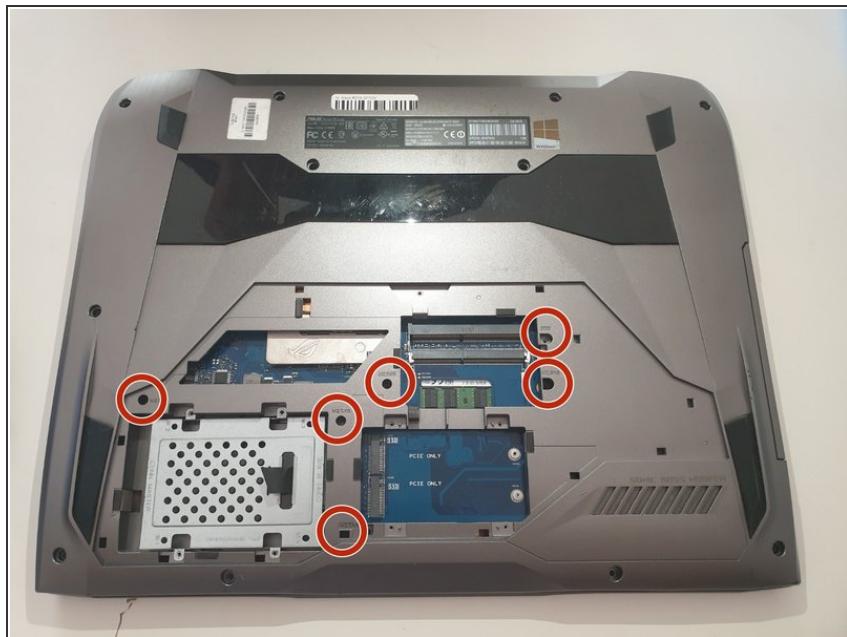



- Using the Phillips #00 screwdriver, remove the six 5.2 mm screws under the service cover.

## Step 5

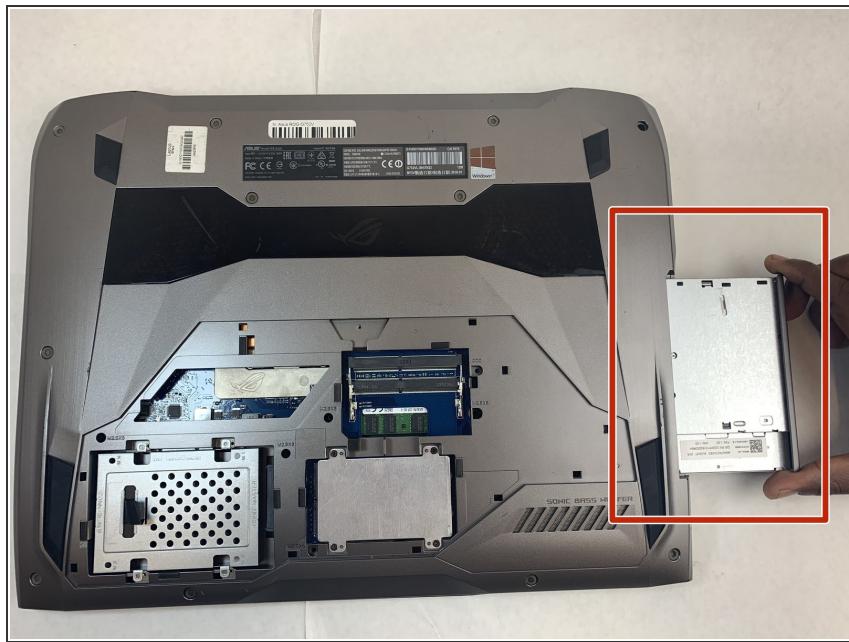


- Using your hands, pull the optical drive out.

## Step 6

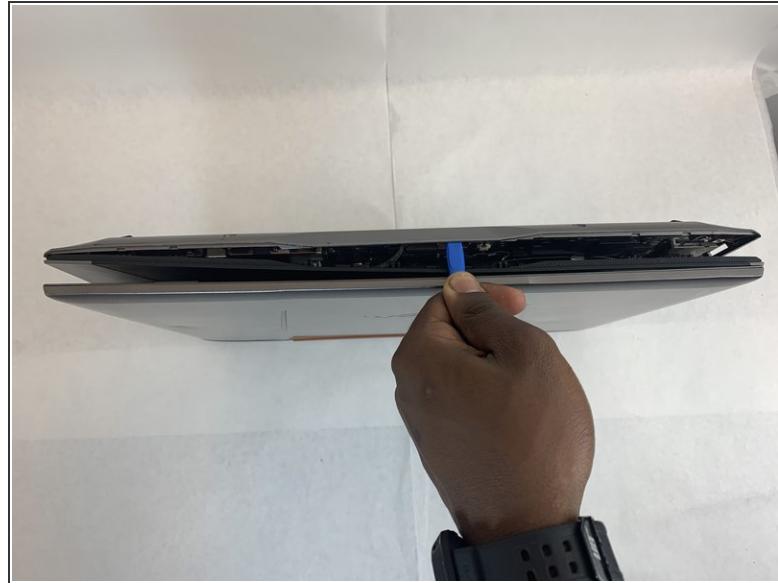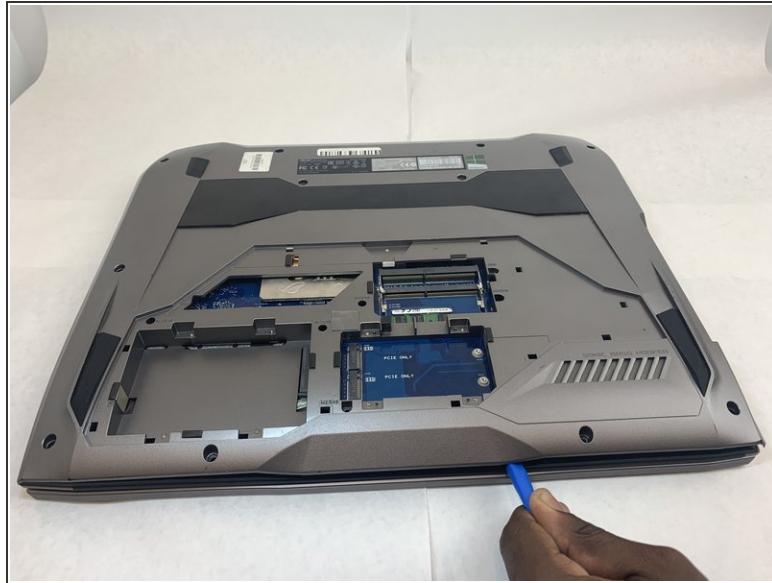

- Use the iFixit Opening Tool to pry apart the back panel from the main body of the laptop.
- Start from the front side of the laptop and then continue to the side for easier access.*


## Step 7

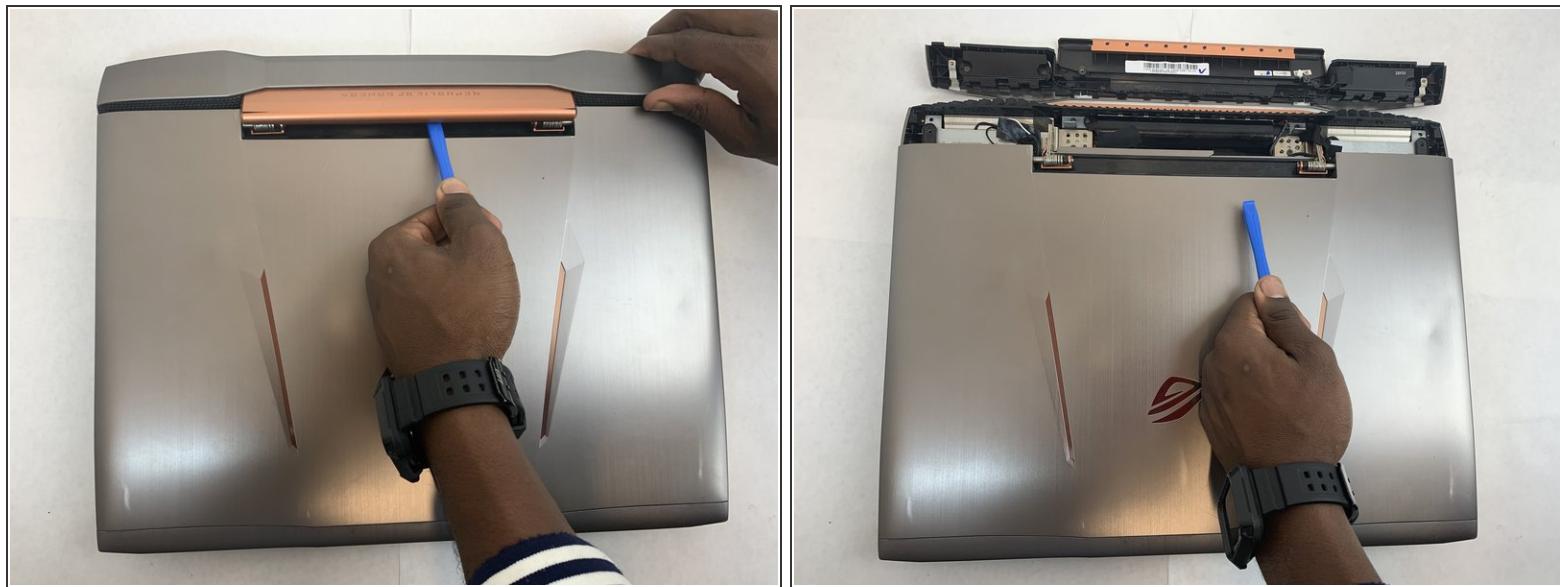

- Remove the hinge on the back of the laptop cover using the iFixit Opening Tool. The piece should pop off.

⚠ Be gentle with the cover because there is a speaker wire attached to it.

## Step 8

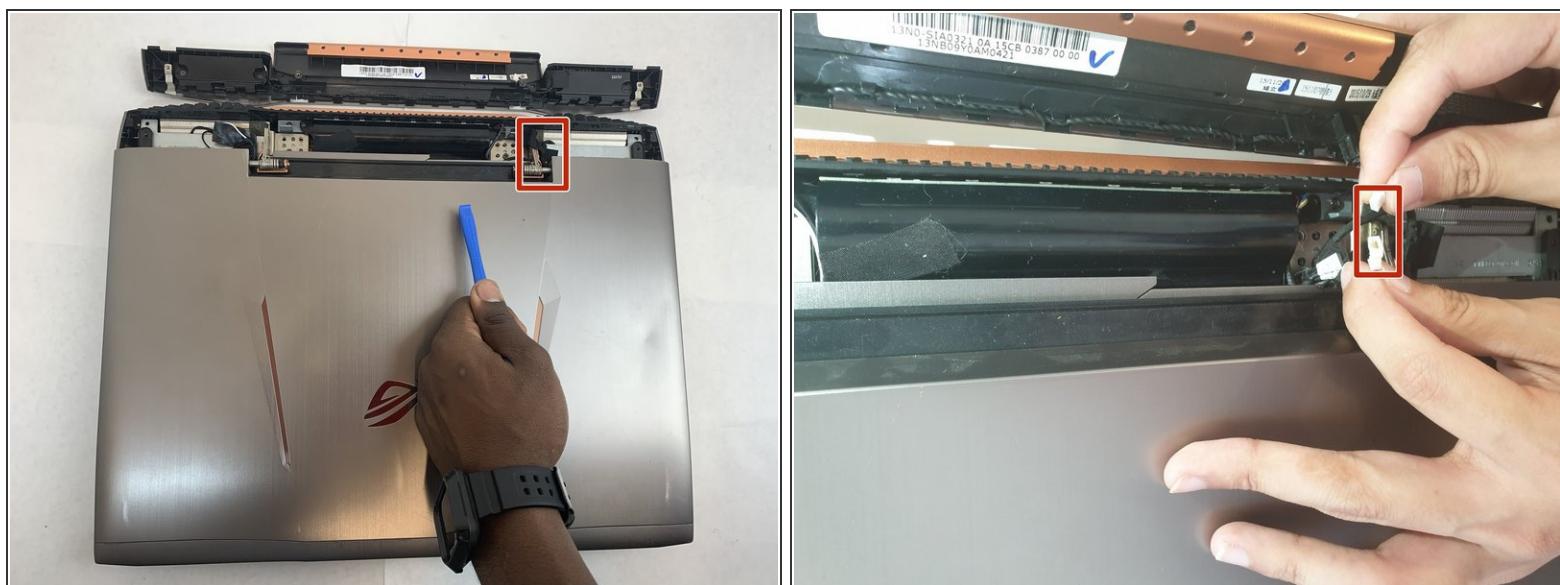

- Disconnect the speaker wire.


## Step 9



- Slowly pull out the keyboard while lifting it about an inch.


**⚠** There are cables attached to the keyboard and motherboard. DO NOT lift it more than 2 inches above the laptop.

## Step 10

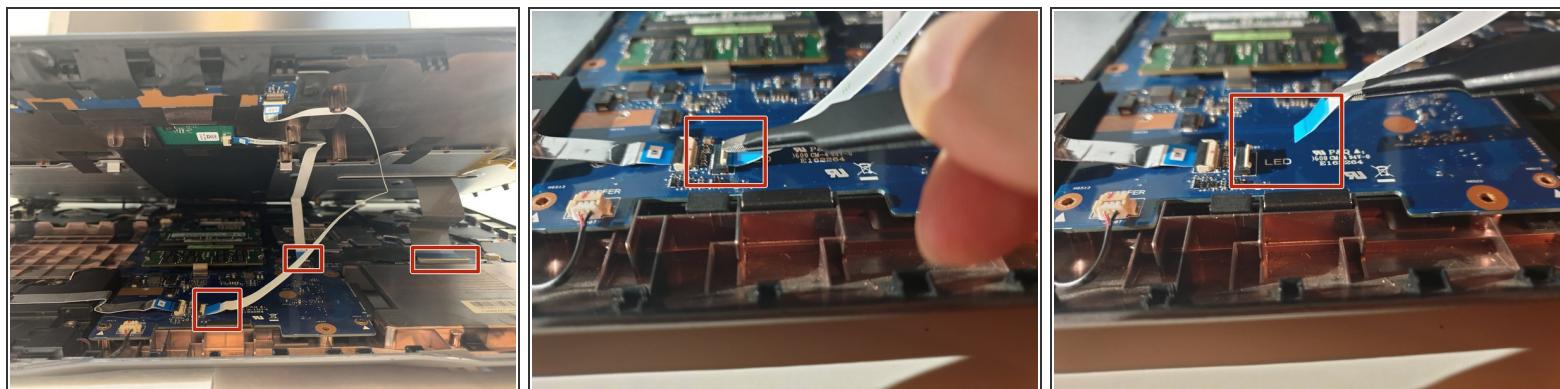

- Using an ESD safe tool, detach all 3 ribbon cables. To do so, lift up the cable up and out.


## Step 11

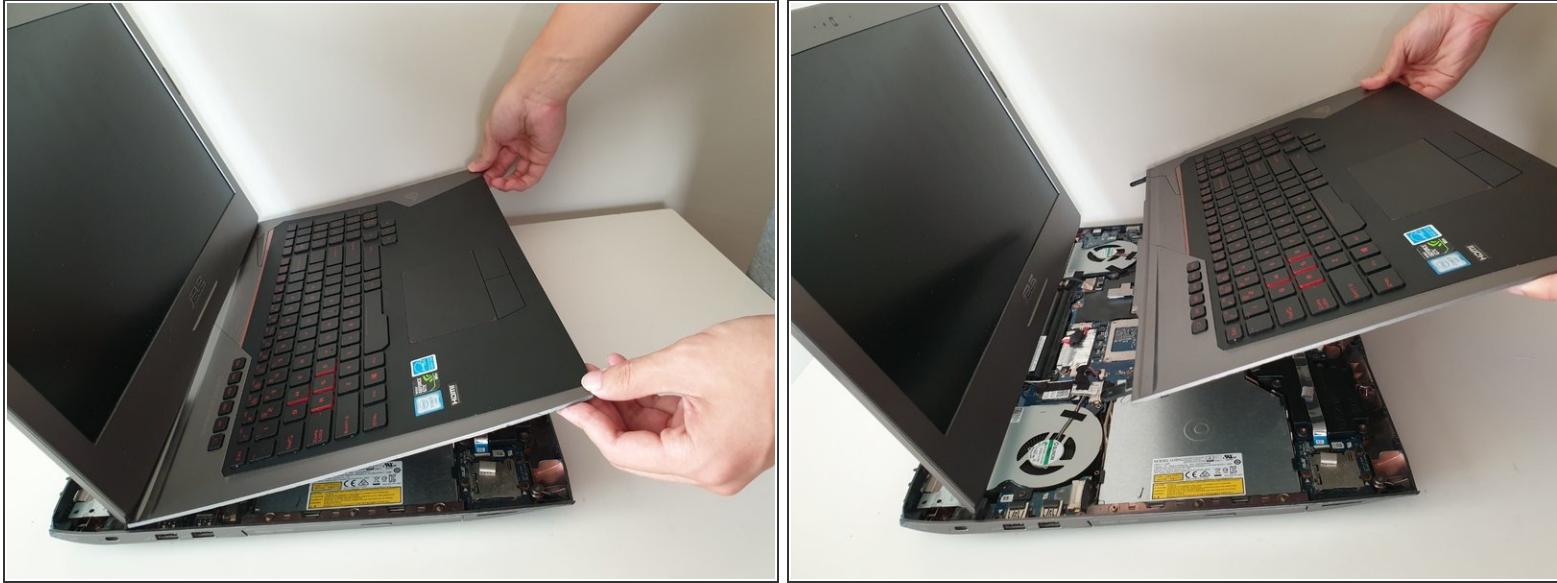

- Once the cables are detached, lift the keyboard about 2 inches up and remove it from the rest of the body.


⚠ Make sure that the screen is open like the photo. This will ensure that none of your laptop components will be bent.

## Step 12

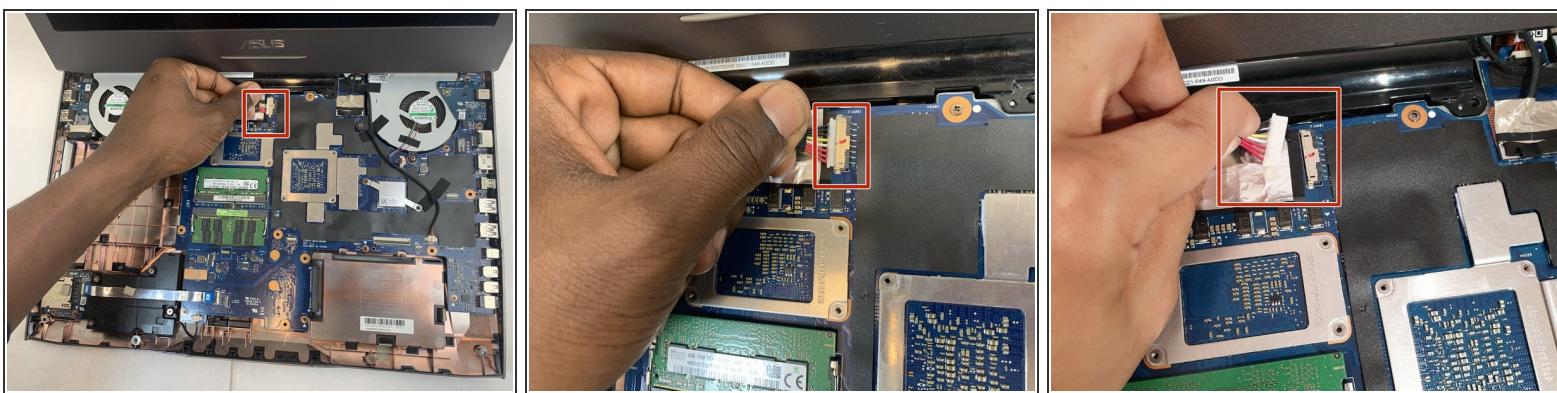


- The battery wire is attached to the mainboard. Wiggle it left and right until it detaches.

## Step 13

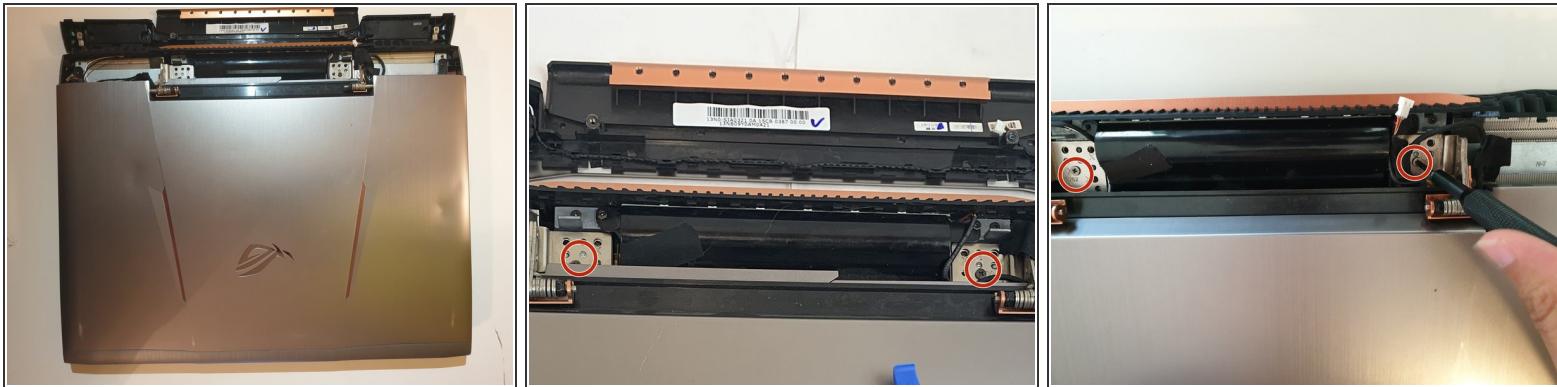


- Remove two 5.8 mm screws holding the screen and the laptop located at the hinge.
- ⚠ This will unlatch the screen from the laptop entirely. Make sure to fold the screen before removing the screws.
- Remove the screen.

## Step 14

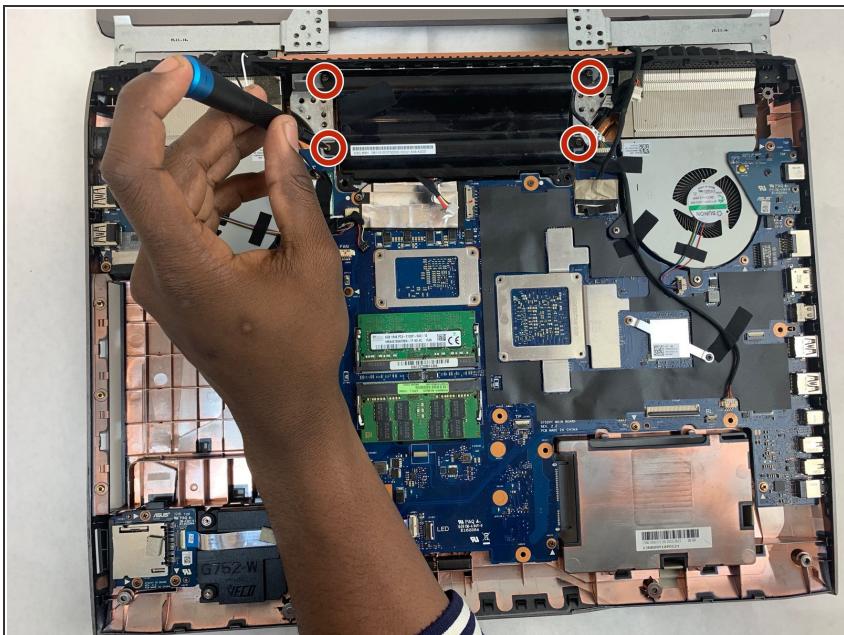

- Remove the four 5.8 mm screws securing the battery to the laptop.

## Step 15

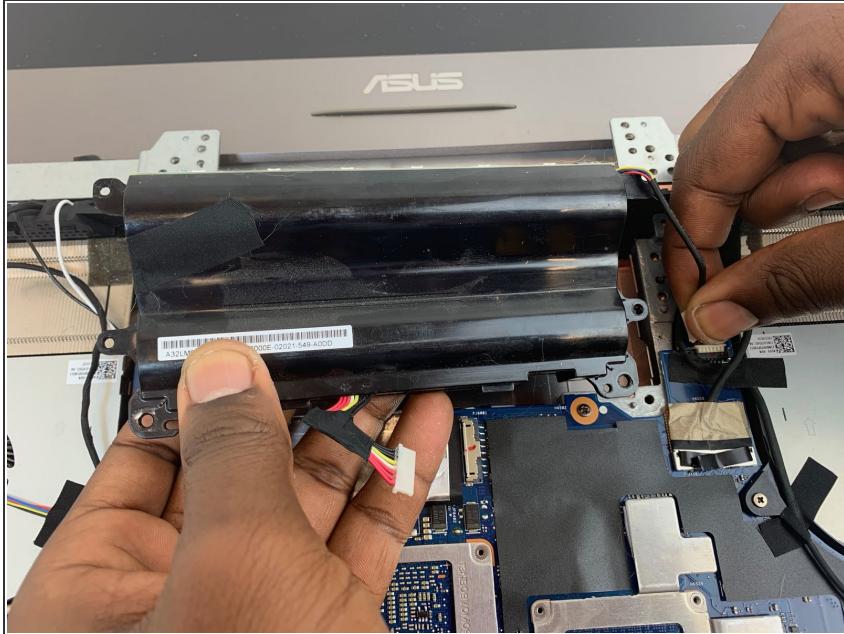


- Use your hands to remove the battery.
- If you're having trouble, push down on the black plastic on screen side of the battery. This should release the battery.

## Step 16 — Wireless Card



- Unscrew one 3mm Philips #00 screw on the wireless card.


## Step 17

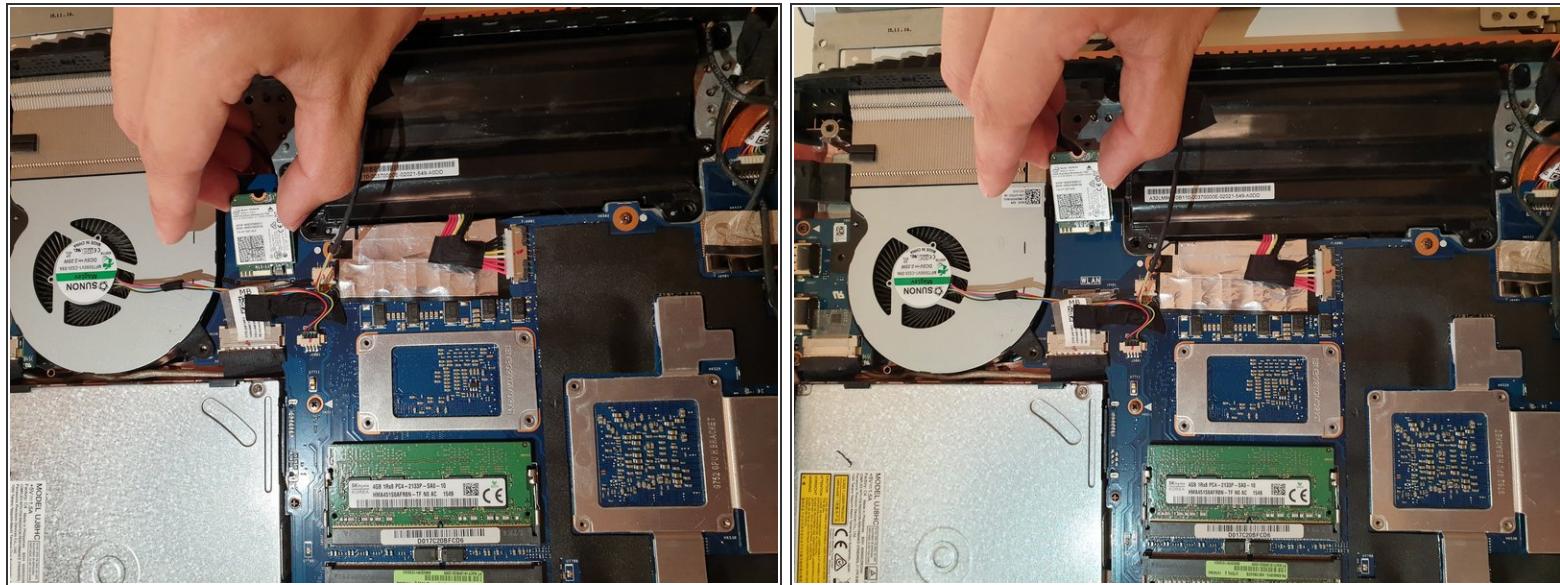

- Using your hands, unlatch the wireless card by pulling it out toward the screen.

⚠ Gently wiggle the card and pull it out of the motherboard.

## Step 18 — Fan

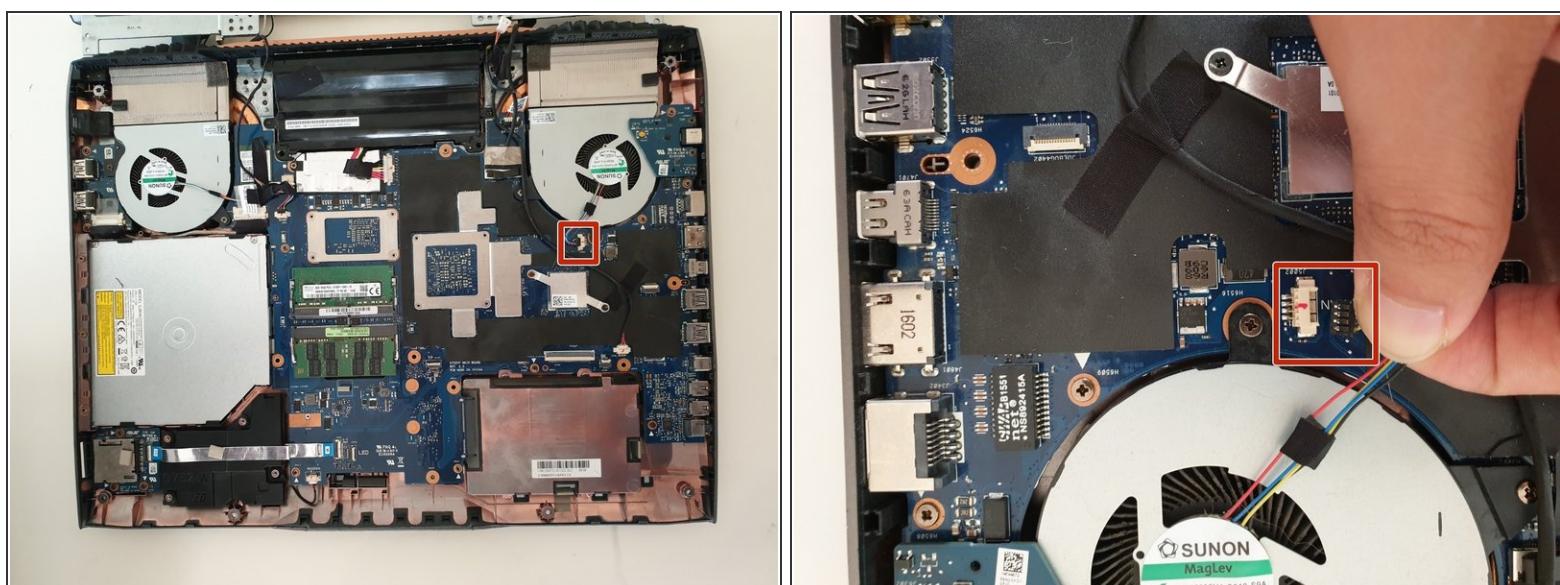


- Unplug the fan-motherboard connection cable.

## Step 19




- Unscrew and remove the three 5.8mm screws on the small circuit board to the right of the right side fan with a Phillips #00 screwdriver.
- Lift up the small circuit board covering the fan and put it aside.

## Step 20

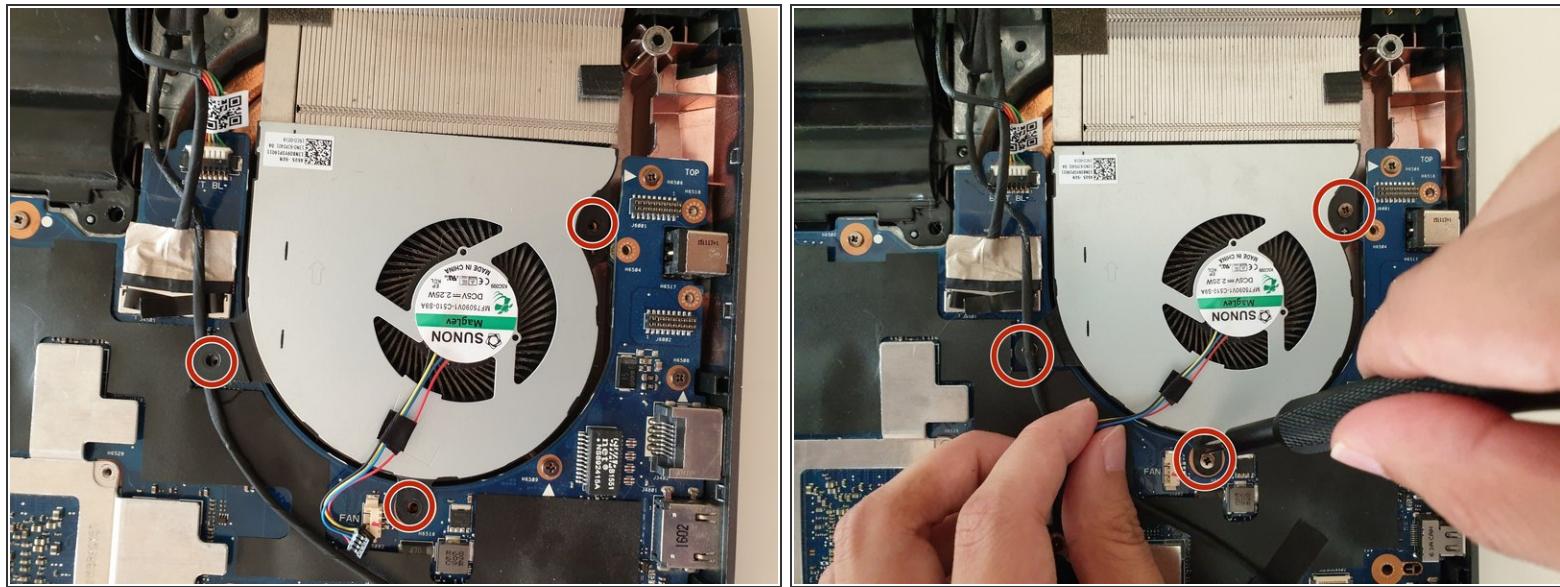



- Using a Phillips #00 screwdriver, remove the three 5.2 mm screws that connect the fan to the motherboard.

## Step 21

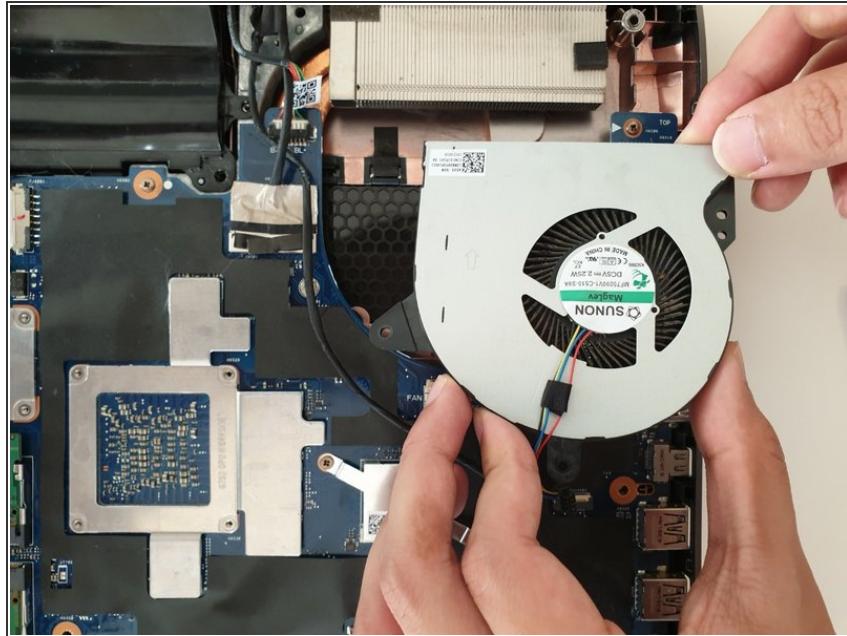


- With your hands, slowly and carefully lift up the right side fan.

## Step 22

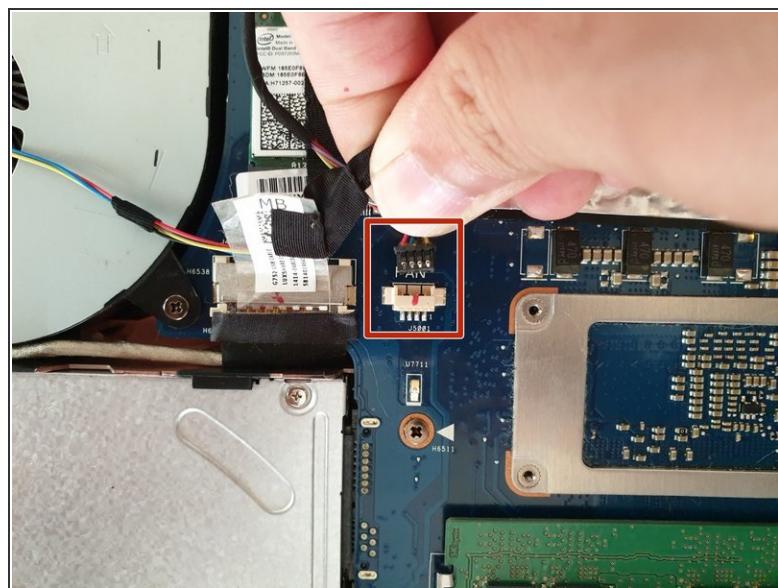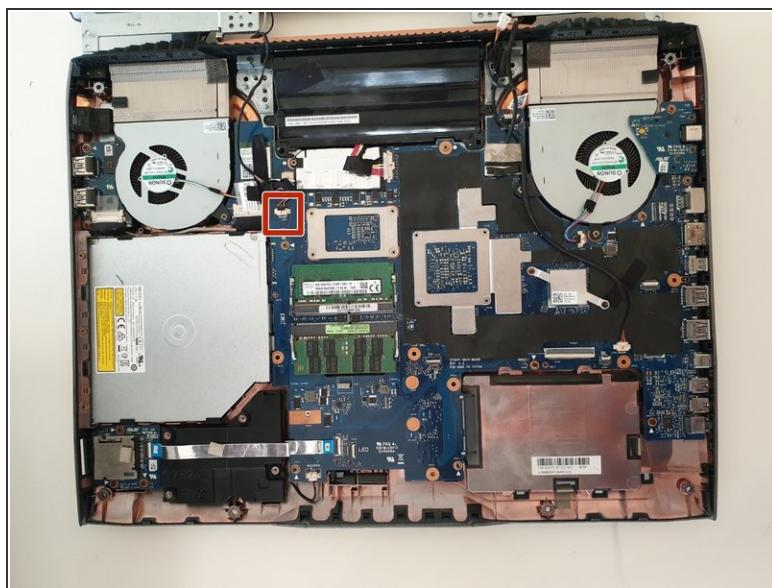


- Carefully unlatch the left side fan cable from the motherboard.

## Step 23

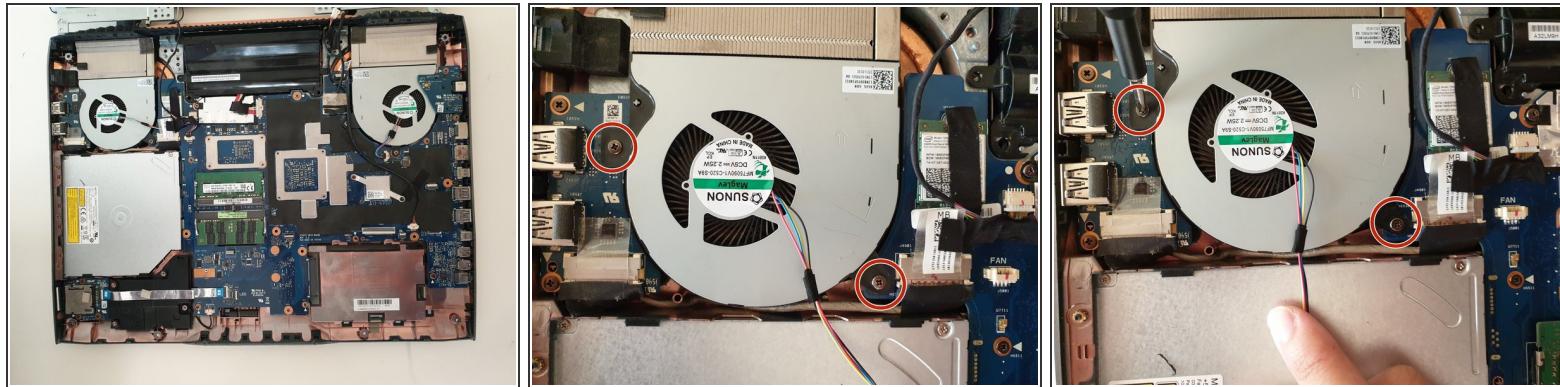



- Using a Phillips #00 screwdriver, remove the two 5.8mm screws that connect the left fan to the motherboard.

## Step 24

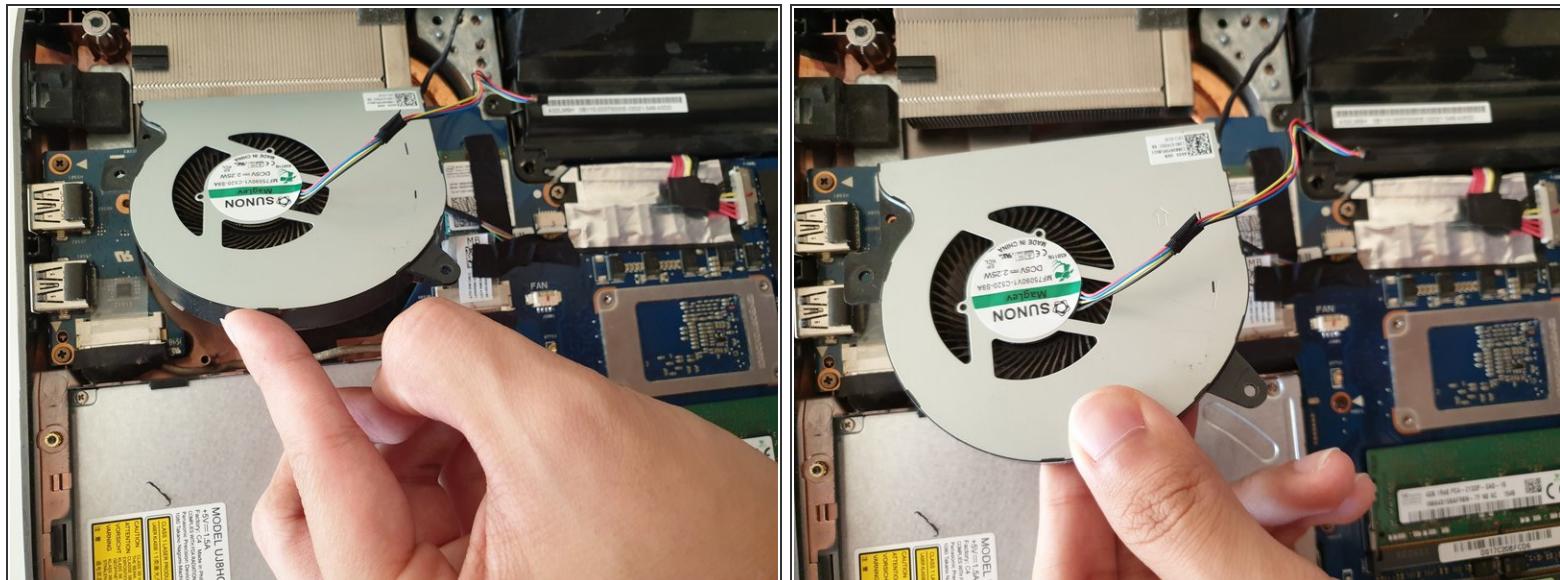



- With your hands, carefully lift the left fan and unlatch the fan from the motherboard.

## Step 25 — Motherboard

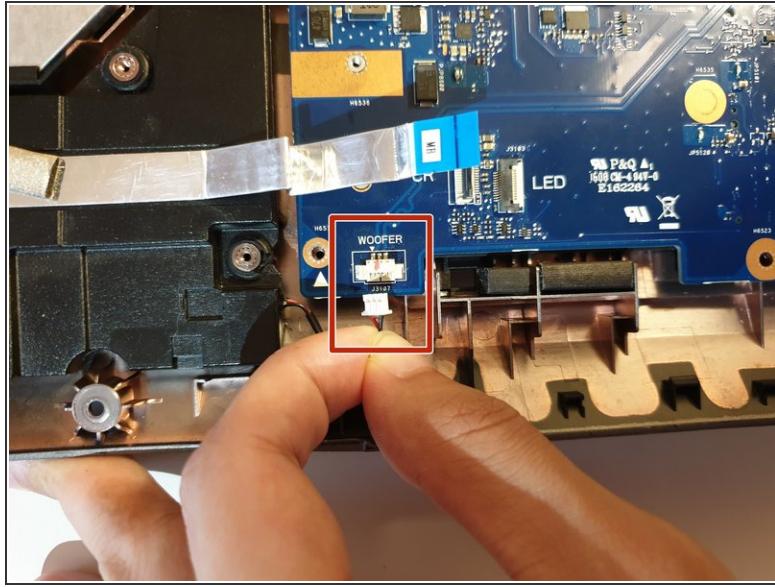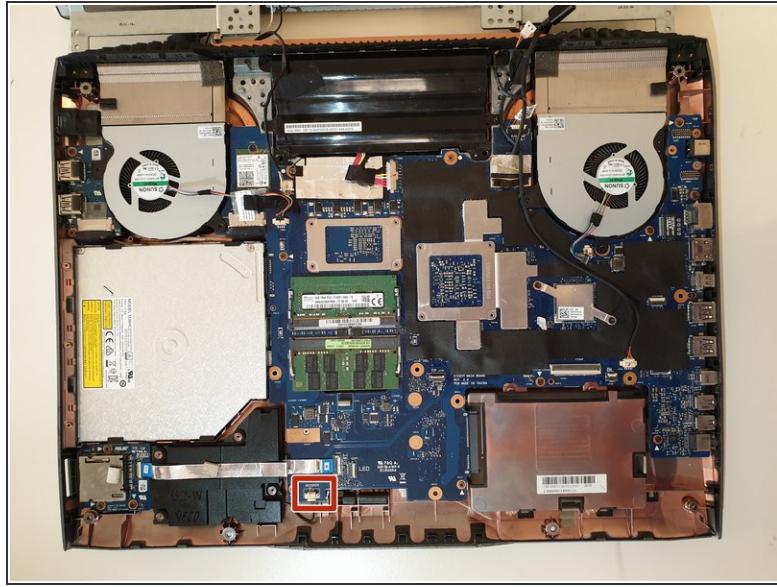


- Using your hand, detach the Woofer Cable.

## Step 26

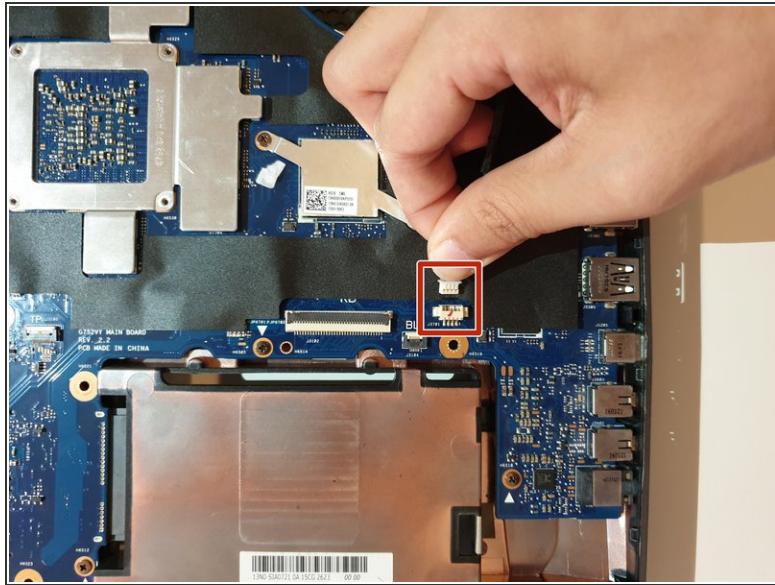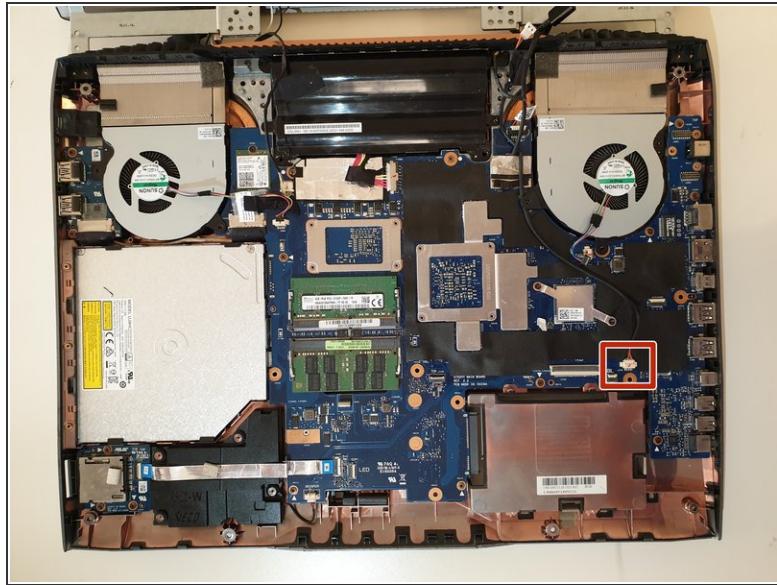


- Using your hand, detach the Speaker cable.

## Step 27

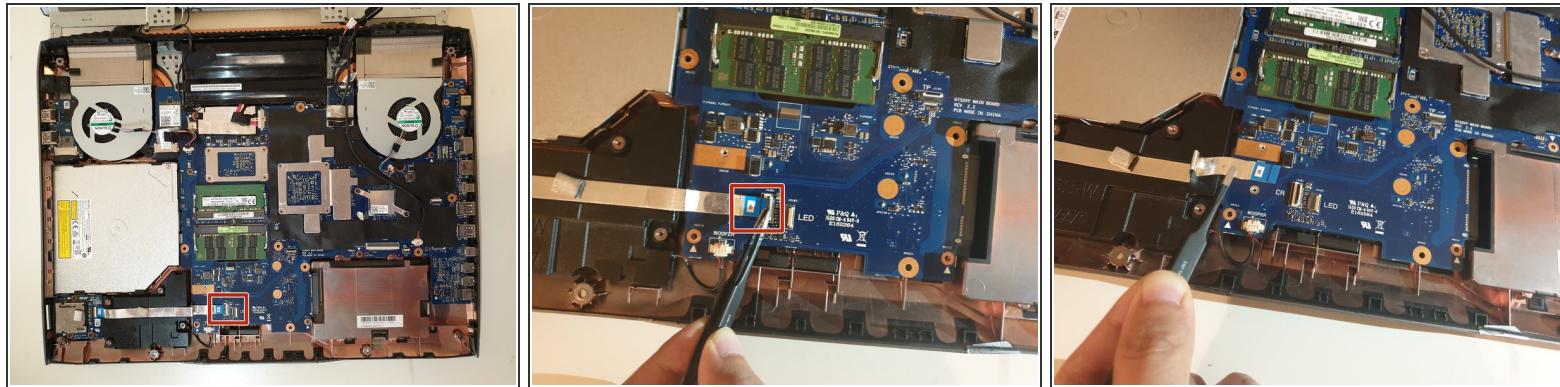


- Using an ESD safe tool, first unlatch the ZIF connector clasp and then pull the cord disconnecting the SD card reader.

## Step 28

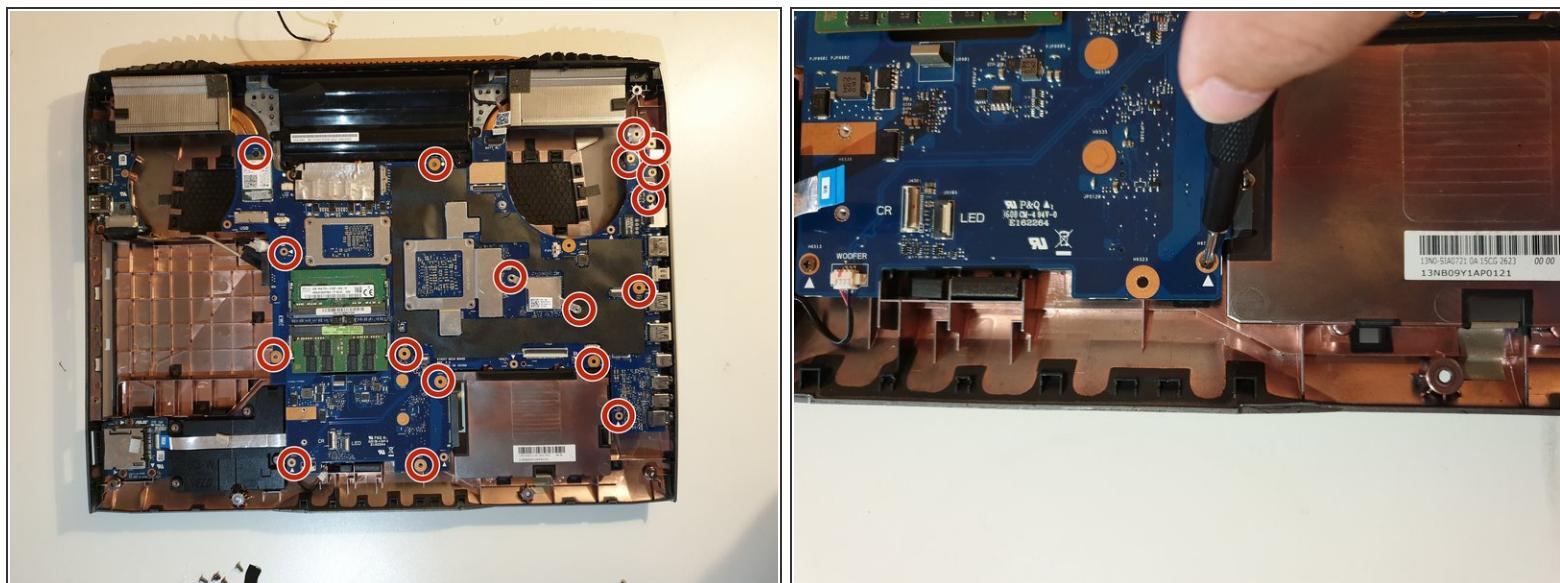

- Unscrew eighteen 5.8 mm screws from the motherboard with a Phillips #00 screwdriver.

## Step 29

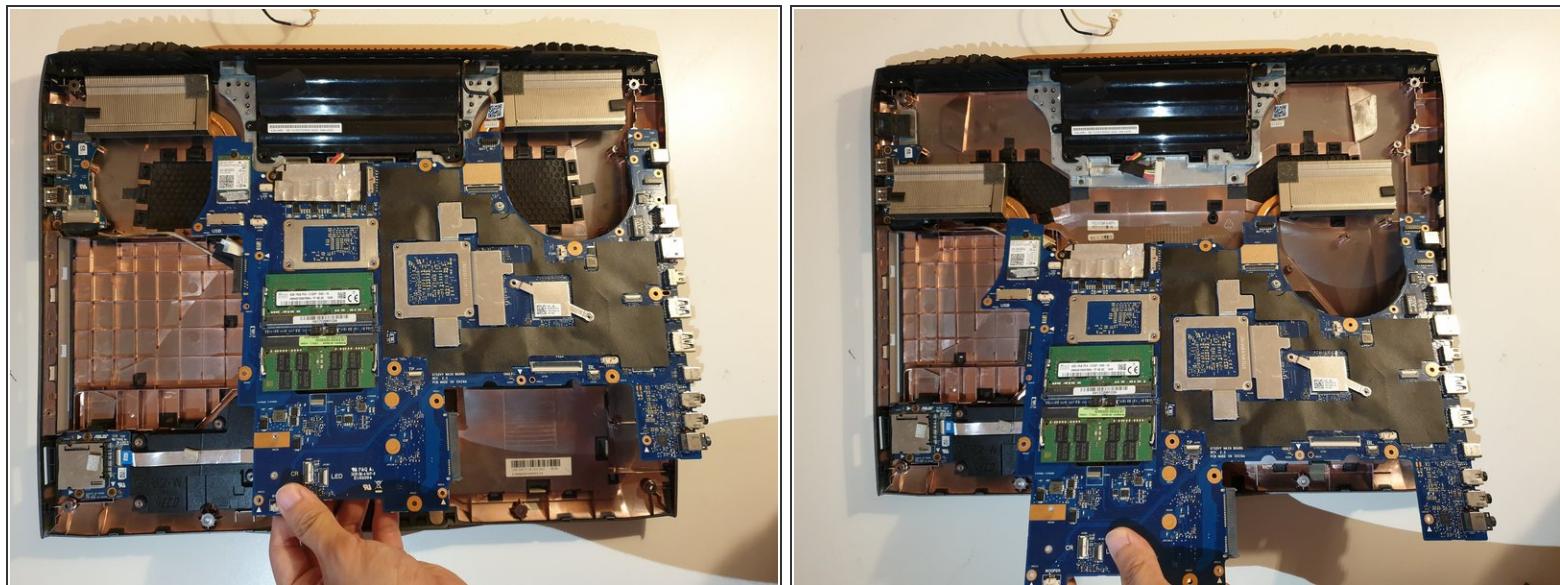

- Using your hands, unlatch the motherboard by lifting it up directly above the laptop.

To reassemble your device, follow these instructions in reverse order.