




# Asus ROG G752V Wireless Card Replacement

This guide will help you take out and replace the wireless card.

Written By: Jeong

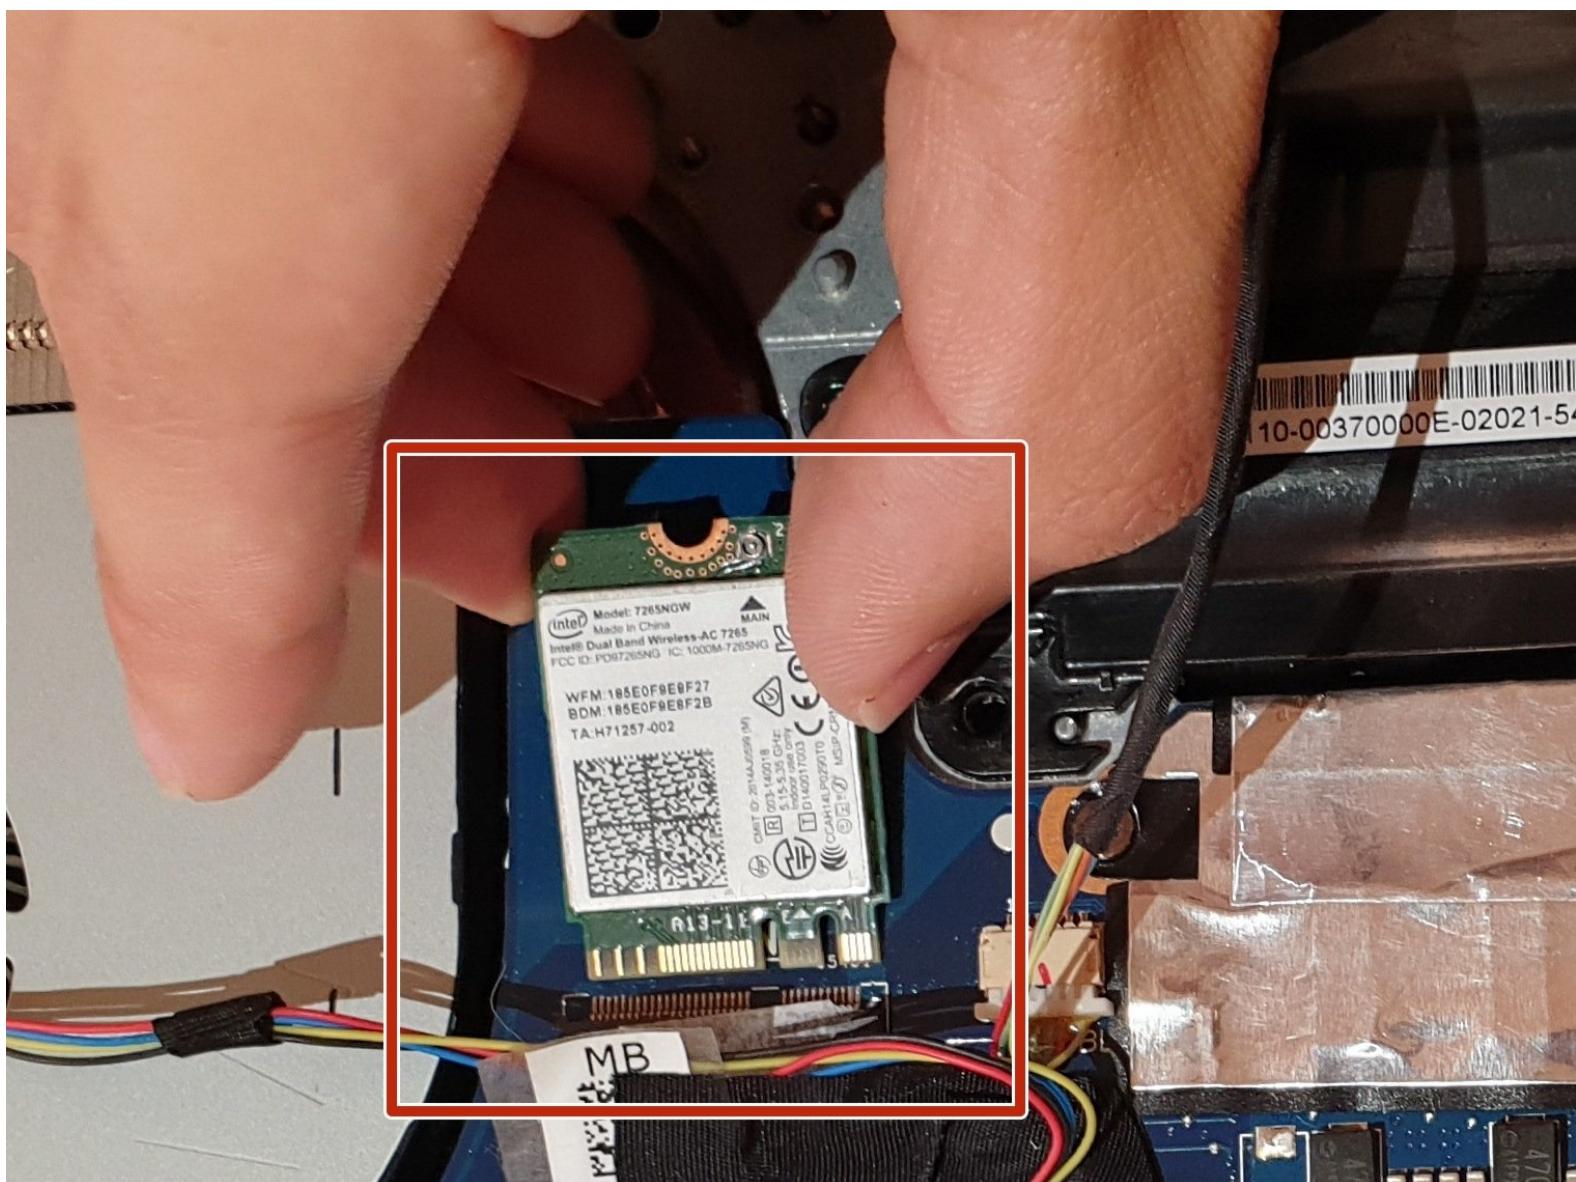

## INTRODUCTION

If your wireless card is damaged or needs to be replaced due to [blue screen](#) this guide will help you replace your old hardware.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [Asus ROG G752V Wireless Card](#) (1)



## Step 1 — Keyboard

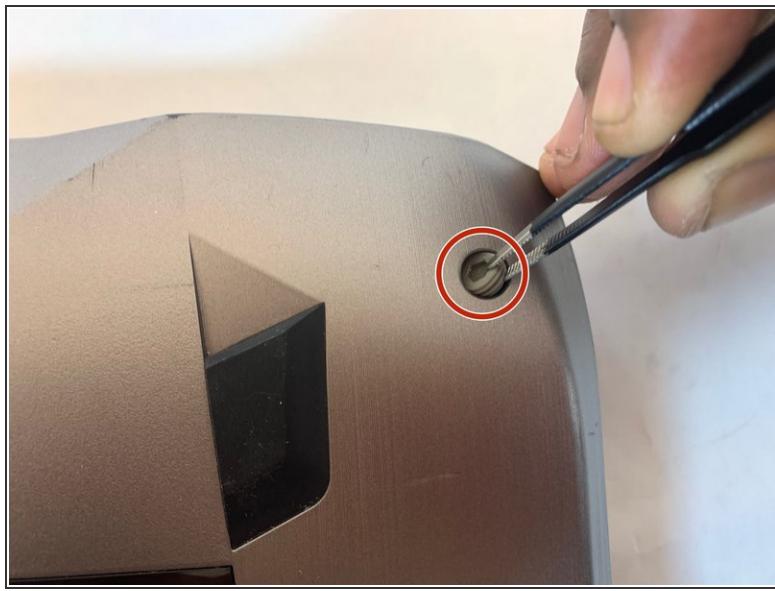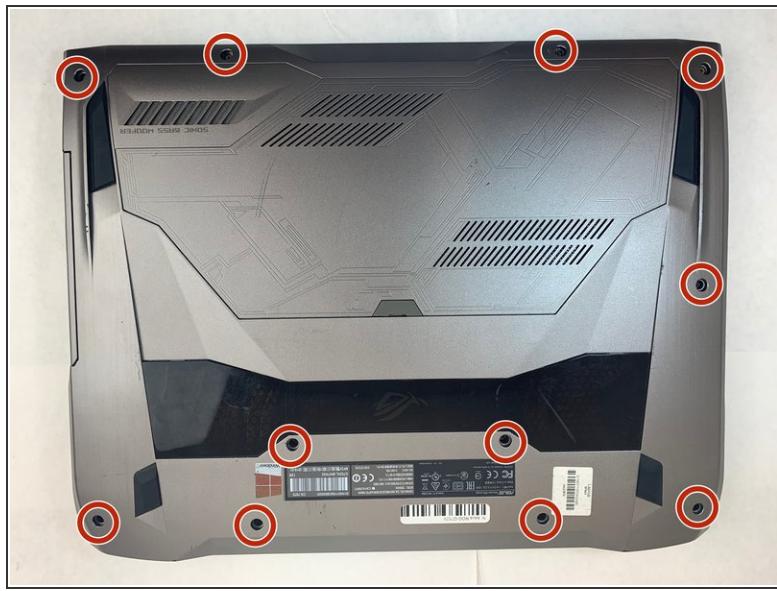

⚠ Make sure you disconnect the charger before starting this guide.

- Using a pair of tweezers, remove all 11 rubber plugs off of the back cover.

## Step 2

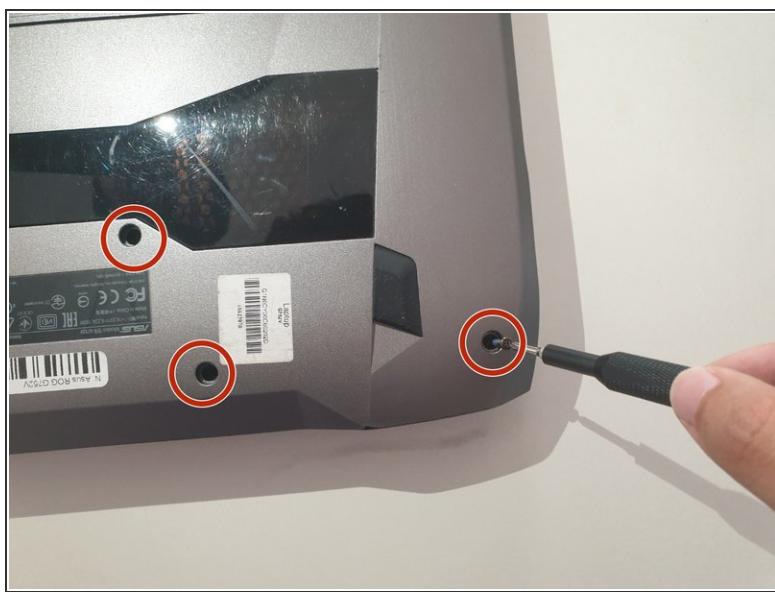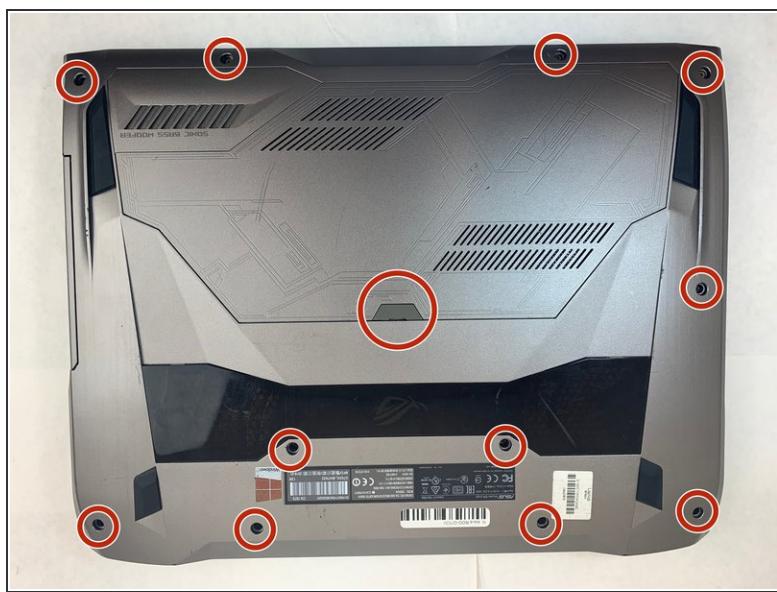


- Using a Phillips #0 screwdriver, remove all twelve 5.2mm screws on the back of the laptop.
- There is one 5.2 mm screw under the rubber plug in the middle.

## Step 3




- Pull up the rubber seal and the service cover will come off.

## Step 4

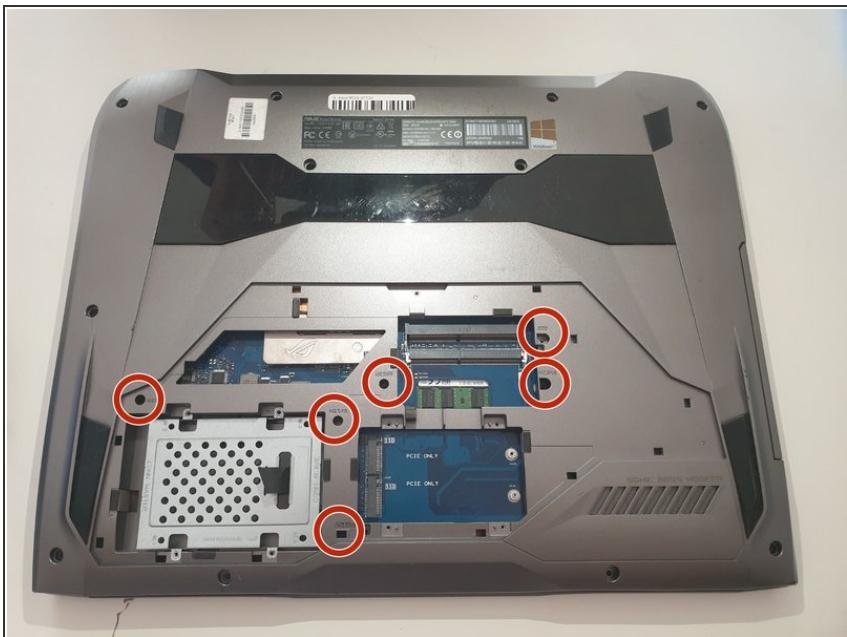



- Using the Phillips #00 screwdriver, remove the six 5.2 mm screws under the service cover.

## Step 5

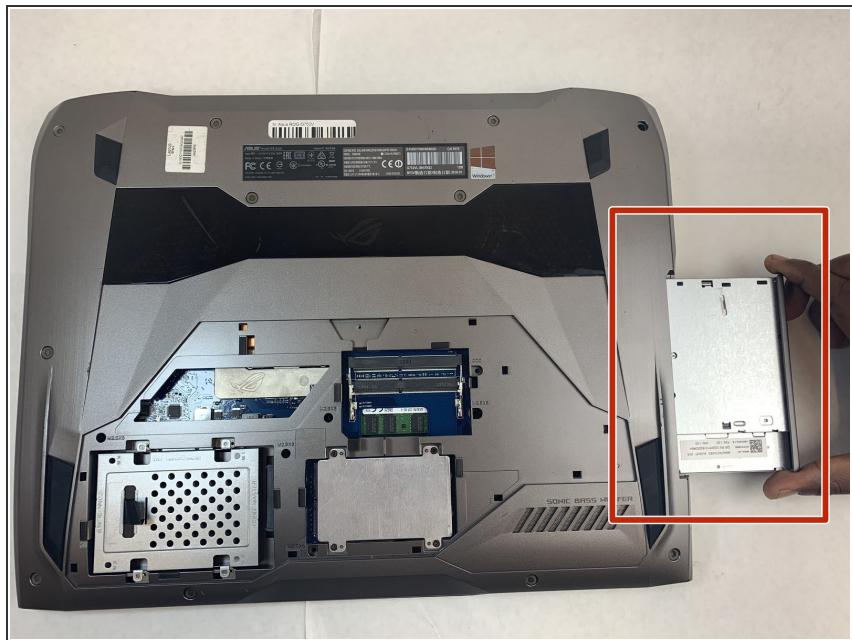


- Using your hands, pull the optical drive out.

## Step 6

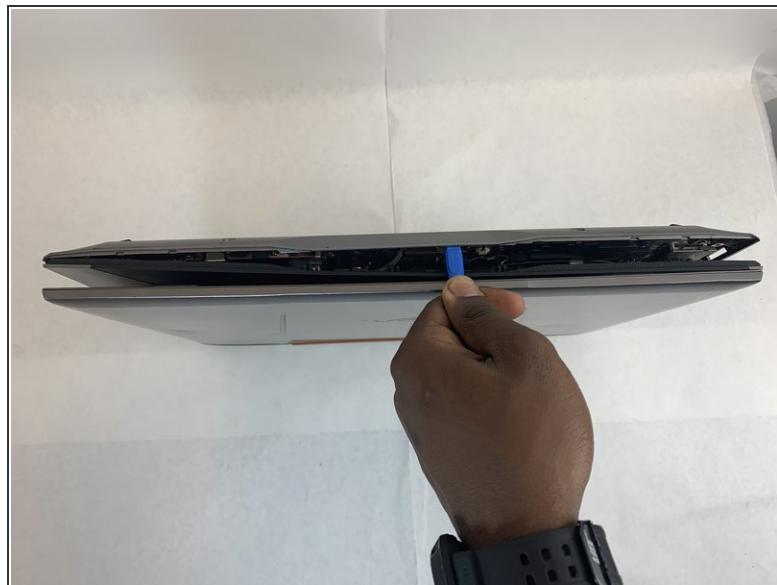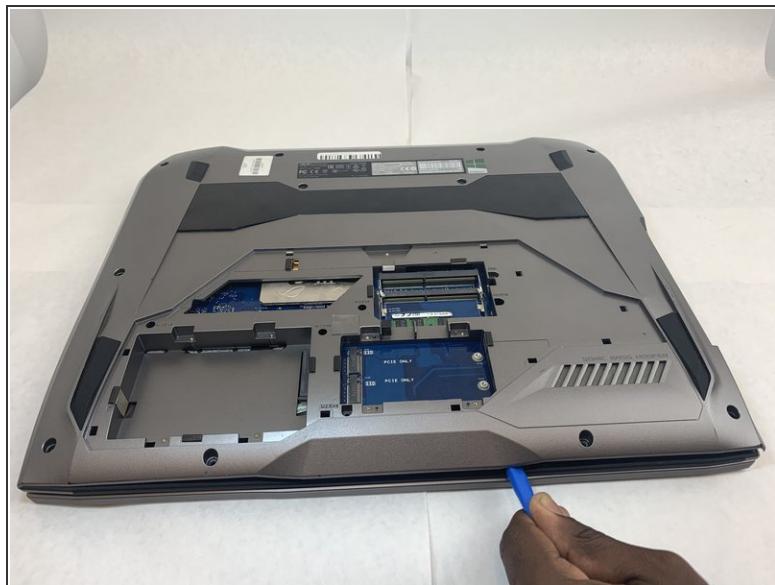

- Use the iFixit opening tool to pry apart the back panel from the main body of the laptop.
- Start from the front side of the laptop and then continue to the side for easier access.*

## Step 7

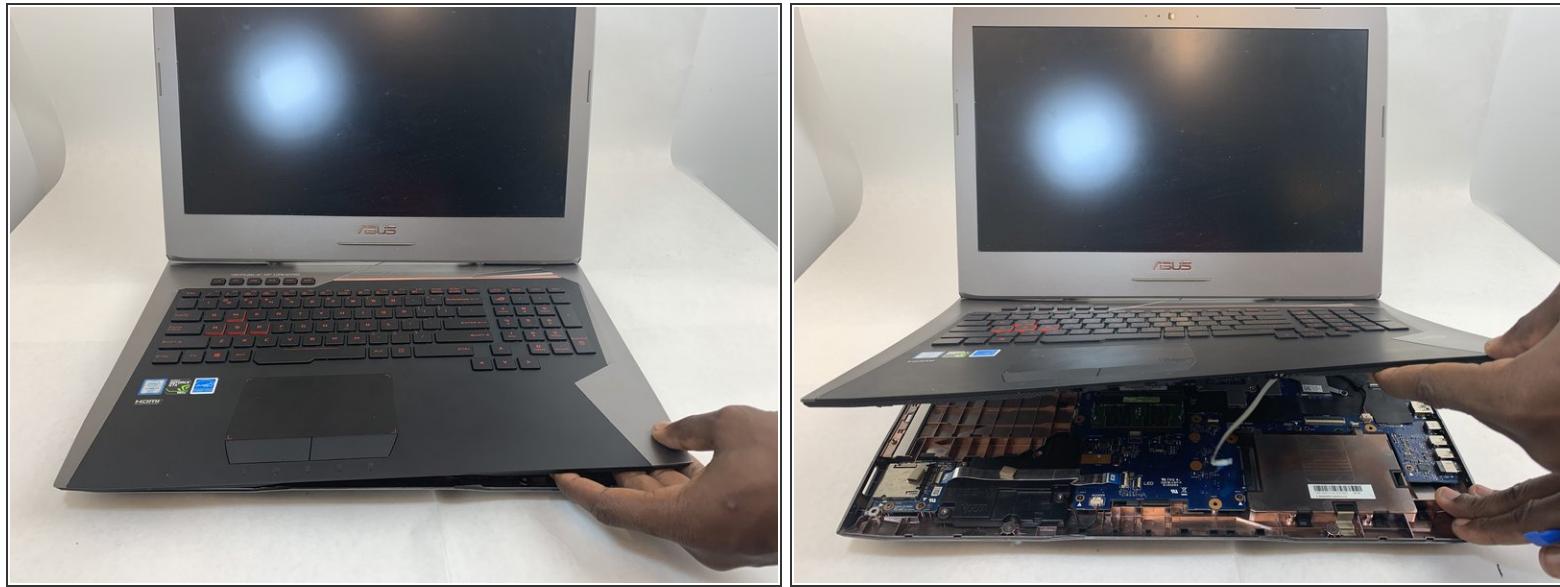

- Slowly pull out the keyboard while lifting it about an inch.

**⚠** There are cables attached to the keyboard and motherboard. DO NOT lift it more than 2 inches above the laptop.

## Step 8



- Using an ESD safe tool, detach all 3 ribbon cables. To do so, lift up the cable up and out.




## Step 9



- Once the cables are detached, lift the keyboard about 2 inches up and remove it from the rest of the body.



**⚠** Make sure that the screen is open like the photo. This will ensure that none of your laptop components will be bent.

## Step 10 — Wireless Card

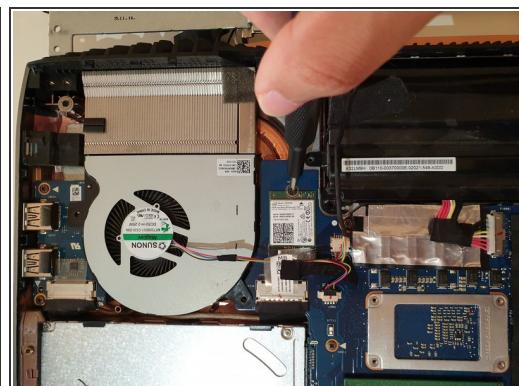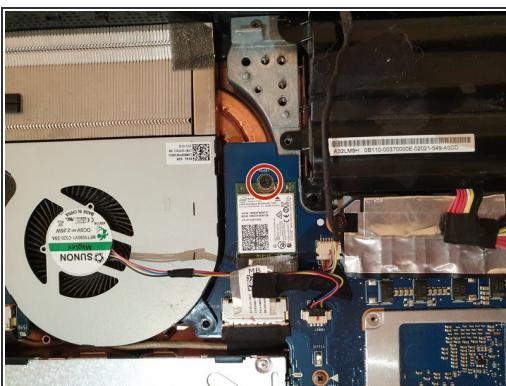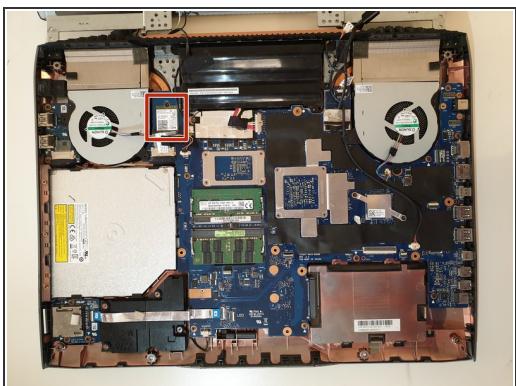

- Unscrew one 3mm Philips #00 screw on the wireless card.

## Step 11

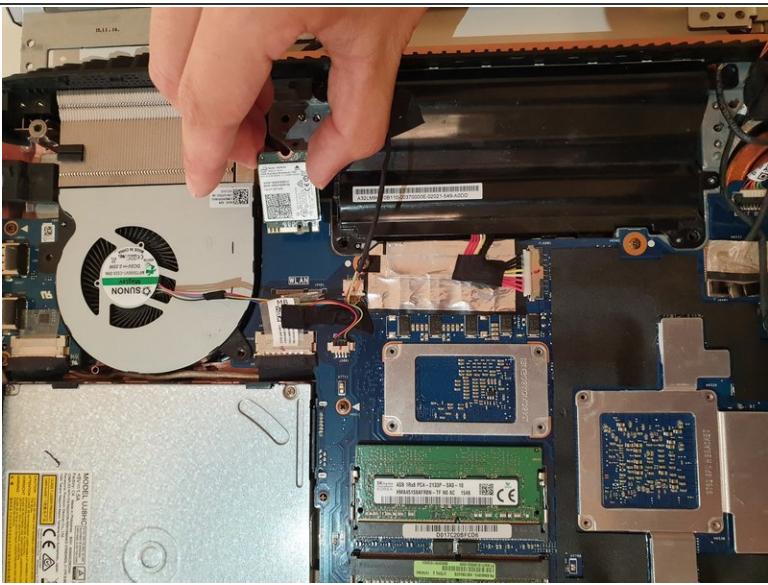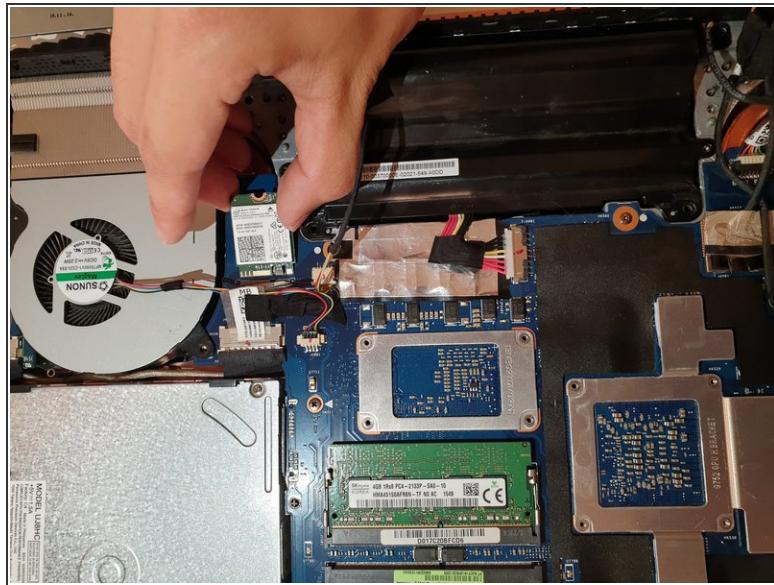

- Using your hands, unlatch the wireless card by pulling it out toward the screen.

 Gently wiggle the card and pull it out of the motherboard.

To reassemble your device, follow these instructions in reverse order.