



Asus ROG GL551J Battery Replacement

Asus ROG GL551J guide on how to remove and replace the battery.

Written By: Jason Nguyen



INTRODUCTION

This guide is a prerequisite to completing any other replacement guides for the Asus ROG GL551J. Removing the battery removes power from the device to prevent potential harm from electric shock.

Step 1 — Battery



- Lay device on a flat surface with battery facing up.

Step 2



- Locate latch below battery and push right.

Step 3



- Battery should release upwards. Pull battery out.

To reassemble your device, follow these instructions in reverse order.