




Asus ROG GL551J Hard Drive Replacement

Replacement guide for Asus ROG GL551J hard drive.

Written By: Thien Vu

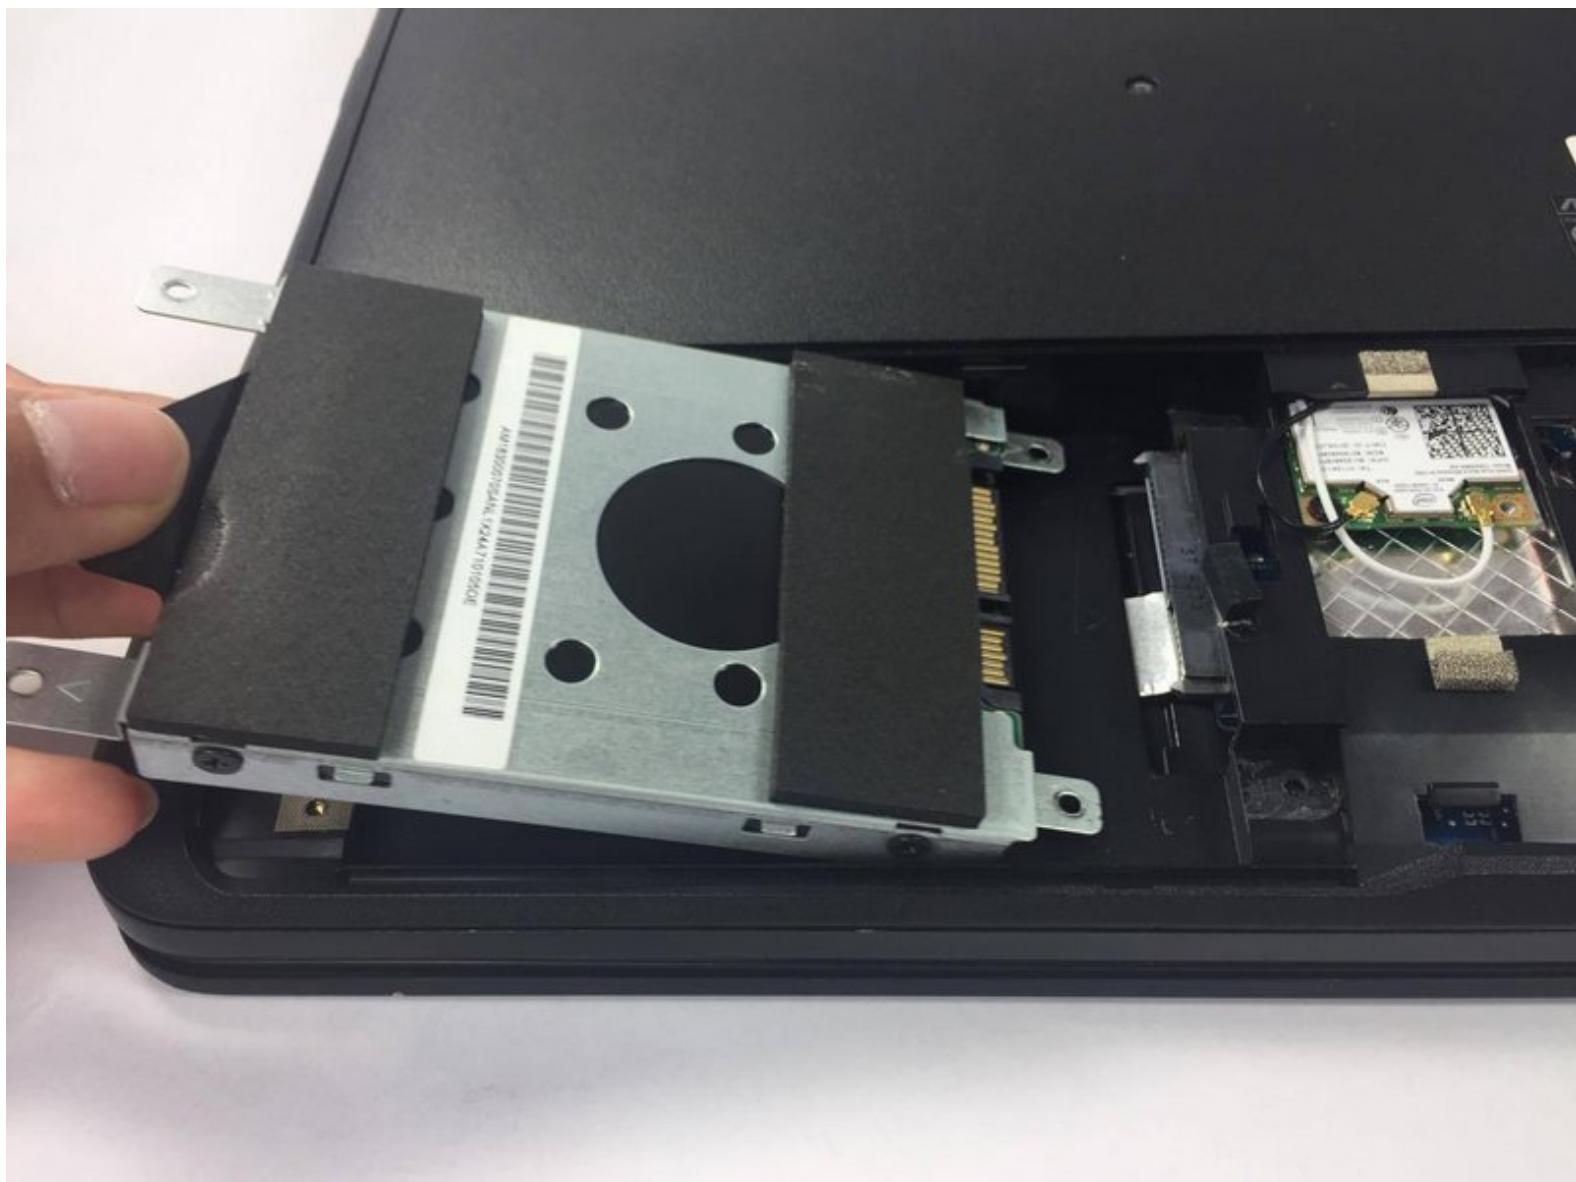

INTRODUCTION

Use this guide to remove replace the hard drive in your Asus ROG GL551J, which can be completed in fewer than 3 steps.

TOOLS:

- [Anti-Static Project Tray](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Battery



- Lay device on a flat surface with battery facing up.

Step 2



- Locate latch below battery and push right.

Step 3




- Battery should release upwards. Pull battery out.

Step 4 — Hard Drive



- With laptop upside-down, locate and unscrew the two screws on the panel with the vents.
- Slide the panel out and lift up to remove.

Step 5

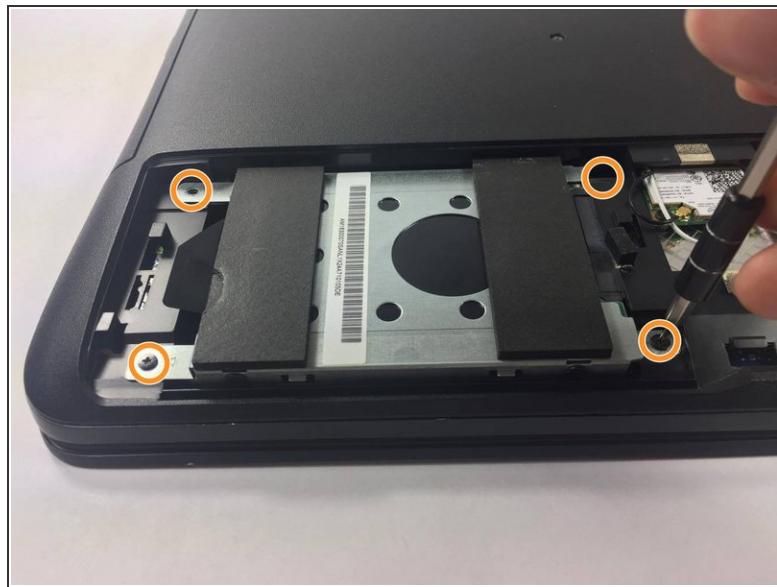

- The hard drive is the metal rectangle with the two soft padding bars attached to it.
- Locate and remove the 4 screws holding the hard drive down at each corner using a PH000 Philips head.

Step 6



- Locate the black plastic tab attached to the bottom of the hard drive and pull it straight outwards.
- ⚠ Failure to correctly disconnect the hard drive before pulling it up and out can damage the connectors.
- Once the hard drive detaches from the connector, lift the hard drive up and out.

To reassemble your device, follow these instructions in reverse order.