



# Asus ROG GL551J RAM Replacement

Asus ROG GL551J guide on how to remove and replace the RAM

Written By: Jason Nguyen



## INTRODUCTION

Use this guide to replace the RAM on your Asus ROG GL551J. Make sure that any new RAM has a DDR3 connection type to correctly fit into this device.

### TOOLS:

- Mako Driver Kit - 64 Precision Bits (1)

## Step 1 — Battery



- Lay device on a flat surface with battery facing up.

## Step 2



- Locate latch below battery and push right.

## Step 3



- Battery should release upwards. Pull battery out.

## Step 4 — RAM



- Remove the two screws securing the access panel to the laptop.

## Step 5



- Slide access panel out and remove.

## Step 6



- Place thumbs on the locking tabs of both sides of the RAM stick and push outwards to unlock.

## Step 7



- RAM should pop up at about 45 degrees. Pull outwards with fingers on the side of the RAM to remove.

To reassemble your device, follow these instructions in reverse order.