



# Asus ROG GL551J Screen Replacement

This guide will show you how to remove the display from the ASUS ROG GL551J laptop.

Written By: Thien Vu



## INTRODUCTION

Use this guide for instructions on how to remove the display from your ASUS ROG GL551J laptop. Be sure that your laptop is powered off and unplugged before beginning this guide.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Battery



- Lay device on a flat surface with battery facing up.

## Step 2



- Locate latch below battery and push right.

## Step 3




- Battery should release upwards. Pull battery out.

## Step 4 — Screen



- Use a plastic opening tool to remove the plastic hinge covers on either side of the laptop.

## Step 5

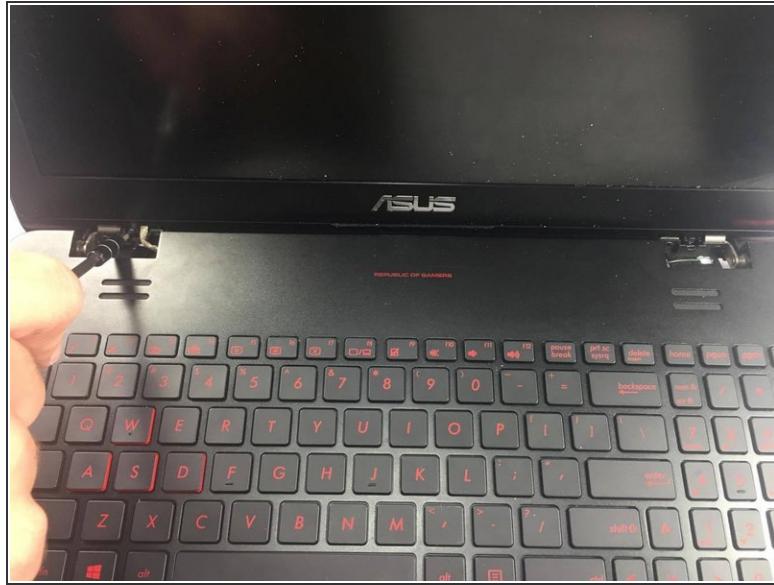

- Remove the screws located on either side of the display.

## Step 6



- Use a plastic opening tool to pop out the bezel from all four sides, then lift it out of the frame.

## Step 7



- Remove the screws at each corner of the display.

## Step 8



- Remove the connector from the display.

To reassemble your device, follow these instructions in reverse order.